



LIGHT CONTROL RHEOSTAT

INSPECTION

1. INSPECT LIGHT CONTROL RHEOSTAT

(a) Remove the light control rheostat with connector still connected.

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
R6-1 (E) - R6-7 (RV)	Light control rheostat position is MIN.	Below 1 Ω
R6-1 (E) - R6-7 (RV)	Light control rheostat position is between MIN. and MAX.	8 to 12 k Ω
R6-1 (E) - R6-7 (RV)	ODO/TRIP switch is OFF → ON	10 k Ω or higher → Below 1 Ω

HINT:

If the value is not as specified, replace the light control rheostat.