

## PROBLEM SYMPTOMS TABLE

### MALFUNCTION SYSTEM:

Symptom	Suspected area	See page
Entire combination meter does not operate.	Combination Meter Circuit	<a href="#">ME-21</a>
Operating light control rheostat does not change light brightness.	Light Control Rheostat Circuit	<a href="#">ME-37</a>
Malfunction in ODO/TRIP switch	ODO/TRIP Switch Circuit	<a href="#">ME-35</a>

### METER GAUGES:

Symptom	Suspected area	See page
Speedometer malfunction	Speedometer	<a href="#">ME-23</a>
Tachometer malfunction	Tachometer	<a href="#">ME-27</a>
Fuel receiver gauge malfunction	Fuel Receiver Gauge	<a href="#">ME-30</a>
Engine coolant temperature malfunction	Engine Coolant Temperature Receiver Gauge	<a href="#">ME-33</a>

### WARNING LIGHTS:

Symptom	Suspected area	See page
Check Engine warning light does not come on.	1. MIL Circuit	<a href="#">ES-361</a>
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	<a href="#">ME-40</a>
Discharge warning light does not come on.	1. LED	<a href="#">ME-15</a>
	2. Wire Harness or Connector	-
	3. ECM	<a href="#">ES-37</a>
	4. Combination Meter Assembly	<a href="#">ME-40</a>
Brake warning light does not come on.	1. Wire Harness or Connector	-
	2. Skid Control ECU	<a href="#">BC-13</a>
	3. Combination Meter Assembly	<a href="#">ME-40</a>
ABS warning light does not come on.	1. Skid Control ECU	<a href="#">BC-13</a>
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	<a href="#">ME-40</a>
SRS warning light does not come on.	1. LED	<a href="#">ME-15</a>
	2. Airbag Sensor Assembly Center	<a href="#">RS-23</a>
	3. Wire Harness or Connector	-
	4. Combination Meter Assembly	<a href="#">ME-40</a>
Open Door warning light does not come on.	1. LED	<a href="#">ME-15</a>
	2. Wire Harness or Connector	-
	3. Front Door Courtesy Switch	<a href="#">DL-27</a>
	4. Body ECU	-
	5. Combination Meter Assembly	<a href="#">ME-40</a>
Fuel Level warning light does not come on.	1. LED	<a href="#">ME-15</a>
	2. Wire Harness or Connector	-
	3. Fuel Sender Gauge Assembly	<a href="#">ME-43</a>
	4. Combination Meter Assembly	<a href="#">ME-40</a>
Low Oil Pressure warning light does not come on.	1. LED	<a href="#">ME-15</a>
	2. Wire Harness or Connector	-
	3. Low Oil Pressure Warning Switch	<a href="#">ME-44</a>
	4. Combination Meter Assembly	<a href="#">ME-40</a>

Symptom	Suspected area	See page
Driver's seat belt warning light does not come on.	1. LED	ME-15
	2. Wire Harness or Connector	-
	3. Body ECU	-
	4. Front Inner Belt Assembly	SB-7
	5. Combination Meter Assembly	ME-40
Passenger's seat belt warning light does not come on.	1. LED	ME-15
	2. Wire Harness or Connector	-
	3. Body ECU	-
	4. Front Inner Belt Assembly	SB-9
	5. Combination Meter Assembly	ME-40
A/T oil temperature warning light does not come on.	1. LED	ME-15
	2. Automatic Transaxle (for 2WD)	AX-38
	3. Automatic Transaxle (for 4WD)	AX-38
	4. Wire Harness or Connector	-
	5. ECM	-
	6. Combination Meter Assembly	ME-40
VSC warning light does not come on.	1. Skid Control ECU	BC-13
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-40

**INDICATOR LIGHTS:**

Symptom	Suspected area	See page
Shift indicator light does not come on.	1. LED	ME-15
	2. Wire Harness or Connector	-
	3. Natural Start Switch Circuit (for 2WD)	AX-21
	4. Neutral Start Switch Circuit (for 4WD)	AX-21
	5. Combination Meter Assembly	ME-40
Turn indicator light does not come on.	1. Wire Harness or Connector	-
	2. Turn Signal and Hazard Warning System	LI-19
	3. Combination Meter Assembly	ME-40
TRC off indicator light does not come on.	1. LED	ME-15
	2. Skid Control ECU	BC-13
	3. Wire Harness or Connector	-
	4. Combination Meter Assembly	ME-40
SLIP indicator light does not come on.	1. LED	ME-15
	2. Wire Harness or Connector	-
	3. Skid Control ECU	BC-13
	4. Combination Meter Assembly	ME-40
ETC SNOW indicator light does not come on.	1. LED	ME-15
	2. Wire Harness or Connector	-
	3. ECM	-
	4. Combination Meter Assembly	ME-40
AFS OFF indicator light does not come on.	1. Wire Harness or Connector	-
	2. Combination Meter Assembly	ME-40
HEAD LEVELING indicator light does not come on.	1. Wire Harness or Connector	-
	2. Combination Meter Assembly	ME-40
CRUISE indicator light does not come on.	1. LED	ME-15
	2. Wire Harness or Connector	-
	3. ECM	-
	4. Combination Meter Assembly	ME-40

ME

Symptom	Suspected area	See page
"NORM" "READY" indicator light does not come on.	1. LED	<a href="#">ME-15</a>
	2. Cruise Control System	<a href="#">CC-10</a>
	3. Wire Harness or Connector	-
	4. ECM	-
	5. Combination Meter Assembly	<a href="#">ME-40</a>
High Beam indicator light does not come on.	1. Wire Harness or Connector	-
	2. Headlight Dimmer Switch	<a href="#">LI-19</a>
	3. Combination Meter Assembly	<a href="#">ME-40</a>
Tire pressure indicator light does not come on	1. Tire And Wheel System	-
	2. Wire Harness or Connector	-
	3. ECM	-
	4. Combination Meter Assembly	<a href="#">ME-40</a>
Washer level indicator light does not come on.	1. Wire Harness or Connector	-
	2. ECM	-
	3. Combination Meter Assembly	<a href="#">ME-40</a>
	4. Washer Level Sensor	-
AIR SUS (LO, N, OFF) indicator light does not come on.	1. Suspension System	<a href="#">SP-1</a>
	2. Wire Harness or Connector	-
	3. AIR SUS ECU	-
	4. Combination Meter Assembly	<a href="#">ME-40</a>
AIR SUS LODING DOME indicator light does not come on.	1. Suspension System	<a href="#">SP-1</a>
	2. Wire Harness or Connector	-
	3. AIR SUS ECU	-
	4. Combination Meter Assembly	<a href="#">ME-40</a>

ME

**ACCESSORY METER:**

Symptom	Suspected area	See page
Indicated "Distance to empty" is in excessive error (Other meters operate normally).	Combination Meter Assembly	-
Indicated average fuel consumption and instantaneous fuel consumption are in excessive error (Other meters operate normally).	Combination Meter Assembly	-
Incomplete display (Does not indicate numbers, some digital segments are missing).	Center integration Switch (w/o Navigation)	-
Indicated direction is in excessive error.	Accessory Meter (w/ Navigation)	-