


## Power Source Circuit


### DESCRIPTION

This is the power source circuit for the outer mirror control ECU.

### WIRING DIAGRAM

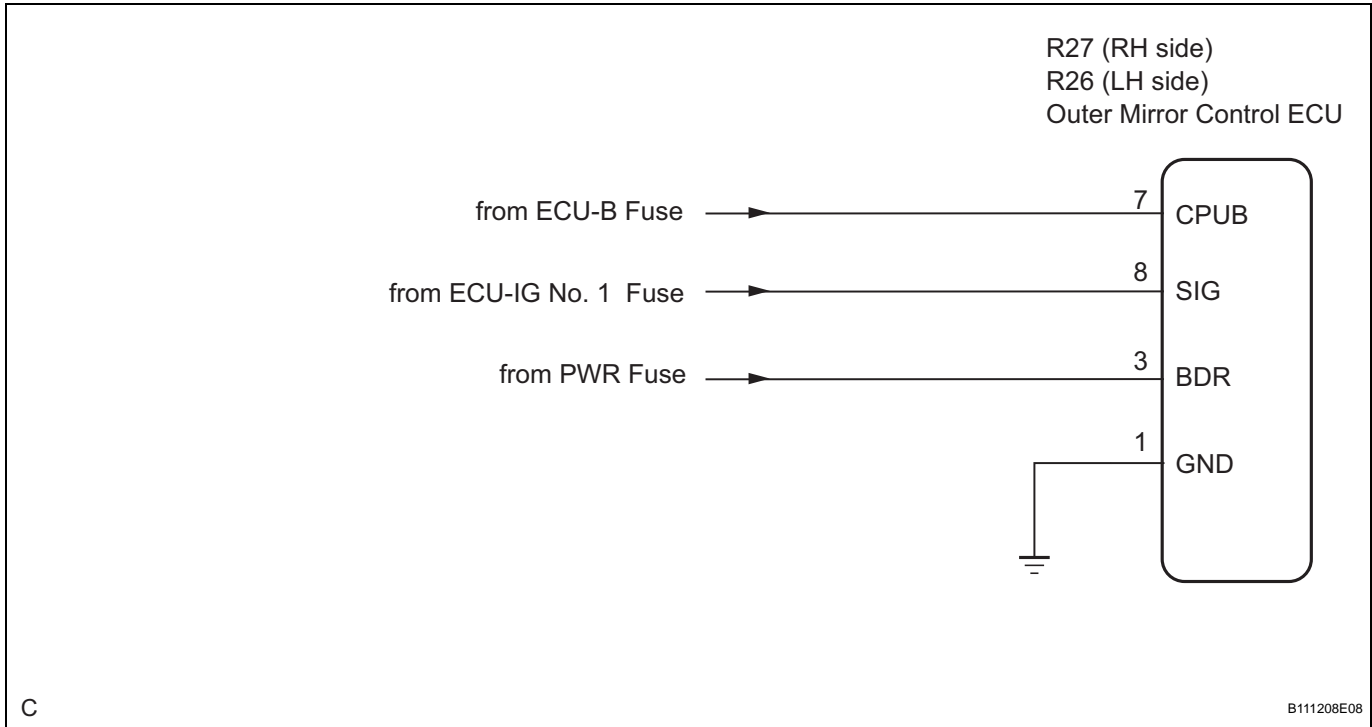

## 1 INSPECT OUTER MIRROR CONTROL ECU (POWER SOURCE)

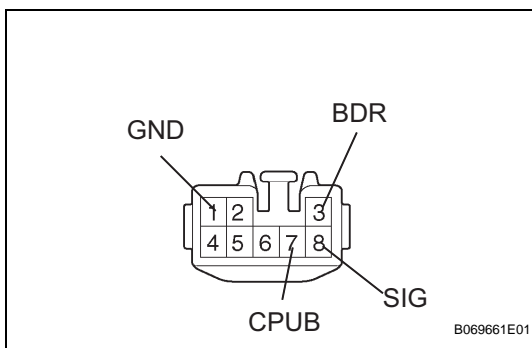

- (a) Disconnect the R26 (R27) connector.
- (b) Measure the voltage and resistance according to the value(s) in the table below.

#### Outer mirror control ECU LH: Standard voltage

Tester Connection	Condition	Specified Condition
R26-3 (BDR) - Body ground	Always	10 to 14 V
R26-7 (CPUB) - Body ground	Always	10 to 14 V
R26-8 (SIG) - Body ground	Ignition switch ON	10 to 14 V

#### Standard resistance

Tester Connection	Condition	Specified Condition
R26-1 (GND) - Body ground	Always	Below 1 Ω

#### Outer mirror control ECU RH: Standard voltage

Tester Connection	Condition	Specified Condition
R27-3 (BDR) - Body ground	Always	10 to 14 V
R27-7 (CPUB) - Body ground	Always	10 to 14 V
R27-8 (SIG) - Body ground	Ignition switch ON	10 to 14 V

**Standard resistance**

Tester Connection	Condition	Specified Condition
R27-1 (GND) - Body ground	Always	Below 1 $\Omega$

**NG****REPAIR OR REPLACE WIRE HARNESS****OK****REPLACE OUTER MIRROR CONTROL ECU**