

OUTER MIRROR SWITCH


INSPECTION

1. INSPECT OUTER MIRROR SWITCH (W/ MEMORY SEAT)

- (a) Inspect the outer mirror switch.
- (b) Measure the resistance according to the value(s) in the table below when the switch is operated.

Standard resistance

Tester Connection	Switch Position	Specified Condition
2 - 3	OFF	10 kΩ or higher
	UP	225 to 275 Ω
	DOWN	437 to 503 Ω
	LEFT	744 to 856 Ω
	RIGHT	437 to 503 Ω
1 - 2	L	90 to 110 Ω
	R	10 Ω or less

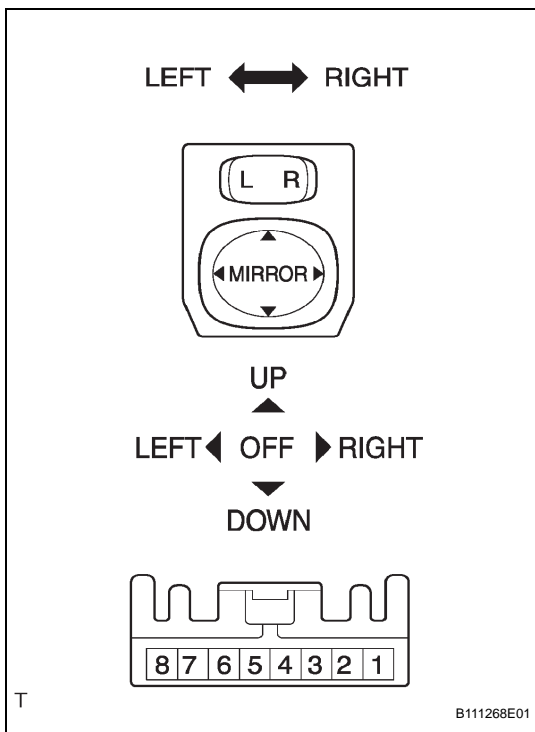

2. INSPECT OUTER MIRROR SWITCH (W/O MEMORY SEAT)

- (a) Inspect the outer mirror switch.
- (b) Measure the resistance according to the value(s) in the table below when the switch is operated.

Standard resistance:

Select "L" on the left/right adjustment switch

Tester Connection	Switch Position	Specified Condition
4 - 8	UP	Below 1 Ω
6 - 7		
4 - 7	DOWN	
6 - 8		
5 - 8	LEFT	
6 - 7		
5 - 7	RIGHT	
6 - 8		

Select "R" on the left/right adjustment switch

Tester Connection	Switch Position	Specified Condition
3 - 8	UP	Below 1 Ω
6 - 7		
3 - 7	DOWN	
6 - 8		
2 - 8	LEFT	
6 - 7		
2 - 7	RIGHT	
6 - 8		

