

FAIL-SAFE CHART

If the television camera ECU detects a malfunction, the fail safe functions shown in the table below are activated.

| Malfunction parts | Detecting condition | Function |
|----------------------------|--|---|
| Television camera assembly | Transmission of television camera malfunction signal | Stops signal reception and displays a dark screen |
| Television camera ECU | Malfunction of television camera ECU unit | Stops system operation |

DIAGNOSTIC TROUBLE CODE CHART

HINT:

DTC is displayed on the multi-display.

TELEVISION CAMERA ECU (physical address: 280)

| DTC No. | Detection Item | Condition | See page |
|---------|----------------------|---|-----------------------|
| 5C-40 | Camera Picture Error | Synchronous signal from the camera cannot be transmitted. | PM-19 |