


Television Camera ECU Power Source Circuit

DESCRIPTION


This circuit is the power source circuit to operate the television camera ECU.

WIRING DIAGRAM

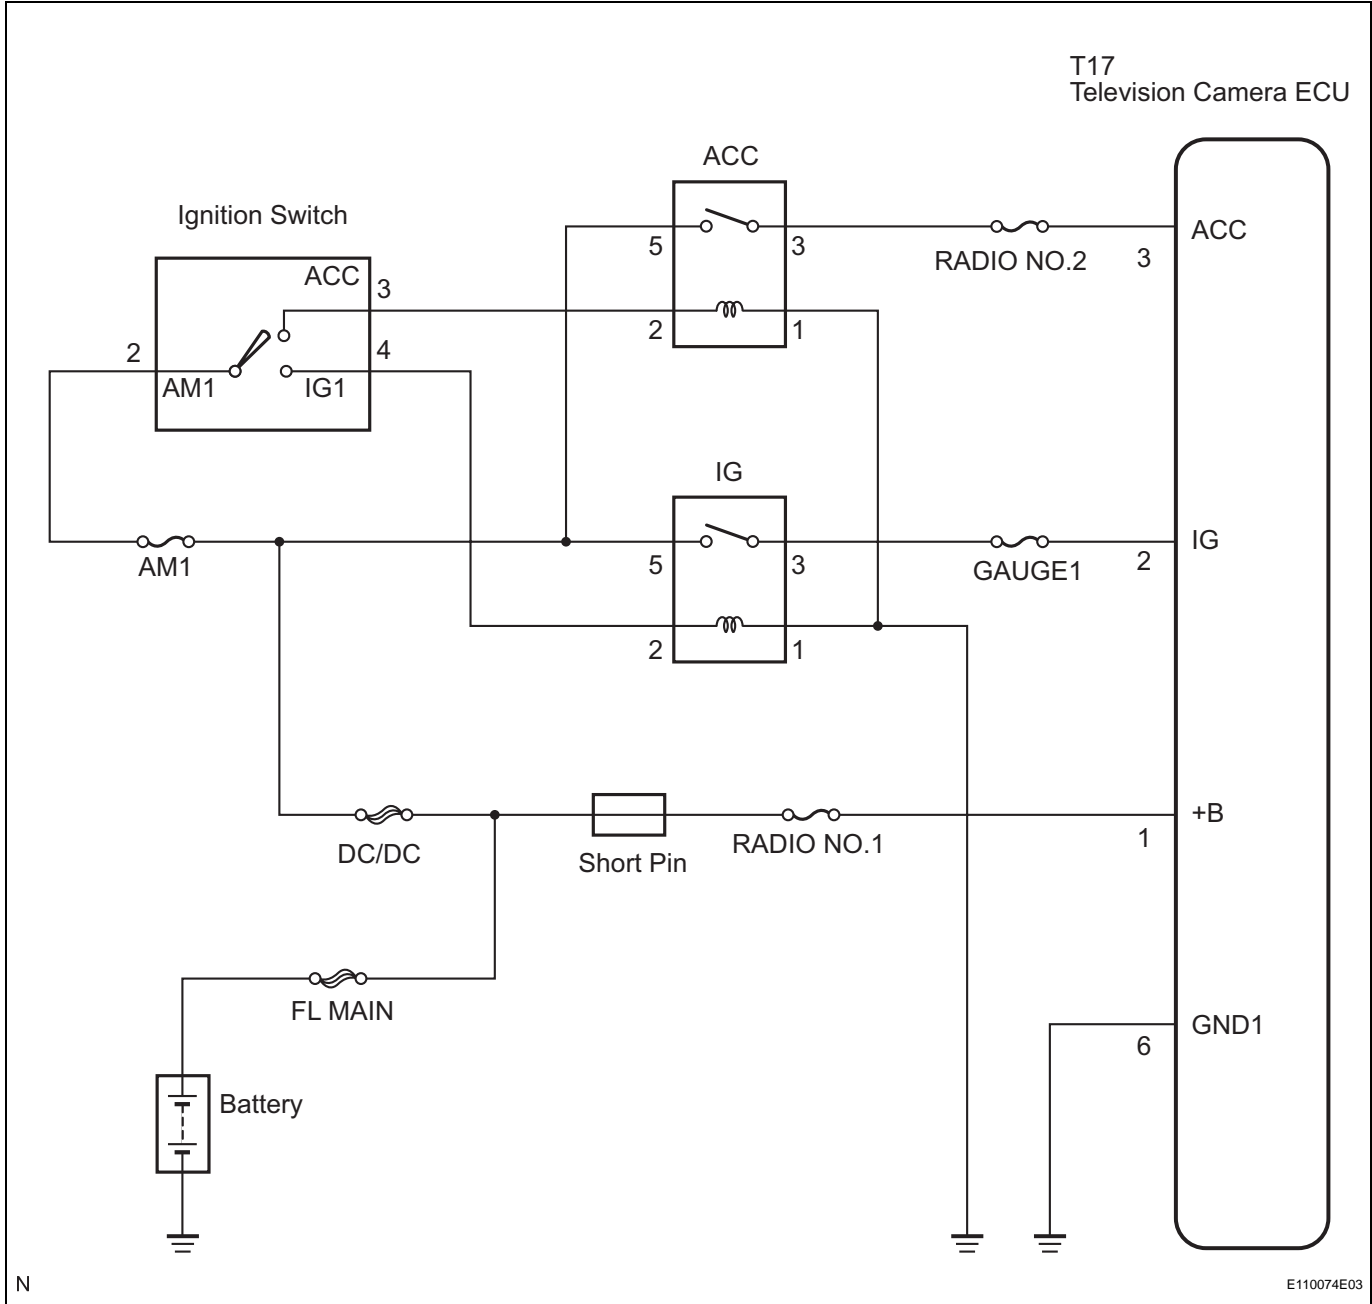

PM

1 CHECK HARNESS AND CONNECTOR (BATTERY, BODY GROUND AND TELEVISION CAMERA ECU)

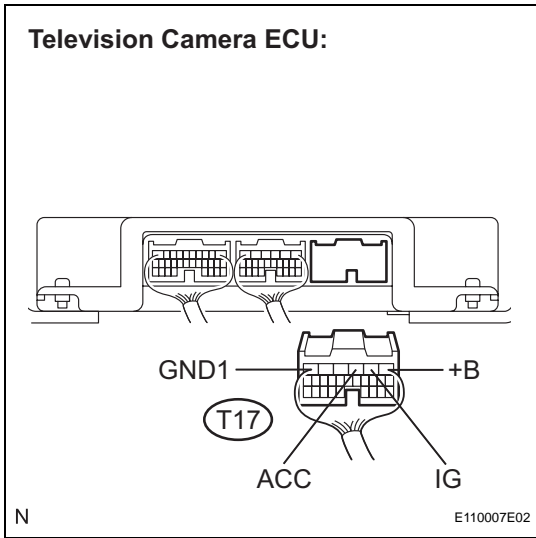

- (a) Disconnect the T17 connector from the television camera ECU.
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection (Terminal No.)	Condition	Specified condition
GND1 (T17-6) - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the value(s) in the table below.

Standard voltage

Tester connection (Terminal No.)	Condition	Specified condition
+B (T17-1) - GND1 (T17-6)	Always	10 to 16 V
IG (T17-2) - GND1 (T17-6)	IG SW ON	10 to 16 V
ACC (T17-3) - GND1 (T17-6)	IG SW ACC	10 to 16 V

NG REPAIR HARNESS OR CONNECTOR

OK

RETURN TO THE ORIGINAL INSPECTION FLOW BECAUSE THE CHECK RESULT IS NORMAL