


TELEVISION CAMERA ECU

COMPONENTS

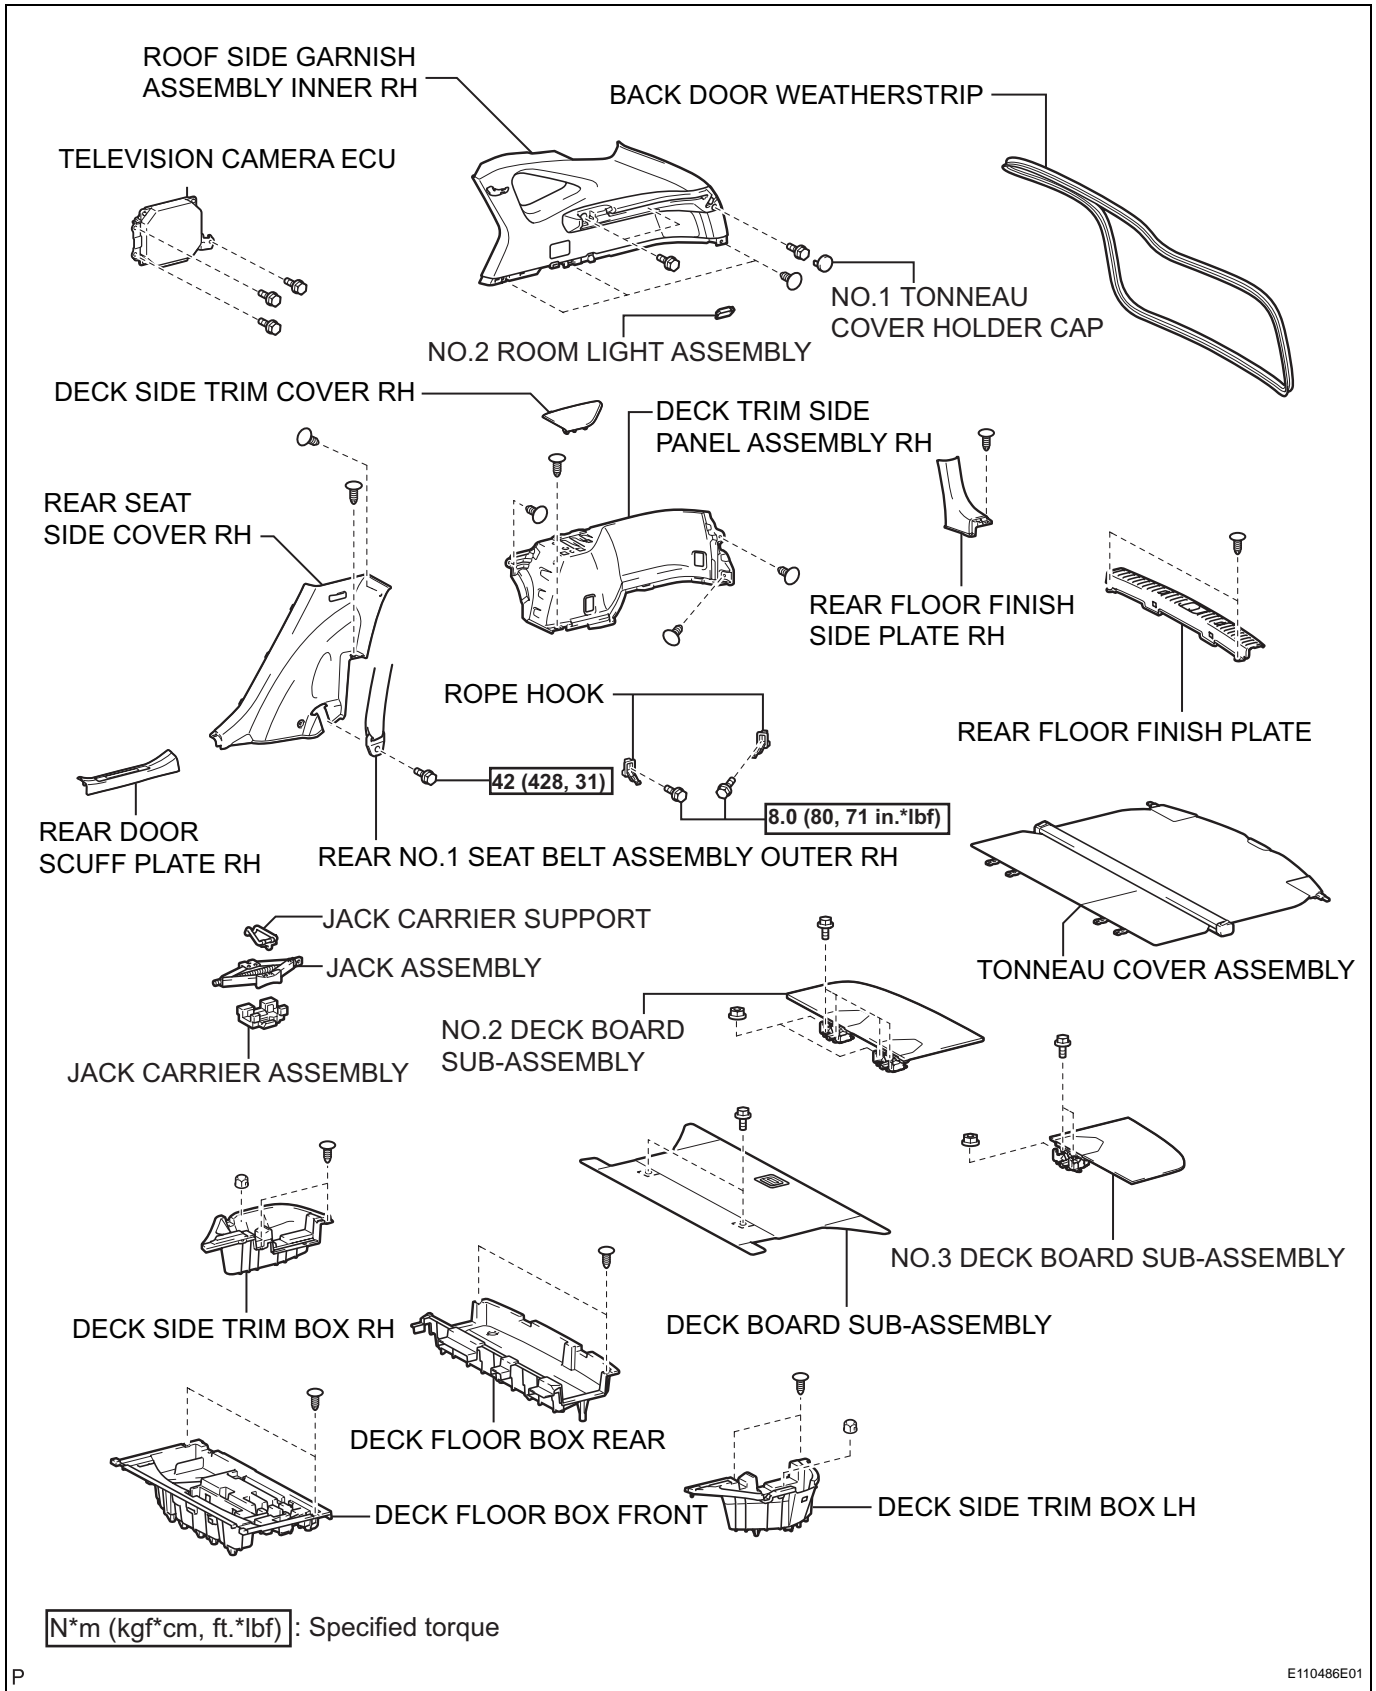

PM

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
(See page [RS-1](#))
2. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-6](#))
3. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-7](#))
4. REMOVE TONNEAU COVER ASSEMBLY
5. REMOVE DECK FLOOR BOX FRONT (See page [IR-8](#))
6. REMOVE DECK FLOOR BOX REAR (See page [IR-8](#))
7. REMOVE NO.2 DECK BOARD SUB-ASSEMBLY (See page [IR-8](#))
8. REMOVE NO.3 DECK BOARD SUB-ASSEMBLY (See page [IR-8](#))
9. REMOVE BACK DOOR WEATHERSTRIP
10. REMOVE JACK CARRIER SUPPORT
11. REMOVE JACK ASSEMBLY
12. REMOVE JACK CARRIER ASSEMBLY
13. REMOVE DECK SIDE TRIM BOX LH (See page [IR-8](#))
14. REMOVE DECK SIDE TRIM BOX RH
15. REMOVE REAR FLOOR FINISH PLATE (See page [IR-8](#))
16. REMOVE REAR FLOOR FINISH SIDE PLATE RH
17. REMOVE DECK SIDE TRIM COVER RH
18. SEPARATE REAR NO.1 SEAT BELT ASSEMBLY OUTER RH (See page [SB-33](#))
19. REMOVE REAR SEAT SIDE COVER RH (See page [IR-9](#))
20. REMOVE ROPE HOOK (See page [IR-9](#))
21. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (See page [IR-9](#))
22. REMOVE NO.2 ROOM LIGHT ASSEMBLY (See page [IR-9](#))
23. REMOVE NO.1 TONNEAU COVER HOLDER CAP
24. ROOF SIDE GARNISH ASSEMBLY INNER RH (See page [IR-9](#))