



25. REMOVE TELEVISION CAMERA ECU

- (a) Disconnect the 3 connectors.
- (b) Remove the 3 bolts and the television camera ECU.

INSTALLATION

- 1. INSTALL TELEVISION CAMERA ECU
 - (a) Install the television camera with the 3 bolts.
 - (b) Connect the 3 connectors.
- 2. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER RH
- 3. INSTALL NO.1 TONNEAU COVER HOLDER CAP
- 4. INSTALL NO.2 ROOM LIGHT ASSEMBLY
- 5. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH
- 6. INSTALL ROPE HOOK
- 7. INSTALL REAR SEAT SIDE COVER RH
- 8. INSTALL REAR NO.1 SEAT BELT ASSEMBLY OUTER RH (See page SB-33)
- 9. INSTALL DECK SIDE TRIM COVER RH
- 10. INSTALL REAR FLOOR FINISH SIDE PLATE RH
- 11. INSTALL REAR FLOOR FINISH PLATE
- 12. INSTALL DECK SIDE TRIM BOX LH
- 13. INSTALL DECK SIDE TRIM BOX RH
- 14. INSTALL JACK CARRIER ASSEMBLY
- 15. INSTALL JACK ASSEMBLY
- 16. INSTALL JACK CARRIER SUPPORT
- 17. INSTALL BACK DOOR WEATHERSTRIP
- 18. INSTALL NO.3 DECK BOARD SUB-ASSEMBLY
- 19. INSTALL NO.2 DECK BOARD SUB-ASSEMBLY
- 20. INSTALL DECK FLOOR BOX REAR
- 21. INSTALL DECK FLOOR BOX FRONT
- 22. INSTALL TONNEAU COVER ASSEMBLY
- 23. INSTALL DECK BOARD SUB-ASSEMBLY
- 24. INSTALL REAR DOOR SCUFF PLATE RH
- 25. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL



26. PERFORM INITIALIZATION NOTICE:

Some systems need initialization when disconnecting the cable from negative battery terminal. (See page PM-1)

