

PARKING BRAKE SYSTEM

PRECAUTION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

PB

System Name	See procedure
Lighting System (Adaptive Front-Lighting System)	LI-17
Power Window Control System	WS-12
Power Back Door System	ED-33
Sliding Roof System	RF-4 and RF-22

PROBLEM SYMPTOMS TABLE

Use the table below to help find the cause of the problem. The numbers indicate the priority of the likely possible cause of the problem. Check each part in order. If necessary, replace these parts.

PB PARKING BRAKE SYSTEM

Symptom	Suspected area	See page
Brake drag	1. Parking brake pedal travel (Out of adjustment)	PB-1
	2. Parking brake pedal	PB-5
	3. Parking brake wire (Sticking)	PB-5
	4. Parking brake shoe clearance (Out of adjustment)	PB-20
	5. Parking brake shoe lining (Cracked or distorted)	PB-20
	6. Tension or return spring (Damaged)	PB-20