

PB

## INSTALLATION

### 1. INSTALL PARKING PEDAL PAD


- Install the parking pedal pad.

### 2. INSTALL PARKING BRAKE SWITCH ASSEMBLY

- Install the parking brake switch assembly with the screw.

### 3. INSTALL PARKING BRAKE CABLE ASSEMBLY NO.1


- Install the parking brake cable assembly No.1 with the clip.
- Temporarily install the parking brake wire adjusting nut No.1 and lock nut.

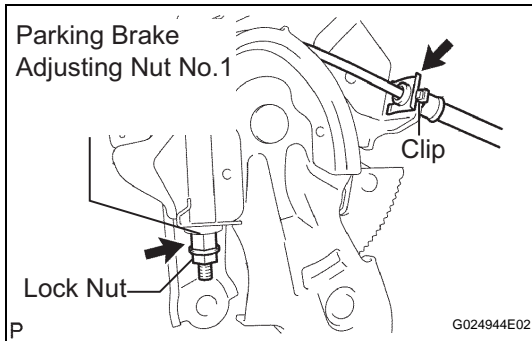

- Bend the claw.

**NOTICE:**

**Bend the claw fully.**

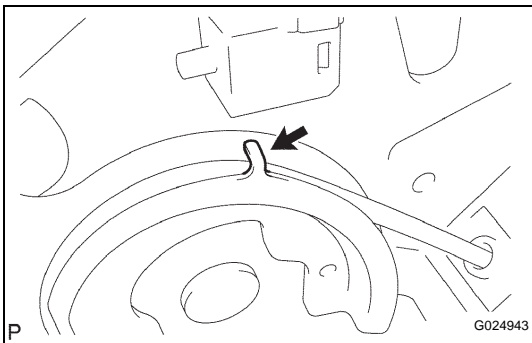


### 4. INSTALL PARKING BRAKE CONTROL PEDAL ASSEMBLY


- Install the parking brake control pedal assembly with the 3 nuts.

**Torque: 39 N\*m (400 kgf\*cm, 29 ft.\*lbf)**

- Connect the parking brake switch connector.
- Connect the instrument panel junction block assembly w/bracket with the 3 nuts.
- Attach the parking brake cable assembly No.1 to the parking brake equalizer and slide boot stopper of No.1 cable should be inserted into groove of T-Metal fitting.

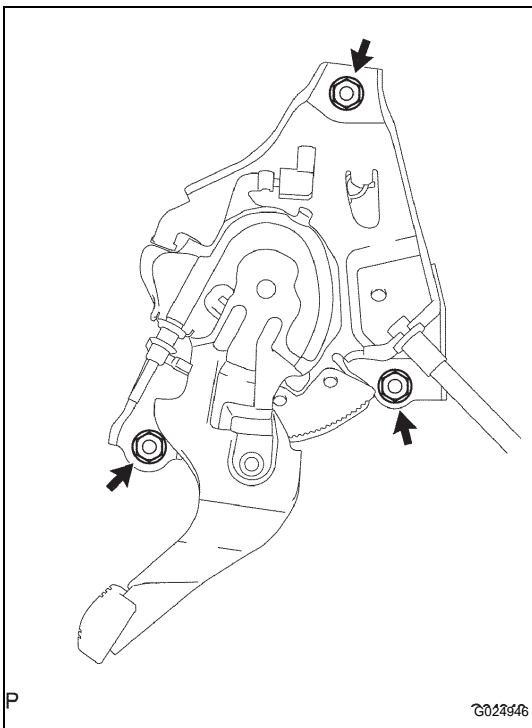

- (e) Install the parking brake cable assembly No.1 with the 2 bolts and 2 nuts.

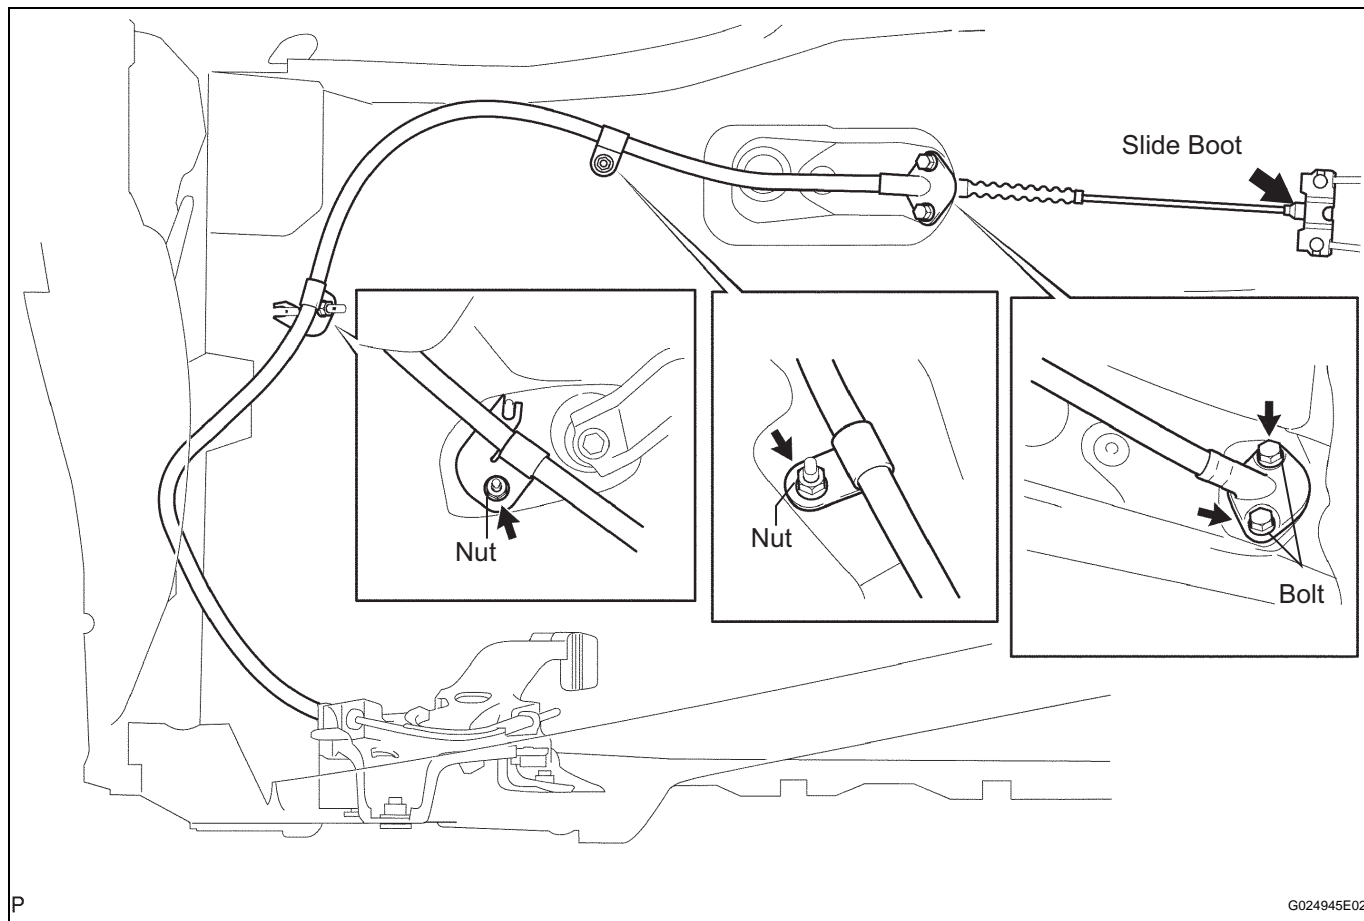

**Torque: Bolt**

8.5 N\*m (87 kgf\*cm, 75 in.\*lbf)

**Nut**

6.0 N\*m (61 kgf\*cm, 53 in.\*lbf)

**5. INSTALL FR FLOOR FOOTREST**

- (a) Install the front floor footrest on the floor.

**6. INSTALL FRONT LH SEAT ASSEMBLY**

HINT:

See page [SE-45](#)

**7. REMOVE REAR WHEEL**

**8. ADJUST PARKING BRAKE SHOE CLEARANCE (See page [PB-26](#))**

**9. INSTALL REAR WHEEL**

Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)

**10. INSPECT PARKING BRAKE PEDAL TRAVEL (See page [PB-1](#))**

**11. ADJUST PARKING BRAKE PEDAL TRAVEL (See page [PB-1](#))**

**12. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY**

HINT:

See page [RS-403](#)

**13. CHECK SEAT HEATER OPERATION**

**14. INSPECT SRS WARNING LIGHT**

HINT:

See page [RS-25](#)