


## REMOVAL

### HINT:

Replace the RH side using the same procedures as the LH side.

1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH
  - (a) Remove the 2 bolts and separate the rear disc brake caliper assembly LH.  
HINT:  
Do not disconnect the flexible hose from the rear brake caliper assembly LH.
3. REMOVE REAR DISC (See page [PB-20](#))
4. REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (See page [PB-20](#))
5. REMOVE PARKING BRAKE SHOE STRUT SET LH (See page [PB-20](#))
6. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO.1 (See page [PB-21](#))
7. REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET LH (See page [PB-21](#))
8. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO.2 (See page [PB-21](#))
9. SEPARATE SPEED SENSOR REAR LH (for 4WD) (See page [AH-28](#))
10. REMOVE REAR AXLE SHAFT LH NUT (for 4WD) (See page [AH-28](#))
11. REMOVE REAR AXLE HUB & BEARING ASSEMBLY LH (for 4WD) (See page [AH-28](#))

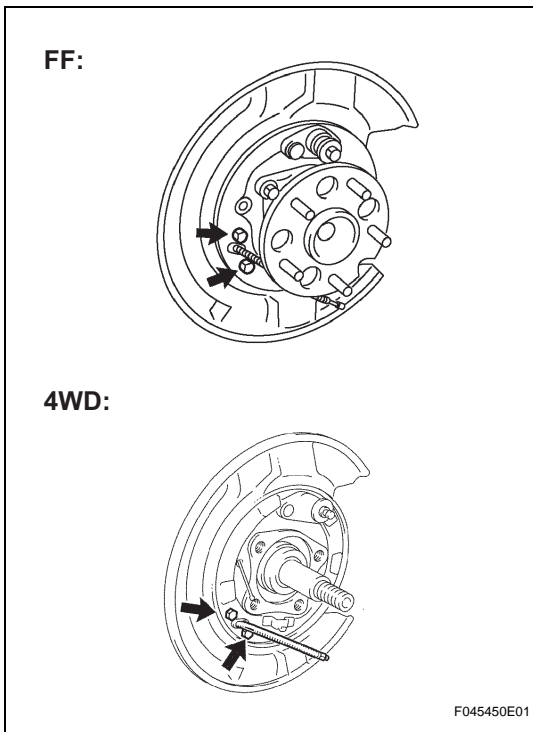

**12. REMOVE PARKING BRAKE CABLE ASSEMBLY NO.3**

- (a) Remove the 2 bolts and separate the parking brake cable assembly No.3 from the backing plate.
- (b) Remove the 4 nuts and 2 bolts and separate the parking brake cable assembly No.3 from the body.
- (c) Separate the parking brake cable assembly No.3 from the equalizer and remove the parking brake cable assembly No.3.
- (d) Remove the parking brake cable support bracket No.1 from the parking brake cable assembly No.3.

PB

