
PB

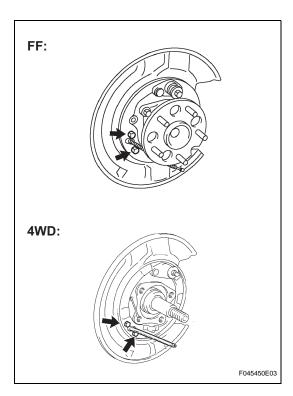

INSTALLATION

- 1. INSTALL PARKING BRAKE CABLE ASSEMBLY NO.3
 - (a) Attach the parking brake cable support bracket No.1 to the parking brake cable assembly No.3.
 - (b) Connect the parking brake cable assembly No.3 to the equalizer and slide boot stopper of No.1 cable should be inserted into groove of T-Metal fitting.
 - (c) Install the 4 nuts, 2 bolts and parking brake cable assembly No.3 to the body.

Torque: Bolt A 8.5 N*m (87 kgf*cm, 75 in.*lbf) Bolt B 39 N*m (400 kgf*cm, 29 ft.*lbf)

Nut

6.0 N*m (61 kgf*cm, 53 in.*lbf)

(d) Connect the parking brake cable assembly No.3 to the backing plate with the 2 bolts.

Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)

- 2. APPLY HIGH TEMPERATURE GREASE (See page PB-23)
- 3. INSTALL REAR AXLE HUB & BEARING ASSEMBLY LH (for 4WD) (See page AH-31)
- 4. INSTALL REAR AXLE SHAFT LH NUT (for 4WD) (See page AH-32)
- 5. INSTALL SPEED SENSOR REAR LH (See page AH-32)
- 6. INSTALL PARKING BRAKE SHOE ASSEMBLY LH NO.2 (See page PB-24)
- 7. INSTALL PARKING BRAKE SHOE ADJUSTING SCREW SET LH (See page PB-24)
- 8. INSTALL PARKING BRAKE SHOE ASSEMBLY LH NO.1 (See page PB-24)
- 9. INSTALL PARKING BRAKE SHOE STRUT SET LH (See page PB-25)
- 10. INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (See page PB-25)
- 11. CHECK PARKING BRAKE INSTALLATION (See page PB-25)
- 12. INSPECT BEARING BACKLASH (for 4WD) (See page AH-18)
- 13. INSPECT AXLE HUB DEVIATION (for 4WD) (See page AH-18)
- 14. INSTALL REAR DISC
 - (a) Aligning the matchmarks, install the rear disc.
- 15. ADJUST PARKING BRAKE SHOE CLEARANCE (See page PB-26)

- 16. CONNECT REAR DISC BRAKE CALIPER ASSEMBLY LH
 - (a) Install the rear disc brake caliper assembly LH with the 2 bolts.

Torque: 78 N*m (800 kgf*cm, 58 ft.*lbf)

- 17. INSTALL REAR WHEEL
 Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
- 18. INSPECT PARKING BRAKE PEDAL TRAVEL (See page PB-1)
- 19. ADJUST PARKING BRAKE PEDAL TRAVEL (See page PB-1)
- 20. CHECK ABS SPEED SENSOR SIGNAL (for 4WD)
 HINT:

See page BC-16

