


## REMOVAL


1. **DISCONNECT BATTERY NEGATIVE TERMINAL**  
HINT:  
See page [RS-1](#)
2. **REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-6](#))**
3. **REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH**
4. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER (See page [IP-12](#))**
5. **REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (See page [RS-403](#))**
6. **REMOVE SEAT TRACK BRACKET COVER INNER FRONT LH (See page [SE-38](#))**
7. **REMOVE SEAT TRACK BRACKET COVER OUTER FRONT (See page [SE-38](#))**
8. **REMOVE SEAT TRACK COVER RH (See page [SE-38](#))**
9. **REMOVE SEAT TRACK BRACKET COVER INNER LH**
10. **REMOVE FRONT LH SEAT ASSEMBLY (See page [SE-38](#))**
11. **REMOVE FR FLOOR FOOTREST**
  - (a) Remove the front floor footrest from the floor.

**12. REMOVE PARKING BRAKE CONTROL PEDAL ASSEMBLY**


- (a) Remove the 2 bolts and nuts, and separate the parking brake cable assembly No.1 from the floor.

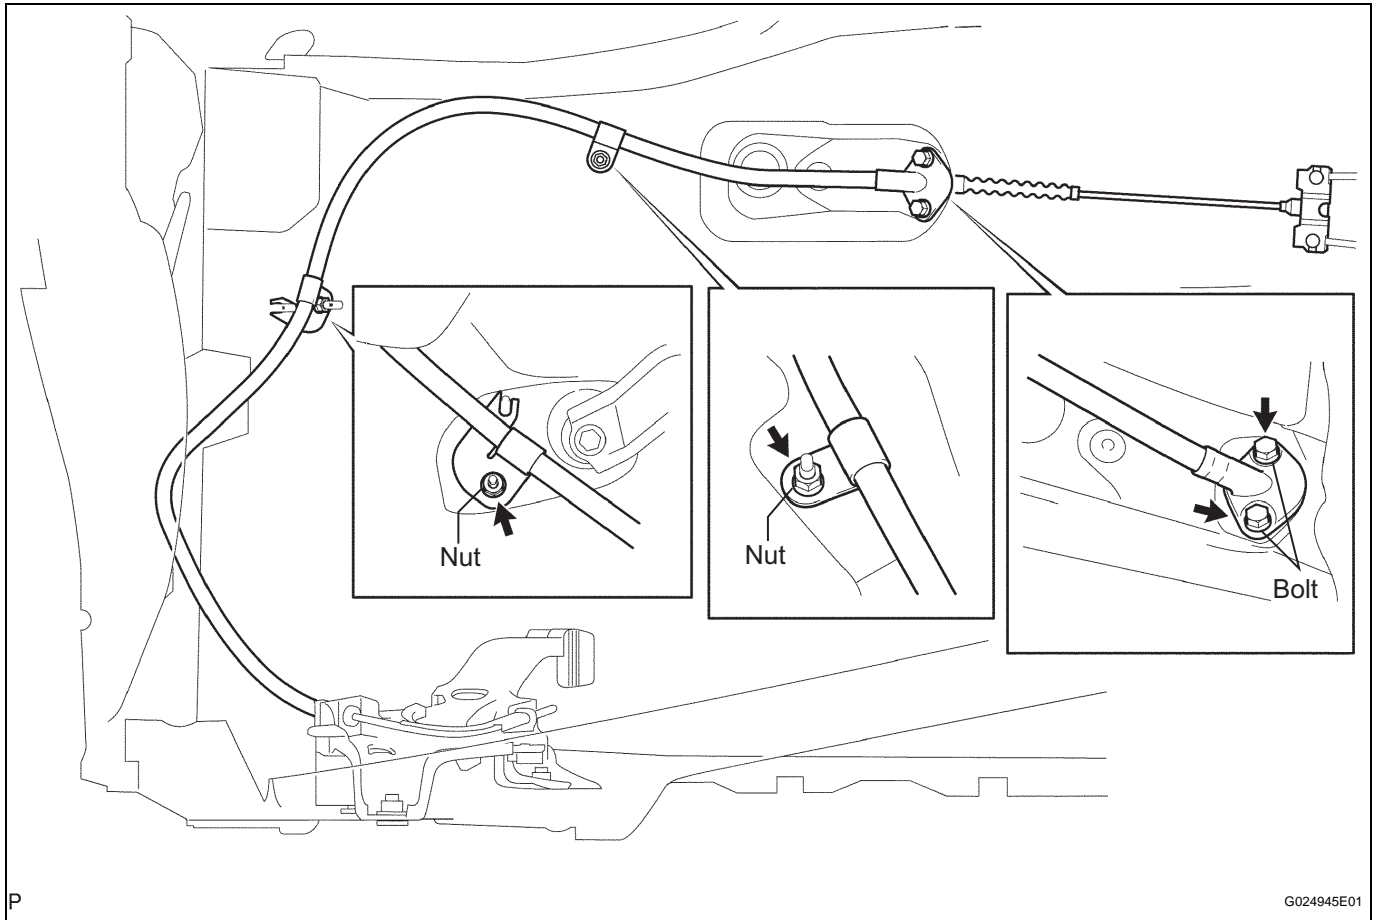

- (b) Remove the parking brake cable assembly No.1 from the parking brake equalizer.
- (c) Disconnect the parking brake switch connector.
- (d) Remove the 3 nuts and separate the instrument panel junction block assembly w/bracket from the body.

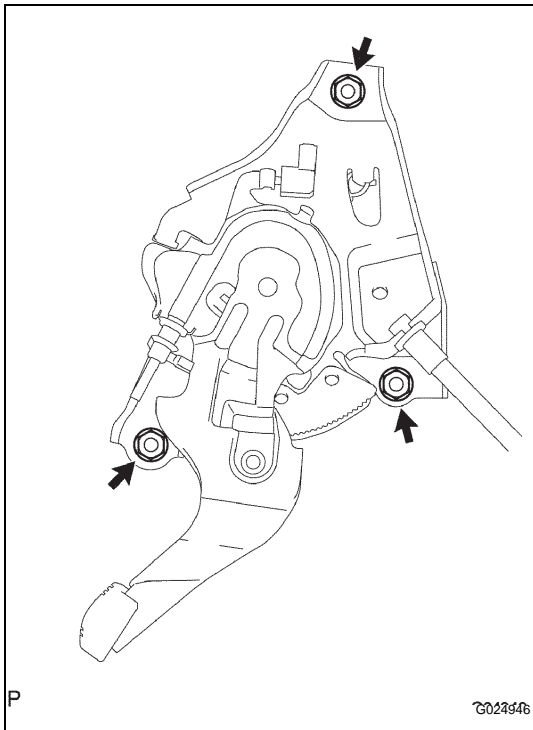

- (e) Remove the 3 nuts and parking brake control pedal assembly.

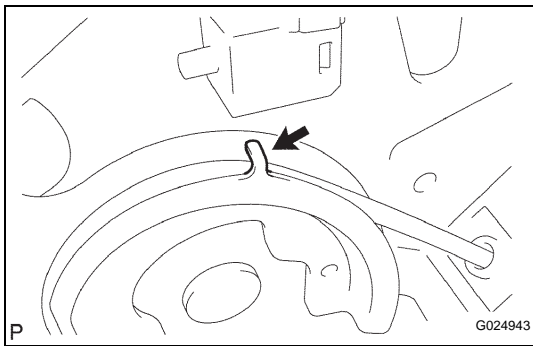


**13. REMOVE PARKING BRAKE CABLE ASSEMBLY NO.1**

- (a) Using a screwdriver, disengage the claw.

**NOTICE:**

**Be careful not to damage the parking brake cable assembly No.1.**

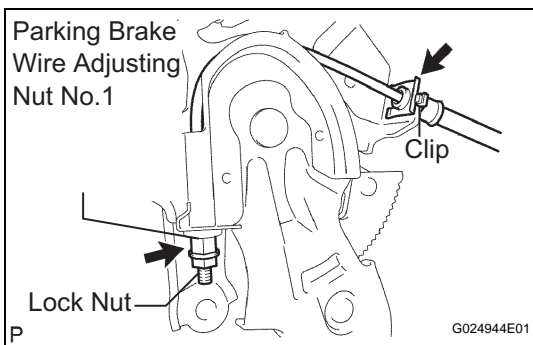


- (b) Remove the clip from the parking brake pedal assembly.
- (c) Remove the lock nut and parking brake wire adjusting nut No.1.


**DISASSEMBLY**

**1. REMOVE PARKING PEDAL PAD**

- (a) Disengage the claw and remove the parking pedal pad from the parking brake pedal.

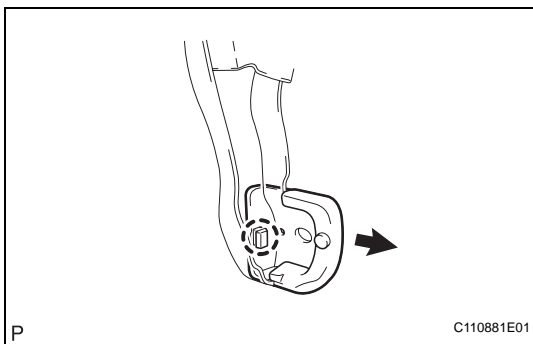


PB

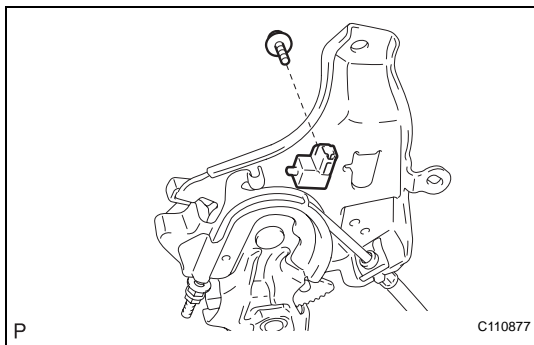


## 2. REMOVE PARKING BRAKE SWITCH ASSEMBLY

- (a) Remove the screw and parking brake switch assembly from the parking brake pedal.

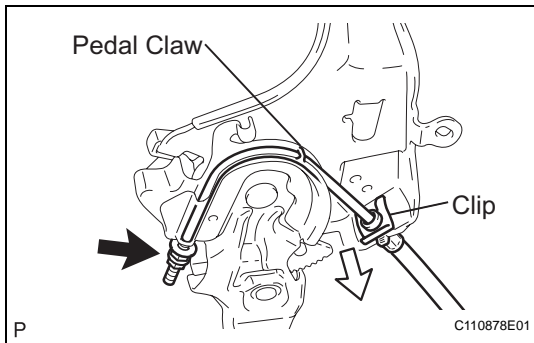

## 3. REMOVE PARKING BRAKE NO.1 CABLE ASSEMBLY

- (a) Pull up the parking brake pedal claw.
- (b) Remove the lock nut and wire adjusting No.1 nut of the parking brake No.1 cable assembly from the parking brake pedal.
- (c) Remove the clip and parking brake No.1 cable assembly from the parking brake pedal.

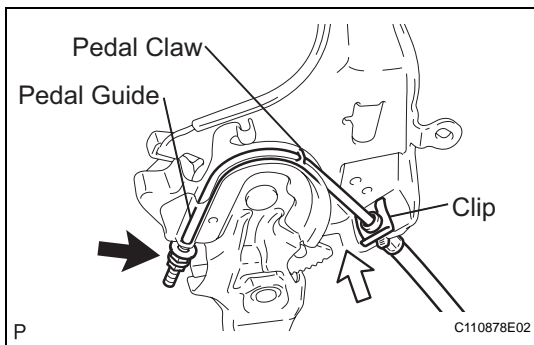

## REASSEMBLY

### 1. INSTALL PARKING BRAKE NO.1 CABLE ASSEMBLY

- (a) Pass the parking brake No.1 cable assembly through the parking brake pedal and hold the cable with the clip.
- (b) Pass the parking brake cable through the pedal guide. Temporarily tighten the wire adjusting No.1 nut and lock nut.


#### HINT:


Fully tighten the wire adjusting No.1 nut and lock nut when adjusting the parking brake pedal free play.

- (c) Fully bend the parking brake pedal claw.

### 2. INSTALL PARKING BRAKE SWITCH ASSEMBLY

- (a) Install the parking brake switch assembly with the screw.

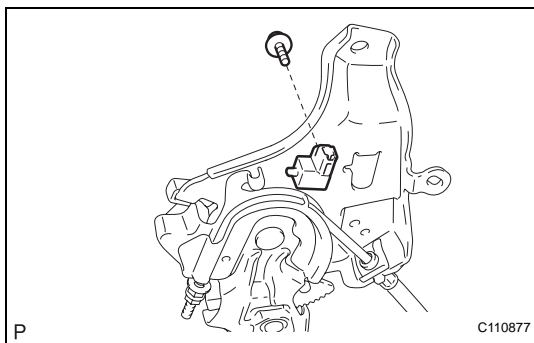

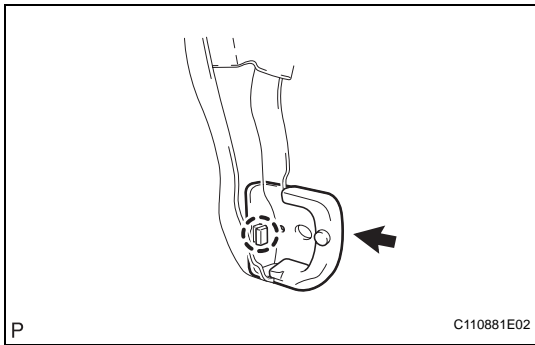**3. INSTALL PARKING PEDAL PAD**

- (a) Engage the claw and install the parking pedal pad on the parking brake pedal.