

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below, with suspected areas listed in numerical order, to determine the cause of the problem. Inspect and repair or replace parts as necessary according to the steps on the following pages.

1. SEAT HEATER SYSTEM

Symptom	Suspected area	See page
Seat heaters do not operate.	1. SEAT HTR fuse	-
	2. Seat heater switch	SE-82
	3. Front seat cushion heater (LH side)	SE-85
	4. Front seat cushion heater (RH side)	SE-85
	5. Front seatback heater (LH side)	SE-84
	6. Front seatback heater (RH side)	SE-84
	7. Seat heater control (LH side)	SE-86
	8. Seat heater control (RH side)	SE-86
	9. Wire harness or connector	-
Temperature of seat heater cannot be adjusted.	1. Seat heater switch	SE-82