


REASSEMBLY

1. **INSTALL FRONT SEAT ADJUSTER SUB-ASSEMBLY RH (for Front Passenger Seat)**
2. **INSTALL FRONT SEAT TRACK ASSEMBLY OUTER (for Driver Seat)**
3. **INSTALL POWER SEAT MOTOR ASSEMBLY (for Driver Seat)**
4. **INSTALL SEPARATE TYPE FRONT SEAT CUSHION SPRING ASSEMBLY (for Driver Seat)**
 - (a) Using a "torx" socket wrench (T40), install the separate type front seat cushion spring assembly with the 4 "torx" bolts.
 - (b) Install the front seat cushion frame sub-assembly with the 4 bolts.
Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)
5. **INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY**
 - (a) Install the front seat side airbag assembly with the 2 nuts.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
 - (b) Install the clamps.
6. **INSTALL FRONT SEAT WIRE**
7. **INSTALL OCCUPANT CLASSIFICATION ECU (for Front Passenger Seat) (See page [RS-457](#))**
8. **INSTALL SEAT POSITION SENSOR (for Driver Seat) (See page [RS-454](#))**
9. **INSTALL SEAT SLIDE POSITION SENSOR PROTECTOR (for Driver Seat)**
10. **INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY (w/ Seat Heater System)**
11. **INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY**
12. **INSTALL FRONT SEAT CUSHION SHIELD LOWER RH**
13. **INSTALL FRONT SEAT CUSHION SHIELD LOWER LH**
14. **INSTALL RECLINING ADJUSTER INSIDE COVER RH**
15. **INSTALL RECLINING ADJUSTER INSIDE COVER LH**
16. **INSTALL RH SEAT RECLINING ADJUSTER INSIDE COVER**
17. **INSTALL LH SEAT RECLINING ADJUSTER INSIDE COVER**

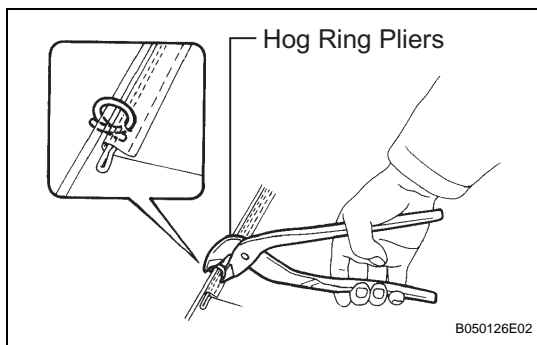

18. INSTALL SEPARATE TYPE FRONT SEATBACK COVER

- (a) Using hog ring pliers, install the separate type front seatback cover to the separate type front seatback pad with new hog rings.

NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, take care to minimize wrinkles as much as possible.

19. INSTALL SEPARATE TYPE FRONT SEATBACK COVER WITH PAD

- (a) Install the separate type front seatback cover with pad to the separate type front seat cushion spring assembly.


- (b) Install the separate type front seatback cover bracket with the nut.

Torque: 5.6 N*m (57 kgf*cm, 50 in.*lbf)

NOTICE:

- For vehicles with side airbags, the side airbags may not be activated normally unless the separate type front seatback cover is securely installed.
- Check that the strap is not twisted after installing the bracket.
- Install the bracket securely.

- (c) Install the hook.

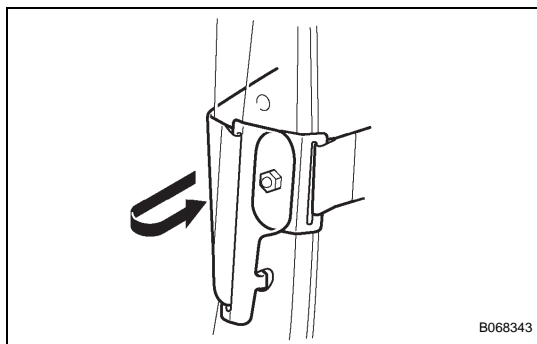

20. INSTALL FRONT SEAT HEADREST SUPPORT

21. INSTALL FRONT SEAT HEADREST SUPPORT

22. INSTALL FRONT SEATBACK BOARD SUB-ASSEMBLY

23. INSTALL SEAT ARMREST ASSEMBLY

- (a) Install the seat armrest assembly with the bolt and 2 washers.

Torque: 37 N*m (377 kgf*cm, 27 ft.*lbf)

24. INSTALL SEAT ARMREST COVER

25. INSTALL FRONT SEAT HEADREST ASSEMBLY


26. INSTALL SEPARATE TYPE FRONT SEAT CUSHION PAD

27. INSTALL SEPARATE TYPE FRONT SEAT CUSHION COVER

- (a) Using hog ring pliers, install the separate type front seat cushion cover to the separate type front seat cushion pad with new hog rings.

NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, take care to minimize wrinkles as much as possible.

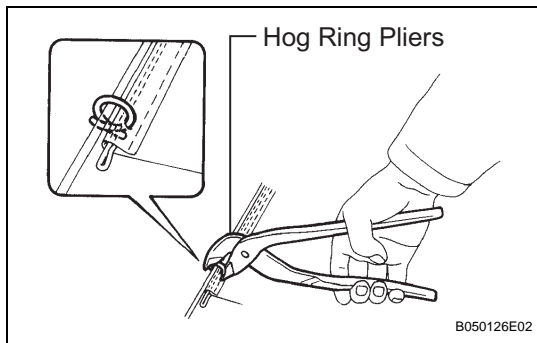

28. INSTALL SEPARATE TYPE FRONT SEAT CUSHION COVER WITH PAD

29. INSTALL FRONT SEAT INNER BELT ASSEMBLY (See page [SB-16](#))
30. INSTALL FRONT POWER SEAT SWITCH
31. INSTALL FRONT SEAT CUSHION SHIELD INNER NO.1
32. INSTALL FRONT SEAT CUSHION SHIELD INNER
33. INSTALL FRONT SEAT CUSHION SHIELD
34. INSTALL POWER SEAT SWITCH ASSEMBLY (for Driver Seat)
35. INSTALL FRONT SEAT CUSHION SHIELD ASSEMBLY
36. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
37. INSTALL RECLINING POWER SEAT SWITCH KNOB