


REASSEMBLY

1. **INSTALL REAR SEAT TRACK ASSEMBLY INNER**
2. **INSTALL REAR SEAT TRACK ASSEMBLY OUTER**
3. **INSTALL REAR SEAT TRACK ADJUSTING HANDLE**
4. **INSTALL FOLD SEAT CUSHION FRAME NO.1**
 - (a) Install the 2 fold seat cushion frame No.1 with the 4 nuts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
5. **INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY LOWER**
 - (a) Using a "torx" socket wrench (T45), install the rear seatback frame sub-assembly lower with the 5 "torx" bolts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
6. **INSTALL RECLINING CONTROL LINK SUB-ASSEMBLY**
 - (a) Install the reclining control link sub-assembly with the 4 nuts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - (b) Install a new E-ring and spring.
7. **INSTALL SEAT TRACK STOP PLATE**
 - (a) Install the seat track stop plate with the 2 nuts.
Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)
 - (b) Install the 2 seat track stop plate cables.
 - (c) Install the clamp.
8. **INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY**
 - (a) Using a "torx" socket wrench (T45), install the rear seatback frame sub-assembly with the 4 "torx" bolts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
9. **INSTALL REAR SEAT RECLINING CONTROL NO.2 CABLE**
10. **INSTALL REAR SEAT COVER NO.2**
11. **INSTALL REAR SEAT RECLINING COVER INNER LH**
12. **INSTALL FOLD SEAT STOPPER BAND ASSEMBLY NO.2**
13. **INSTALL REAR SEATBACK PAD**
14. **INSTALL SEPARATE TYPE REAR SEATBACK COVER**
 - (a) Using hog ring pliers, install the separate type rear seatback cover to the rear seatback pad with new hog rings.
NOTICE:
 - **Be careful not to damage the cover.**
 - **When installing the hog rings, take care to minimize wrinkles as much as possible.**

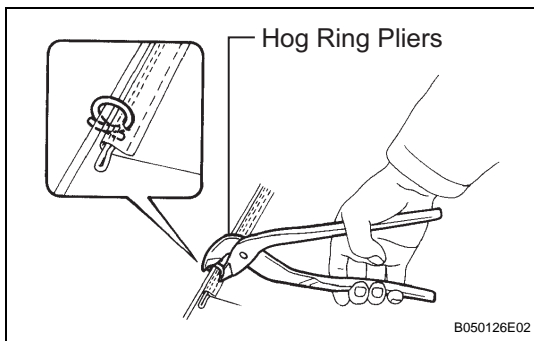

15. INSTALL SEPARATE TYPE REAR SEATBACK COVER WITH PAD

- (a) Install the separate type rear seatback cover with pad to the rear seatback frame sub-assembly.
- (b) Install the hook and new hog rings.
- (c) Install the rear seat belt hook with the bolt.
Torque: 6.0 N*m (61 kgf*cm, 53 in.*lbf)
- (d) Install the 2 clips.

16. INSTALL REAR SEAT HEADREST SUPPORT**17. INSTALL REAR SEAT HEADREST SUPPORT****18. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY****19. INSTALL REAR SEATBACK LOCK STRIKER COVER****20. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY****21. INSTALL REAR SEATBACK COVER****22. INSTALL REAR SEAT HEADREST ASSEMBLY****23. INSTALL REAR SEAT BELT ASSEMBLY INNER (See page [SB-28](#))****24. INSTALL REAR SEAT CUSHION PAD****25. INSTALL SEPARATE TYPE REAR SEAT CUSHION COVER**

- (a) Using hog ring pliers, install the separate type rear seat cushion cover to the rear seat cushion pad with new hog rings.

NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, take care to minimize wrinkles as much as possible.

26. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY**27. INSTALL SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY**

- (a) Install the 2 bolts.
Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)
- (b) Install the 2 rubber bands on the backside of the rear seatback board carpet assembly.
- (c) Using a "torx" socket wrench (T45), install the separate type rear seat cushion assembly with the 2 "torx" bolts.

Torque: 21 N*m (214 kgf*cm, 16 ft.*lbf)**28. INSTALL REAR SEAT CUSHION MOULDING REAR LH****29. INSTALL REAR SEAT CUSHION MOULDING LH**