


## REASSEMBLY

1. **INSTALL REAR SEAT TRACK ASSEMBLY INNER**
2. **INSTALL REAR SEAT TRACK ASSEMBLY OUTER**
3. **INSTALL REAR SEAT TRACK ADJUSTING HANDLE**
4. **INSTALL FOLD SEAT CUSHION FRAME NO.2**
  - (a) Install the fold seat cushion frame No.2 with the 4 nuts.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**
5. **INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY LOWER**
  - (a) Temporarily install the rear seatback frame sub-assembly lower with the 5 "torx" bolts.
  - (b) Using a "torx" socket wrench (T55), tighten the 2 "torx" bolts.  
**Torque: 80 N\*m (816 kgf\*cm, 59 ft.\*lbf)**
  - (c) Using a "torx" socket wrench (T45), tighten the 3 "torx" bolts.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**
6. **INSTALL RECLINING CONTROL LINK SUB-ASSEMBLY**
  - (a) Install the reclining control link sub-assembly with the bolt and 4 nuts.  
**Torque: Bolt**  
**21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**  
**Nut**  
**42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**
  - (b) Install the 2 springs and the 2 new E-rings.
7. **INSTALL SEAT TRACK STOP PLATE**
  - (a) Install the seat track stop plate with the 2 nuts.  
**Torque: 18 N\*m (184 kgf\*cm, 13 ft.\*lbf)**
  - (b) Install the 2 seat track stop plate cables.
  - (c) Install the clamp.
8. **INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY**
  - (a) Temporarily install the rear seatback frame sub-assembly with the 2 bolts and 2 "torx" bolts.
  - (b) Tighten the 2 bolts.  
**Torque: 55 N\*m (561 kgf\*cm, 41 ft.\*lbf)**
  - (c) Using a "torx" socket wrench (T45), tighten the 2 "torx" bolts.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**
9. **INSTALL REAR SEAT RECLINING CONTROL CABLE**
10. **INSTALL REAR SEAT COVER NO.2**
11. **INSTALL REAR SEAT COVER NO.1**
12. **INSTALL REAR SEAT RECLINING COVER INNER RH**
13. **INSTALL FOLD SEAT STOPPER BAND ASSEMBLY NO.1**
14. **INSTALL REAR SEAT SHOULDER BELT COVER**

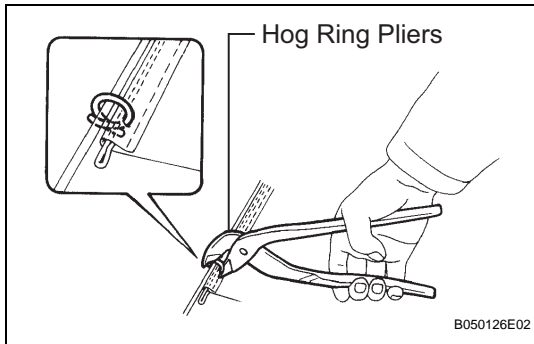

**15. INSTALL REAR CENTER SEAT OUTER BELT ASSEMBLY (See page [SB-41](#))**

**16. INSTALL SEPARATE TYPE REAR SEATBACK PAD**

**17. INSTALL SEPARATE TYPE REAR SEATBACK COVER**

- (a) Using hog ring pliers, install the separate type rear seatback cover to the separate type rear seatback pad with new hog rings.

**NOTICE:**

- Be careful not to damage the cover.
- When installing the hog rings, take care to minimize wrinkles as much as possible.

**18. INSTALL SEPARATE TYPE REAR SEATBACK COVER WITH PAD**

- (a) Install the separate type rear seatback cover with pad to the rear seatback frame sub-assembly.

- (b) Install the hook and new hog rings.

- (c) Install the rear seat belt hook with the bolt.

**Torque: 6.0 N\*m (61 kgf\*cm, 53 in.\*lbf)**

- (d) Install the 2 clips.

- (e) Install the floor anchor side of the rear seat belt assembly outer center with the bolt.


**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

- (f) Check if the ELR locks.

**NOTICE:**

**The check should be performed with the outer belt assembly installed.**

- (1) With the belt assembly installed, check that the belt locks when it is pulled out quickly.

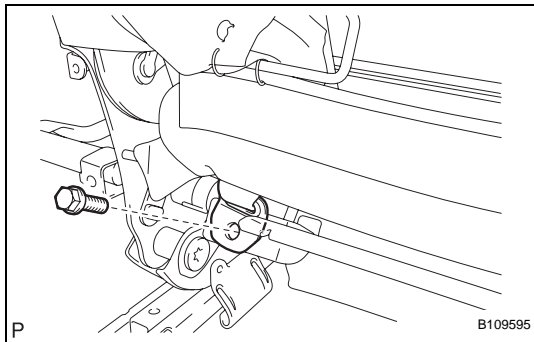

**19. INSTALL REAR SEAT LOCK STRIKER**

- (a) Using a "torx" socket wrench (T45), install the rear seat lock striker.

**Torque: 33 N\*m (337 kgf\*cm, 24 ft.\*lbf)**

**20. INSTALL REAR SEATBACK LOCK STRIKER PROTECTOR**

**21. INSTALL REAR SEATBACK LOCK BEZEL UPPER**

**22. INSTALL REAR SEAT HEADREST SUPPORT**

**23. INSTALL REAR SEAT HEADREST SUPPORT**


**24. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY**

**25. INSTALL REAR SEATBACK LOCK STRIKER COVER**

**26. INSTALL REAR SEAT HEADREST ASSEMBLY**

**27. INSTALL REAR SEAT BELT ASSEMBLY INNER (See page [SB-28](#))**

**28. INSTALL REAR SEAT CUSHION PAD**

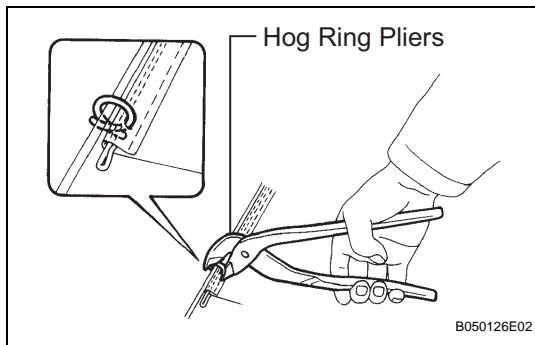

## 29. INSTALL SEPARATE TYPE REAR SEAT CUSHION COVER

- (a) Using hog ring pliers, install the separate type rear seat cushion cover to the rear seat cushion pad with new hog rings.

### NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, take care to minimize wrinkles as much as possible.

## 30. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY

## 31. INSTALL SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY

- (a) Temporarily install the separate type rear seat cushion assembly with the 2 bolts and 2 "torx" bolts.
- (b) Tighten the 2 bolts.

**Torque: 18 N\*m (184 kgf\*cm, 13 ft.\*lbf)**

- (c) Install new hog rings.
- (d) Using a "torx" socket wrench (T45), tighten the 2 "torx" bolts.

**Torque: 21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**

## 32. INSTALL REAR SEAT CUSHION MOULDING REAR RH

## 33. INSTALL REAR SEAT CUSHION MOULDING RH

## 34. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY

## 35. INSTALL CENTER SEATBACK FRAME SUB-ASSEMBLY

## 36. INSTALL REAR SEATBACK LOCK SUB-ASSEMBLY

- (a) Install the rear seatback lock sub-assembly with the 2 bolts.

**Torque: 21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**

## 37. INSTALL FOLD SEATBACK WIRE

## 38. INSTALL REAR SEATBACK ROD CONTROL LEVER OUTER

## 39. INSTALL NO.2 CENTER SEATBACK COVER

## 40. INSTALL COAT HOOK CAP

## 41. INSTALL NO.1 SEATBACK COVER

## 42. INSTALL REAR SEAT HEADREST SUPPORT

## 43. INSTALL REAR SEAT HEADREST SUPPORT

## 44. INSTALL REAR SEAT CENTER ARMREST SUPPORT

## 45. INSTALL REAR SEAT ARMREST ASSEMBLY CENTER

- (a) Temporarily install the rear seat armrest assembly center with the nut and rear seat center armrest support.

- (b) Using a "torx" socket wrench (T45), install the rear seat armrest assembly center with the 2 "torx" bolts.  
**Torque: 21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**

**46. INSTALL REAR SEATBACK MOULDING RH**

**47. INSTALL REAR SEATBACK MOULDING LH**

**48. INSTALL REAR SEATBACK HINGE SUB-ASSEMBLY CENTER**

- (a) Using a "torx" socket wrench (T45), install the 2 rear seatback hinge sub-assembly centers with the 2 "torx" bolts.

**Torque: 21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**

**49. INSTALL REAR SEAT CUSHION PAD CENTER**

**50. INSTALL CENTER SEAT CUSHION COVER SUB-ASSEMBLY**

**51. INSTALL CENTER SEAT CUSHION FRAME SUB-ASSEMBLY**

**52. INSTALL CENTER SEAT CUSHION ASSEMBLY**

- (a) Using a "torx" socket wrench (T45), install the center seat cushion assembly with the 2 "torx" bolts.

**Torque: 21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**

**53. INSTALL RECLINING COVER PROTECTOR RH**

**54. INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY**

**55. INSTALL REAR SEATBACK COVER**

**56. INSTALL REAR SEATBACK LOCK COVER**

**57. INSTALL REAR SEAT HEADREST ASSEMBLY CENTER**

**58. INSTALL CENTER SEAT ASSEMBLY**

- (a) Install the center seat assembly with the 4 bolts.

**Torque: 21 N\*m (214 kgf\*cm, 16 ft.\*lbf)**

- (b) Install new hog rings.

**59. INSTALL CENTER SEAT HINGE COVER UPPER LH**

**60. INSTALL RECLINING COVER PROTECTOR LH**