



SEAT MEMORY SWITCH

INSPECTION

1. INSPECT SEAT MEMORY SWITCH

- (a) Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Switch Position	Specified Condition
1(E) - 2(MMRV)	SET switch ON (pushed)	Below 1 Ω
1(E) - 2(MMRV)	SET switch OFF (not pushed)	10 k Ω or higher
1(E) - 4(1)	SW1 switch ON (pushed)	Below 1 Ω
1(E) - 4(1)	SW1 switch OFF (not pushed)	10 k Ω or higher
1(E) - 3(2)	SW2 switch ON (pushed)	Below 1 Ω
1(E) - 3(2)	SW2 switch OFF (not pushed)	10 k Ω or higher

If the result is not as specified, replace the switch.