



## FRONT POWER SEAT LUMBAR SWITCH

### INSPECTION

#### 1. INSPECT FRONT POWER SEAT LUMBAR SWITCH

- (a) Measure the resistance according to the value(s) in the table below.

##### Resistance

Tester Connection	Switch Position	Specified Condition
1(R) - 2(E2)	HOLD	Below 1 $\Omega$
3(B) - 4(H)	HOLD	Below 1 $\Omega$
1(R) - 2(E2)	OFF	Below 1 $\Omega$
4(H) - 5(E1)	OFF	Below 1 $\Omega$
1(R) - 3(B)	RELEASE	Below 1 $\Omega$
4(H) - 5(E1)	RELEASE	Below 1 $\Omega$

If the result is not as specified, replace the switch.