



LUMBAR SUPPORT ADJUSTER ASSEMBLY

INSPECTION

1. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY

- (a) Check operation of the lumbar support adjuster motor.
 - (1) Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminal.

OK

Measurement Condition	Operational Direction
Battery positive (+) → 1 Battery negative (-) → 2	Clockwise
Battery positive (+) → 2 Battery negative (-) → 1	Counterclockwise

If the result is not as specified, replace the lumbar support adjuster assembly.