

## FRONT SEATBACK HEATER

### INSPECTION

#### 1. INSPECT FRONT SEATBACK HEATER LH

- (a) Measure the resistance according to the value(s) in the table below.

##### Resistance

Tester Connection	Condition	Specified Condition
1 - 2	Always	Below 1 $\Omega$

If the result is not as specified, replace the front seatback heater.

#### 2. INSPECT FRONT SEATBACK HEATER RH


- (a) Measure the resistance according to the value(s) in the table below.

##### Resistance

Tester Connection	Condition	Specified Condition
1 - 2	Always	Below 1 $\Omega$


If the result is not as specified, replace the front seatback heater.

Connector Front View:

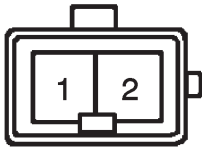

B068348E01

Connector Front View:

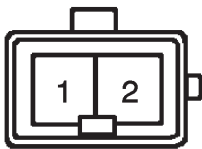

B068348E01