


SEAT HEATER CONTROL

ON-VEHICLE INSPECTION

Wire Harness Front View:

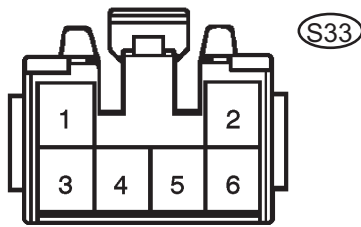

B066938E01

1. INSPECT FRONT SEAT HEATER CONTROL LH

- Disconnect the front seat heater control connector.
- Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Condition	Specified Condition
S33-6 - Body ground	Always	Below 1 Ω

If the result is not as specified, repair or replace the wire harness or connector.


- Measure the voltage according to the value(s) in the table below.

Voltage

Tester Connection	Condition	Specified Condition
S33-1 - S33-6	Ignition switch ON and driver side seat heater switch ON	10 to 14 V
S33-4 - S33-6	Ignition switch ON	10 to 14 V
S33-5 - S33-6	Ignition switch ON and driver side seat heater switch ON	1 to 13 V

If the result is not as specified, repair or replace seat heater switch circuit.

Connector Front View:

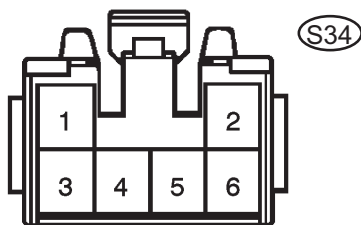

B066938E03

2. INSPECT FRONT SEAT HEATER CONTROL RH

- Disconnect the front seat heater control connector.
- Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Condition	Specified Condition
S34-6 - Body ground	Always	Below 1 Ω

If the result is not as specified, repair or replace wire harness or connector.

- Measure the voltage according to the value(s) in the table below.

Voltage

Tester Connection	Condition	Specified Condition
S34-1 - S34-6	Ignition switch ON and front passenger side seat heater switch ON	10 to 14 V
S34-4 - S34-6	Ignition switch ON	10 to 14 V
S34-5 - S34-6	Ignition switch ON and front passenger side seat heater switch ON	1 to 13 V

If the result is not as specified, repair or replace the seat heater switch circuit.