



SLIDING ROOF SWITCH ASSEMBLY (for Multi-panel Moon Roof)

ON-VEHICLE INSPECTION

1. INSPECT MAP LIGHT ASSEMBLY

- (a) Check the tilt switch resistance.
Resistance

Tester Connection	Switch Position	Specified Condition
24 (DWN) - 1 (GND)	DOWN	Below 1 Ω
25 (UP) - 1 (GND)	UP	

If the result is not as specified, replace the map light assembly.

- (b) Check the tilt & slide switch resistance.
Resistance

Tester Connection	Switch Position	Specified Condition
10 (OPN) - 1 (GND)	OPEN	Below 1 Ω
11 (CLS) - 1 (GND)	CLOSE	

If the result is not as specified, replace the map light assembly.