



## SLIDING ROOF SWITCH ASSEMBLY (for Standard)

### ON-VEHICLE INSPECTION

#### 1. INSPECT MAP LIGHT ASSEMBLY

- (a) Check the tilt switch resistance.

##### Resistance

Tester Connection	Switch Position	Specified Condition
24 (DWN) - 1 (GND)	DOWN	Below 1 $\Omega$
25 (UP) - 1 (GND)	UP	

If the result is not as specified, replace the map light assembly.

- (b) Check the slide switch resistance.

##### Resistance

Tester Connection	Switch Position	Specified Condition
10 (OPN) - 1 (GND)	OPEN	Below 1 $\Omega$
11 (CLS) - 1 (GND)	CLOSE	

If the result is not as specified, replace the map light assembly.