



STARTER RELAY

INSPECTION

1. INSPECT STARTER RELAY ASSEMBLY

- (a) Continuity inspection.
 - (1) Using an ohmmeter, check for resistance between the terminals.

Resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
	Below 1 Ω (Apply battery voltage terminals 1 and 2)