
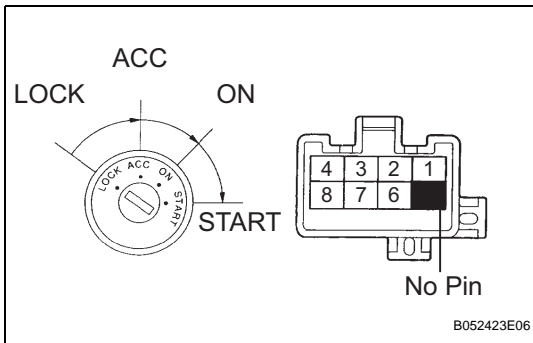


## REMOVAL

1. REMOVE FRONT DOOR SCUFF PLATE LH (See page IR-6)
2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER (See page IP-12)
3. REMOVE IGNITION OR STARTER SWITCH ASSEMBLY
  - (a) Disconnect the ignition switch connector and unlock warning switch connector.
  - (b) Remove the clamp.
  - (c) Remove the 2 screws and ignition switch.

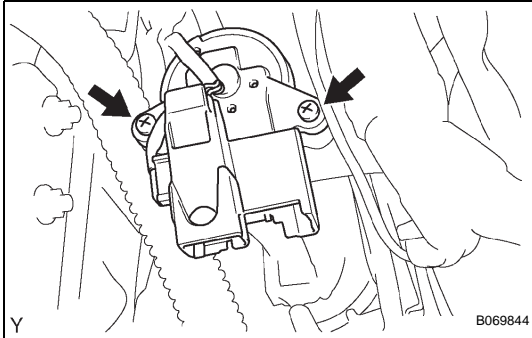

## INSPECTION

1. INSPECT IGNITION OR STARTER SWITCH ASSEMBLY
  - (a) Inspect the switch resistance.

### Resistance

Tester Connection	Switch Position	Specified Condition
-	LOCK	10 k $\Omega$ or higher
2 - 3	ACC	Below 1 $\Omega$
2 - 3	ON	
2 - 4		
6 - 7		
1 - 2	START	
2 - 4		
6 - 7		
7 - 8		

If the result is not as specified, replace the switch assembly.

## INSTALLATION

1. INSTALL IGNITION OR STARTER SWITCH ASSEMBLY
2. INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER
3. INSTALL FRONT DOOR SCUFF PLATE LH