

CUSTOMIZE PARAMETERS

HINT:

The following can be customized.

NOTICE:

- **Be sure to record the current value before customizing.**
- **When troubleshooting, be careful as customizing could turn off the function. (Example: If the wireless operation does not function, check that it has not been turned off by customizing.)**

TILT & TELESCO

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
AUTO TILT AWAY (Auto Away / Return Function)	ON	ON / Off of the auto away / return function.	ON / OFF

PROBLEM SYMPTOMS TABLE

The power tilt and power telescopic steering column system uses the multiplex communication system, so check its diagnostic system before proceeding to troubleshooting. The table below will be useful in troubleshooting these electrical systems. The numbered suspect areas indicate the likelihood of the cause in descending order. Inspect each part in the order shown, and replace if found faulty.

- If the instruction "Proceed to next circuit inspection shown on the chart" is given in the flow chart on the following pages, proceed to the circuit with the next highest number in the table to continue the check.
- If the problem still occurs even though there is no abnormality in the related circuits, check and replace the multiplex tilt and telescopic ECU.

SR

POWER TILT AND POWER TELESCOPIC STEERING COLUMN SYSTEM

Symptom	Suspected area	See page
Both tilt and telescopic: Manual, auto away / return and memory functions	1. Multiplex communication system	MP-6
	2. ECU power source circuit	SR-32
	3. Un-lock warning switch circuit	SR-16
	4. Actuator power source circuit	SR-35
	5. Tilt position sensor or tilt motor circuit	SR-23
	6. Telescopic position sensor or telescopic motor circuit	SR-28
Tilt only: Manual, auto away / return and memory functions	1. Tilt position sensor or tilt motor circuit	SR-23
Telescopic only: Manual, auto away / return and memory functions	1. Telescopic position sensor or telescopic motor circuit	SR-28
Both tilt and telescopic: Only tilt and telescopic manual switch does not operate	1. Tilt & telescopic manual switch circuit	SR-20
Both auto away and return: Only auto away / return function does not operate	1. Check status of auto away function using intelligent tester	-
	2. Multiplex communication system	MP-6
	3. Ignition switch	ST-17
	4. Un-lock warning switch circuit	SR-16
Auto away only: Only auto away function does not operate	1. Un-lock warning switch circuit	SR-16
	2. Ignition switch	ST-17
Auto return only: Only auto away function does not operate	1. Un-lock warning switch circuit	SR-16
	2. Ignition switch	ST-17
Only memory function does not operate	1. Multiplex communication system	MP-6