

POWER TILT AND POWER TELESCOPIC STEERING COLUMN SYSTEM

PRECAUTION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

SR

System Name	See procedure
Lighting System (Adaptive Front-Lighting System)	LI-17
Power Window Control System	WS-12
Power Back Door System	ED-33
Sliding Roof System	RF-22 and RF-4

PARTS LOCATION

SR

FUSIBLE LINK BLOCK

- ECU-B FUSE
- ALT FUSE
- INP-J/B FUSE

UNLOCK WARNING SWITCH ASSEMBLY

MULTIPLEX TILT AND TELESCOPIC ECU

DLC3

HEADLIGHT DIMMER SWITCH
(TILT AND TELESCOPIC
MANUAL SWITCH)

INSTRUMENT PANEL J/B

- MULTIPLEX NETWORK BODY ECU
- TI AND TE FUSE

STEERING COLUMN ASSEMBLY

POWER SEAT ECU (WITH SWITCH ASSEMBLY)

