

DTC	B0130/63	Short in Front Pretensioner Squib RH Circuit
------------	-----------------	---

DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor assembly and the front seat outer belt assembly RH (front pretensioner squib RH).


This circuit instructs the SRS to deploy when deployment conditions are met.

DTC B0130/63 is recorded when a short circuit is detected in the front pretensioner squib RH circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0130/63	<ul style="list-style-type: none"> • Short circuit between PR+ wire harness and PR- wire harness of front pretensioner squib RH • Front pretensioner squib RH malfunction • Center airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly • Floor wire

RS

WIRING DIAGRAM

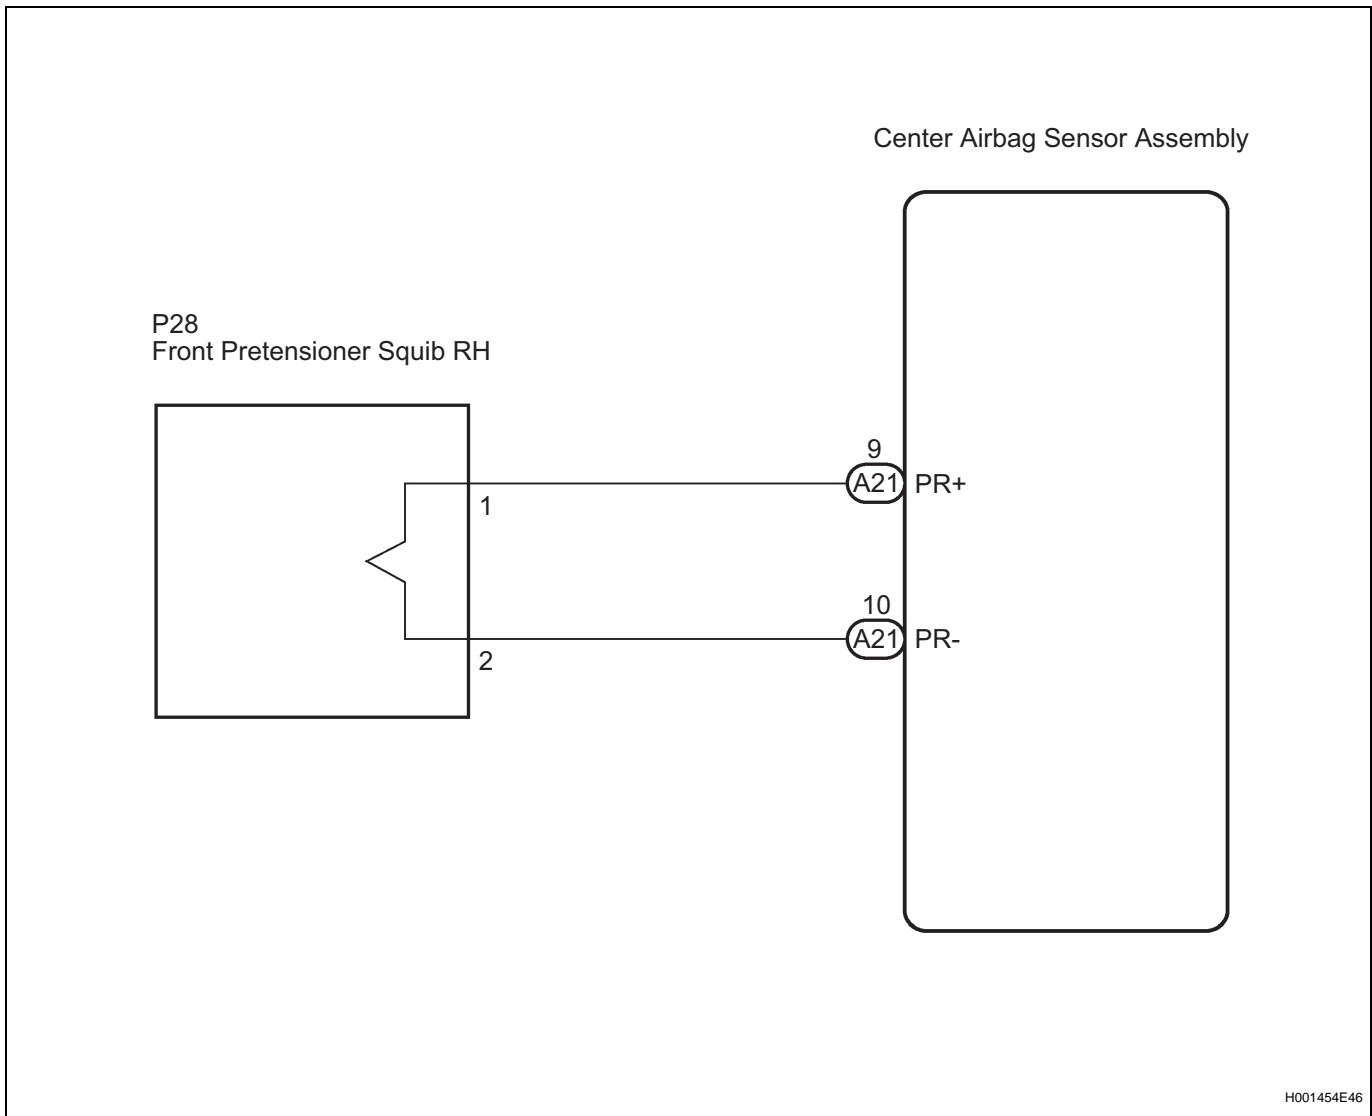

1 CHECK FRONT SEAT OUTER BELT ASSEMBLY RH (FRONT PRETENSIONER SQUIB RH)

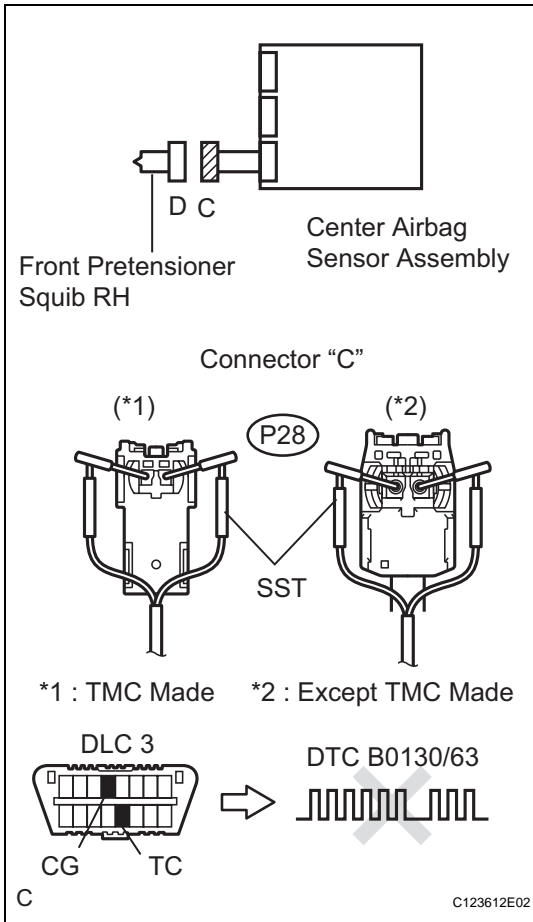

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the front seat outer belt assembly RH.
- (d) Connect the white wire side of SST (resistance 2.1 Ω) to the floor wire.

CAUTION:

Never connect a tester to the front seat outer belt assembly RH (Front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

Do not forcibly insert the SST into the terminals of the connector when connecting.

Insert the SST straight into the terminals of the connector.

SST 09843-18060

- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Clear the DTCs stored in memory (See page RS-32).
- (h) Turn the ignition switch to the LOCK position.
- (i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (j) Check the DTCs (See page RS-32).

OK:

DTC B0130/63 is not output.

HINT:

Codes other than DTC B0130/63 may be output at this time, but they are not related to this check.

NG

Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH

2 CHECK CONNECTORS

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the SST (resistance 2.1 Ω) from the floor wire.
- (d) Check that the floor wire connectors (on the front seat outer belt assembly RH side) are not damaged.

OK:


The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → **REPAIR OR REPLACE FLOOR WIRE**

OK

3 CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

RS

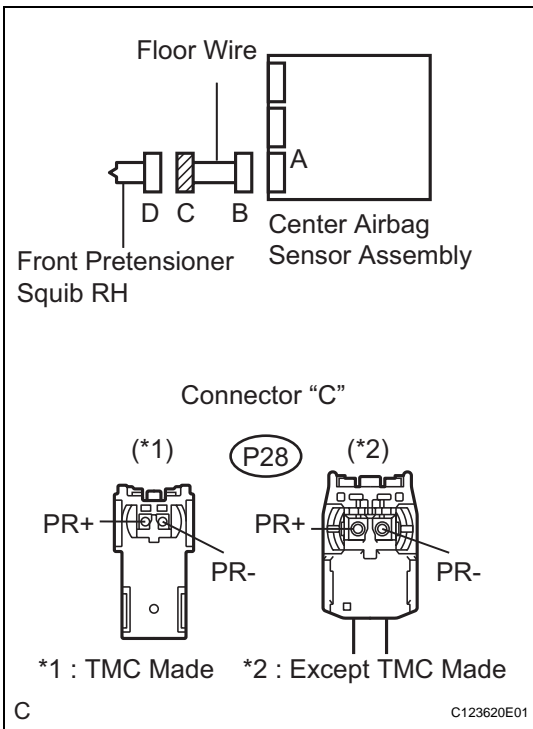

- (a) Disconnect the connector from the center airbag sensor assembly.
- (b) Release the activation prevention mechanism built into connector "B" (See page RS-25).
- (c) Measure the resistance according to the value(s) in the table below.


Resistance

Tester connection	Condition	Specified condition
P28-1 (PR+) - P28-2 (PR-)	Always	1 MΩ or higher

NG → **REPAIR OR REPLACE FLOOR WIRE**

OK

4 CHECK CENTER AIRBAG SENSOR ASSEMBLY

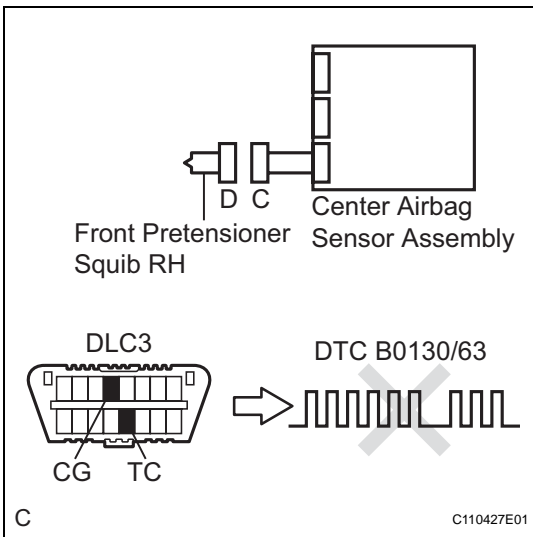

- (a) Connect the connectors to the front seat outer belt assembly RH and the center airbag sensor assembly.
- (b) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (c) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (d) Clear the DTCs stored in memory (See page RS-32).
- (e) Turn the ignition switch to the LOCK position.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Check the DTCs (See page RS-32).

OK:

DTC B0130/63 is not output.

HINT:

Codes other than code B0130/63 may be output at this time, but they are not related to this check.

C

C110427E01

NG

REPLACE CENTER AIRBAG SENSOR
ASSEMBLY

OK

USE SIMULATION METHOD TO CHECK

RS