


PARTS LOCATION

*1: w/o LEXUS NAVIGATION SYSTEM

*2: w/ LEXUS NAVIGATION SYSTEM

COMBINATION METER ASSEMBLY:

SRS WARNING LIGHT

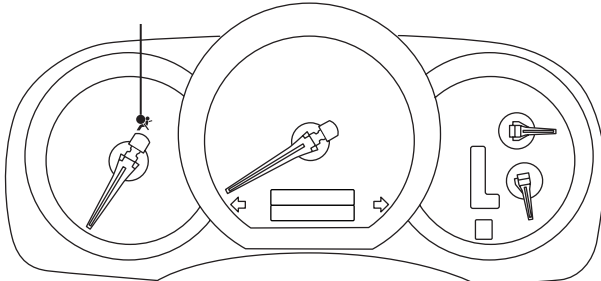

CENTER CLUSTER INTEGRATION SWITCH ASSEMBLY (*1):

MULTI-DISPLAY ASSEMBLY (*2):



PASSENGER AIRBAG ON/OFF INDICATOR

FRONT AIRBAG SENSOR

SPIRAL CABLE

STEERING PAD

CURTAIN SHIELD AIRBAG ASSEMBLY

FRONT PASSENGER AIRBAG ASSEMBLY

CURTAIN SHIELD AIRBAG ASSEMBLY

FRONT AIRBAG SENSOR

FRONT SEAT SIDE AIRBAG ASSEMBLY

SIDE AIRBAG SENSOR

DRIVER SIDE KNEE AIRBAG ASSEMBLY

SIDE AIRBAG SENSOR

FRONT SEAT OUTER BELT ASSEMBLY

SEAT POSITION SENSOR

FRONT SEAT SIDE AIRBAG ASSEMBLY

CENTER AIRBAG SENSOR ASSEMBLY

REAR AIRBAG SENSOR

FRONT SEAT OUTER BELT ASSEMBLY

FRONT SEAT INNER BELT ASSEMBLY


REAR AIRBAG SENSOR

H

RS

SYSTEM DIAGRAM

RS

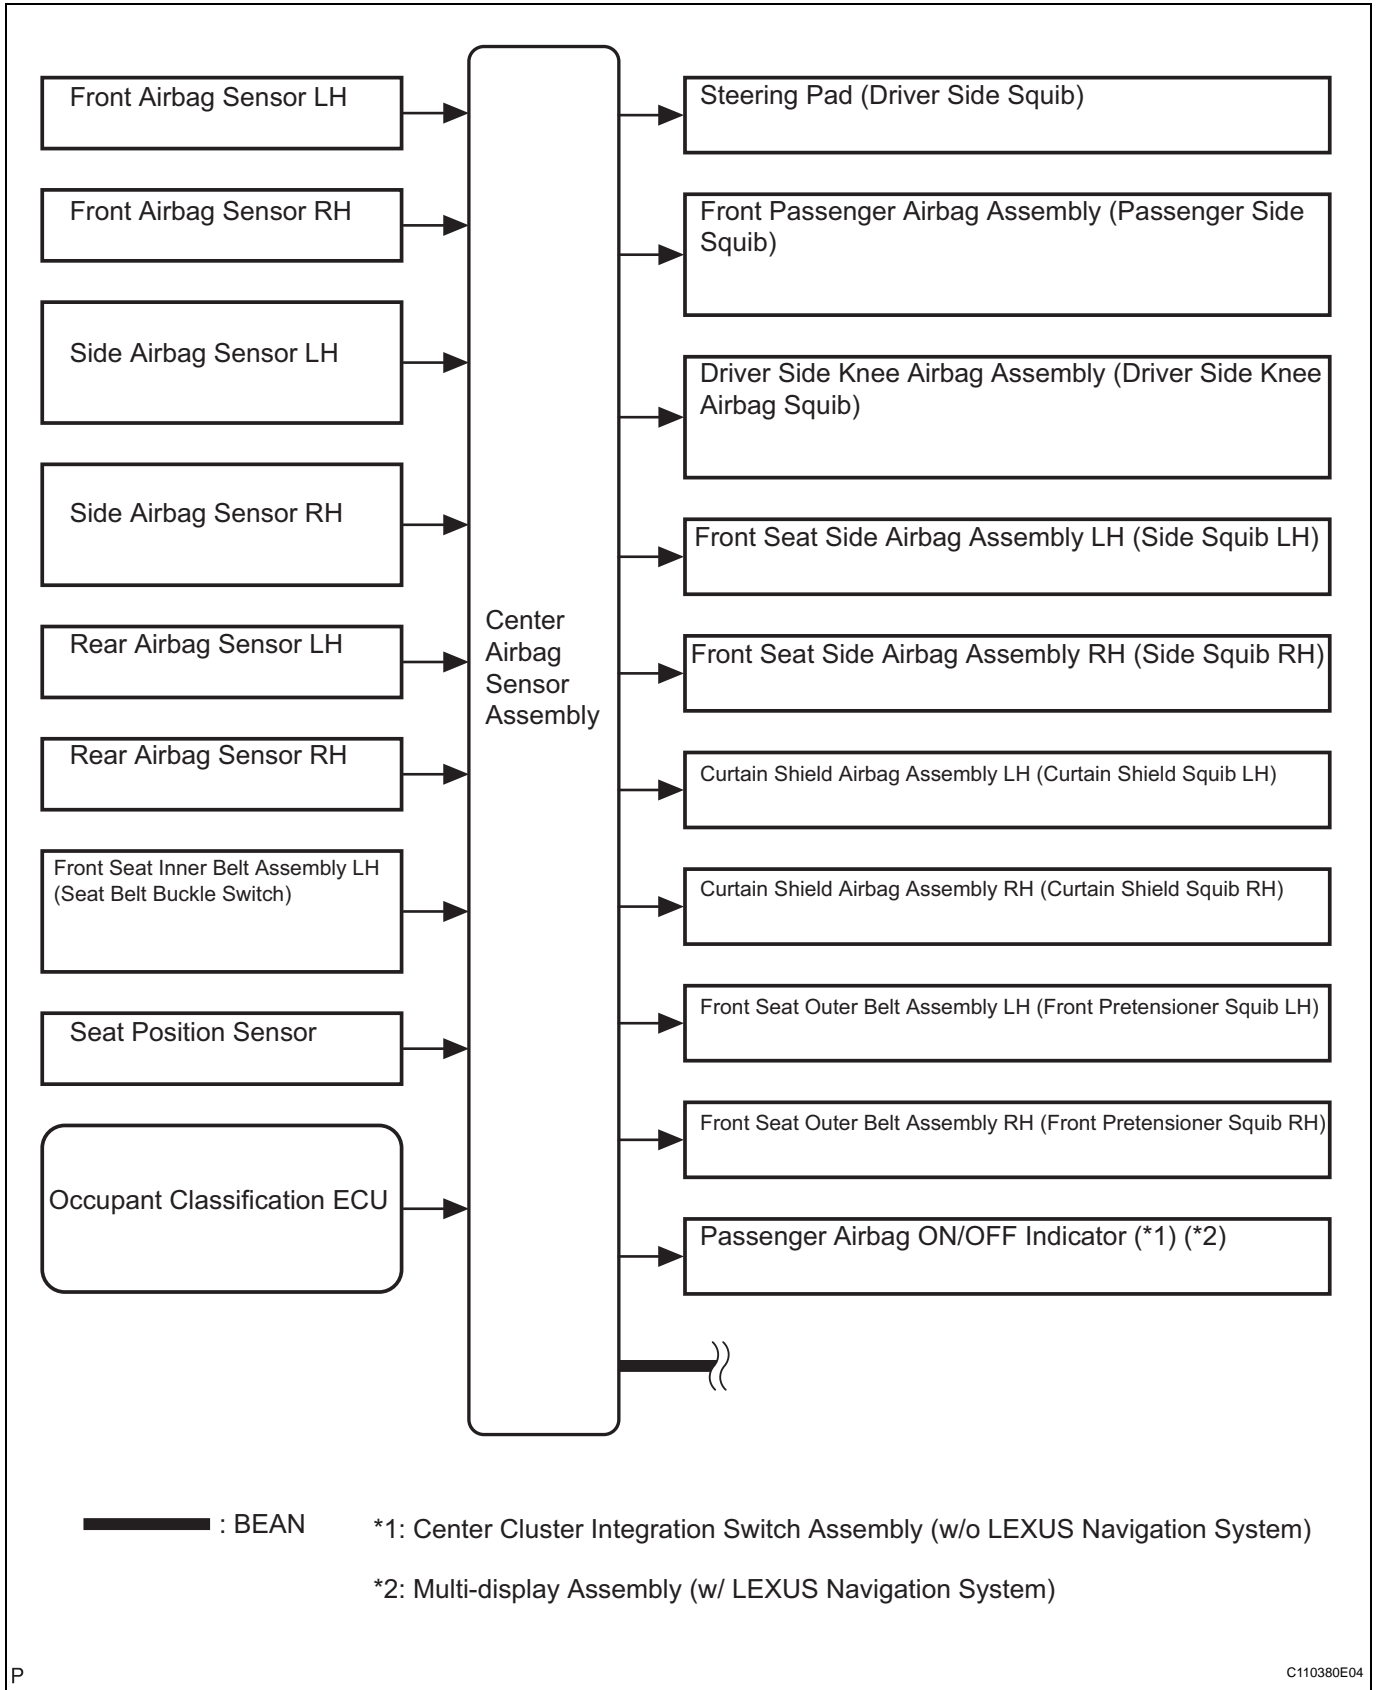


————— : BEAN

*1: Center Cluster Integration Switch Assembly (w/o LEXUS Navigation System)

*2: Multi-display Assembly (w/ LEXUS Navigation System)

RS

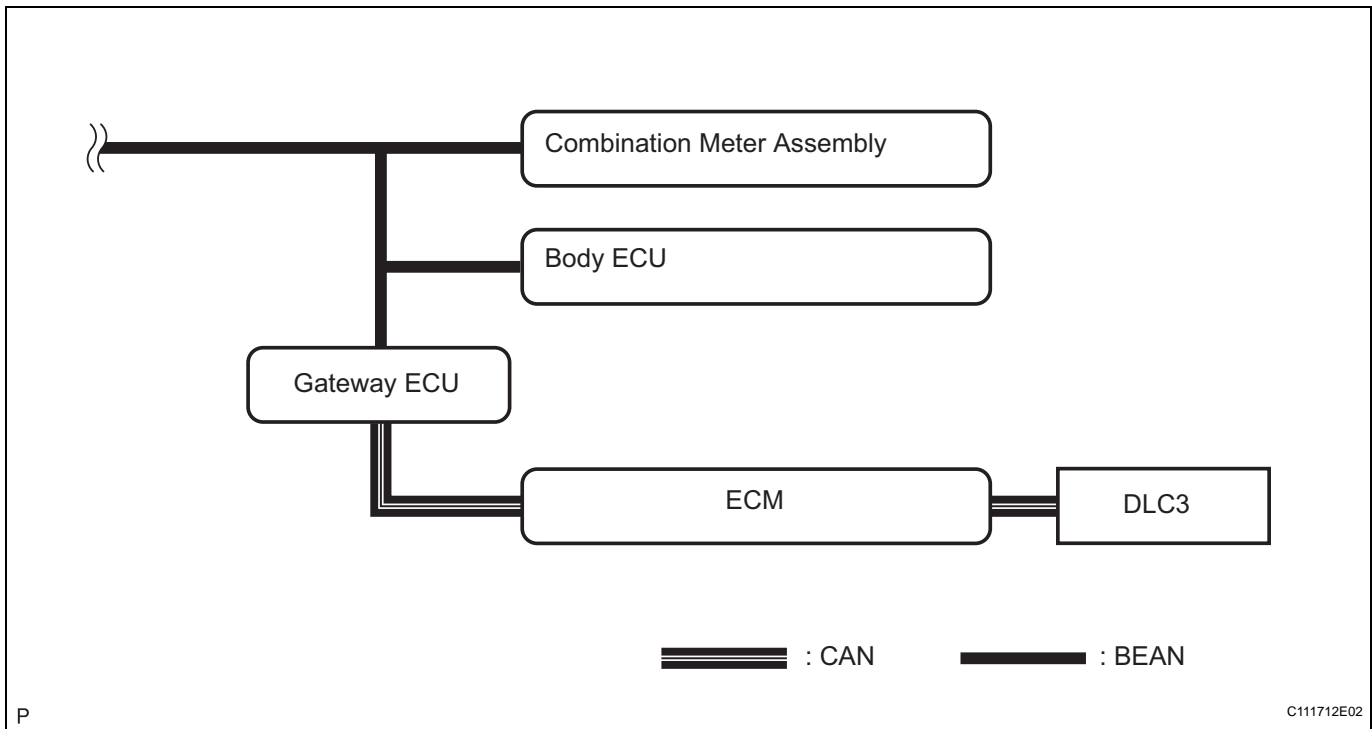

P

C111712E02

| Transmitting ECU (Transmitter) | Receiving ECU | Signals | Communication method |
|--------------------------------|-------------------------------|--|----------------------|
| Combination Meter Assembly | Center Airbag Sensor Assembly | <ul style="list-style-type: none"> • Vehicle speed signal | BEAN |
| Center Airbag Sensor Assembly | Combination Meter Assembly | <ul style="list-style-type: none"> • Driver seat buckle switch signal • Passenger seat buckle switch signal • Diagnosis signal (DTC) • SRS warning light blink demand signal • SRS warning light ON demand signal • Passenger seat occupant detection signal | BEAN |
| Center Airbag Sensor Assembly | Body ECU | <ul style="list-style-type: none"> • Driver seat buckle switch signal | BEAN |
| ECM | Center Airbag Sensor Assembly | <ul style="list-style-type: none"> • E/G speed signal • Test mode signal • Throttle opening angle information signal • Stop signal • Shift position signal | CAN-BEAN |