

PROBLEM SYMPTOMS TABLE

HINT:

Proceed with troubleshooting of each circuit in the table below.


AIRBAG SYSTEM

Symptom	Suspected area	See page
When the ignition switch is in the ON position, the SRS warning light sometimes comes on after approximately 6 seconds.	SRS Warning Light Remains ON	RS-290
SRS warning light always comes on even when DTC is not output.	SRS Warning Light Remains ON	RS-290
With the ignition switch is in the ON position, the SRS warning light does not come on.	SRS Warning Light does not Come ON	RS-292
Although the SRS warning light operates normal, DTC or a normal system code is not displayed.	Diagnosis Circuit	RS-32
Although terminals TC and CG are not connected, DTC or normal system code is displayed	Diagnosis Circuit	RS-32

RS

TERMINALS OF ECU

1. CENTER AIRBAG SENSOR ASSEMBLY

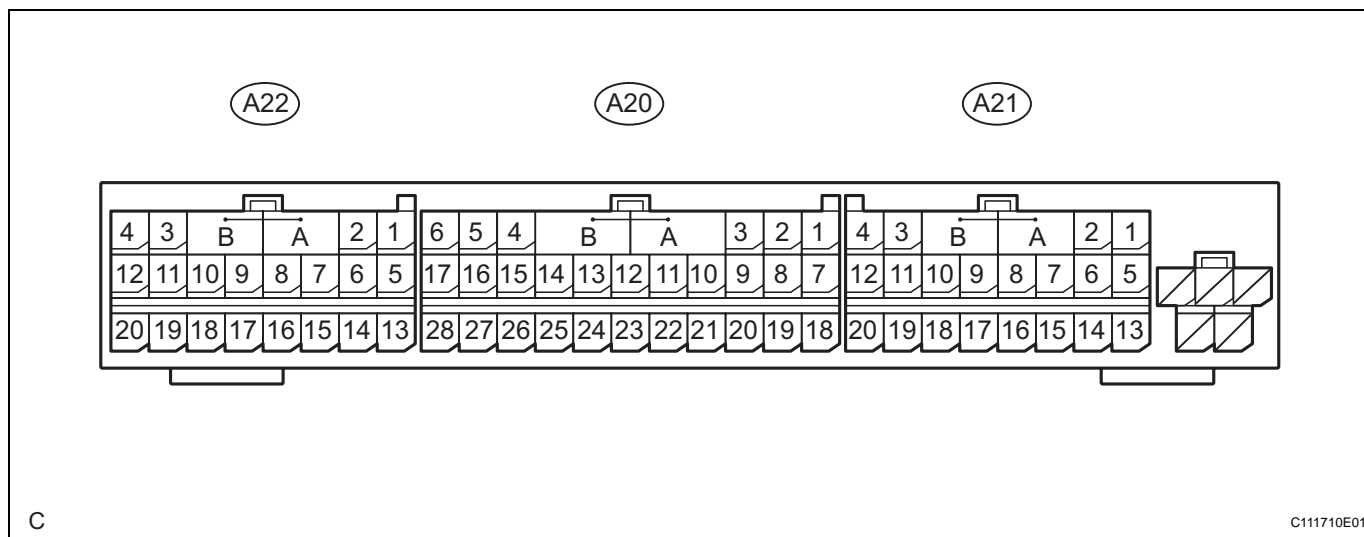

RS

Terminal No.	Terminal Symbol	Terminal Description
A	-	Half Connection Detection Mechanism
B	-	Half Connection Detection Mechanism
A20-1	P-AB	Passenger Airbag ON/OFF Indicator
A20-4	GSW	Body ECU
A20-5	IG2	IGN Fuse
A20-7	P2-	Front Passenger Airbag Assembly (Passenger Side Squib 2nd Step)
A20-8	P2+	Front Passenger Airbag Assembly (Passenger Side Squib 2nd Step)
A20-9	+SR	Front Airbag Sensor RH
A20-10	P+	Front Passenger Airbag Assembly (Passenger Side Squib)
A20-11	P-	Front Passenger Airbag Assembly (Passenger Side Squib)
A20-12	SIL	DLC3
A20-13	D-	Steering Pad (Driver Side Squib)
A20-14	D+	Steering Pad (Driver Side Squib)
A20-15	+SL	Front Airbag Sensor LH
A20-16	D2+	Steering Pad (Driver Side Squib 2nd Step)
A20-17	D2-	Steering Pad (Driver Side Squib 2nd Step)
A20-20	-SR	Front Airbag Sensor RH
A20-22	MPX2	Combination Meter Assembly
A20-24	MPX1	Body ECU
A20-25	PAON	Passenger Airbag ON/OFF Indicator
A20-26	-SL	Front Airbag Sensor LH
A20-27	E1	Ground
A20-28	E2	Ground
A21-1	FSR+	Occupant Classification ECU
A21-2	FSR-	Occupant Classification ECU
A21-4	CSR-	Rear Airbag Sensor RH
A21-5	SFR+	Front Seat Airbag Assembly (Side Squib RH)
A21-6	SFR-	Front Seat Airbag Assembly (Side Squib RH)

Terminal No.	Terminal Symbol	Terminal Description
A21-7	ICR-	Curtain Shield Airbag Assembly RH (Curtain Shield Squib RH)
A21-8	ICR+	Curtain Shield Airbag Assembly RH (Curtain Shield Squib RH)
A21-9	PR+	Front Seat Outer Belt Assembly RH (Front Pretensioner Squib RH)
A21-10	PR-	Front Seat Outer Belt Assembly RH (Front Pretensioner Squib RH)
A21-13	SSR-	Side Airbag Sensor RH
A21-15	ESR	Side Airbag Sensor RH
A21-16	SSR+	Side Airbag Sensor RH
A21-17	VUPR	Side Airbag Sensor RH
A21-18	CSR+	Rear Airbag Sensor RH
A21-19	VUCR	Rear Airbag Sensor RH
A21-20	ESCR	Rear Airbag Sensor RH
A22-1	CSL-	Rear Airbag Sensor LH
A22-2	LBE-	Front Seat Inner Belt Assembly LH (Seat Belt Buckle Switch LH)
A22-3	LSP-	Seat Position Airbag Sensor
A22-4	LSP+	Seat Position Airbag Sensor
A22-5	DK+	Driver Side Knee Airbag Assembly (Driver Side Knee Airbag Squib)
A22-6	DK-	Driver Side Knee Airbag Assembly (Driver Side Knee Airbag Squib)
A22-7	PL-	Front Seat Outer Belt Assembly LH (Front Pretensioner Squib LH)
A22-8	PL+	Front Seat Outer Belt Assembly LH (Front Pretensioner Squib LH)
A22-9	ICL+	Curtain Shield Airbag Assembly LH (Curtain Shield Squib LH)
A22-10	ICL-	Curtain Shield Airbag Assembly LH (Curtain Shield Squib LH)
A22-11	SFL-	Front Seat Airbag Assembly (Side Squib LH)
A22-12	SFL+	Front Seat Airbag Assembly (Side Squib LH)
A22-13	ESCL	Rear Airbag Sensor LH
A22-14	VUCL	Rear Airbag Sensor LH
A22-15	CSL+	Rear Airbag Sensor LH
A22-16	VUPL	Side Airbag Sensor LH
A22-17	SSL+	Side Airbag Sensor LH
A22-18	ESL	Side Airbag Sensor LH
A22-19	LBE+	Front Seat Inner Belt Assembly LH (Seat Belt Buckle Switch LH)
A22-20	SSL-	Side Airbag Sensor LH