

## HOW TO PROCEED WITH TROUBLESHOOTING

The intelligent tester can be used in steps 4, 6, 8 and 9.

**1** VEHICLE BROUGHT TO WORKSHOP

NEXT

**2** CUSTOMER PROBLEM ANALYSIS

NEXT

**3** PASSENGER AIRBAG ON/OFF INDICATOR CHECK

NEXT

**4** DTCs CHECK (Present and Past DTCs)

(a) Check for DTCs.

Result

Result	Proceed to
DTC is output.	A
DTC is not output.	B

B

GO TO PROBLEM SYMPTOMS TABLE

A

**5** DTCs CHART

NEXT

**6** CIRCUIT INSPECTION

NEXT

**7** REPAIR

NEXT

**8** CLEAR DTCs (Present and Past DTCs)

(a) Clear for DTCs.

NEXT

**9** DTCs CHECK (Present and Past DTCs)

(a) Check for DTCs.

Result

Result	Proceed to
DTC is not output.	A
DTC is output.	B

B

Go to step 5

RS

A

**10** SYMPTOM SIMULATION

(a) Check the passenger airbag ON/OFF indicator condition.

Result

Result	Proceed to
Passenger airbag ON/OFF indicator is operating normally.	A
Passenger airbag ON/OFF indicator ("OFF") and SRS warning light come on.	B

B

Go to step 5

A

**11** CONFIRMATION TEST

NEXT

END