

DIAGNOSTIC TROUBLE CODE CHART

1. If a trouble code is displayed during the DTC check, check the circuit listed for the code in the table below (proceed to the page listed for that circuit).

Occupant Classification ECU

DTC No.	Detection Item	Trouble Area	See page
B1771	Passenger Side Buckle Switch Circuit Malfunction	1. Front seat inner belt assembly (Buckle switch RH) 2. Occupant classification ECU 3. Front seat wire RH	RS-315
B1780	Front Occupant Classification Sensor LH Circuit Malfunction	1. Front seat assembly RH (Front occupant classification sensor LH) 2. Occupant classification ECU 3. Front seat wire RH	RS-321
B1781	Front Occupant Classification Sensor RH Circuit Malfunction	1. Front seat assembly RH (Front occupant classification sensor RH) 2. Occupant classification ECU 3. Front seat wire RH	RS-328
B1782	Rear Occupant Classification Sensor LH Circuit Malfunction	1. Front seat assembly RH (Rear occupant classification sensor LH) 2. Occupant classification ECU 3. Front seat wire RH	RS-335
B1783	Rear Occupant Classification Sensor RH Circuit Malfunction	1. Front seat assembly RH (Front occupant classification sensor RH) 2. Occupant classification ECU 3. Front seat wire RH	RS-342
B1785	Front Occupant Classification Sensor LH Collision Detection	1. Front seat assembly RH (Front occupant classification sensor LH) 2. Occupant classification ECU	RS-349
B1786	Front Occupant Classification Sensor RH Collision Detection	1. Front seat assembly RH (Front occupant classification sensor RH) 2. Occupant classification ECU	RS-352
B1787	Rear Occupant Classification Sensor LH Collision Detection	1. Front seat assembly RH (Rear occupant classification sensor LH) 2. Occupant classification ECU	RS-355
B1788	Rear Occupant Classification Sensor RH Collision Detection	1. Front seat assembly RH (Rear occupant classification sensor RH) 2. Occupant classification ECU	RS-358
B1790	Center Airbag Sensor Assembly Communication Circuit Malfunction	1. Occupant classification ECU 2. Center airbag sensor assembly 3. Floor wire 4. Front seat wire RH	RS-361
B1793	Occupant Classification Sensor Power Supply Circuit Malfunction	1. Front seat assembly RH (Occupant classification sensors) 2. Occupant classification ECU 3. Front seat wire RH	RS-370
B1795	Occupant Classification ECU Malfunction	1. Battery 2. ECU-B Fuse 3. Floor wire 4. Front seat wire RH 5. Front seat inner belt assembly RH (Buckle switch RH) 6. Occupant classification ECU	RS-377

RS

DTC No.	Detection Item	Trouble Area	See page
B1796	Sleep Operation Failure of Occupant Classification ECU	1. Occupant classification ECU	RS-380