

INSPECTION

1. INSPECT SPIRAL CABLE

- (a) If there are any defects as mentioned below, replace the spiral cable with a new one:
Scratches, cracks, dents or chips on the connector or the spiral cable.

INSTALLATION

1. INSTALL STEERING ANGLE SENSOR (See page [BC-128](#))

2. INSTALL SPIRAL CABLE

(a) Check that the front wheels are facing straight ahead.

(b) Set the turn signal switch to the neutral position.

NOTICE:

If it is not in the neutral position, the pin of the turn signal switch may snap.

(c) Install the spiral cable.


NOTICE:

When replacing the spiral cable with a new one, remove the lock pin before installing the steering wheel assembly.

(d) Connect the connectors to the spiral cable.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

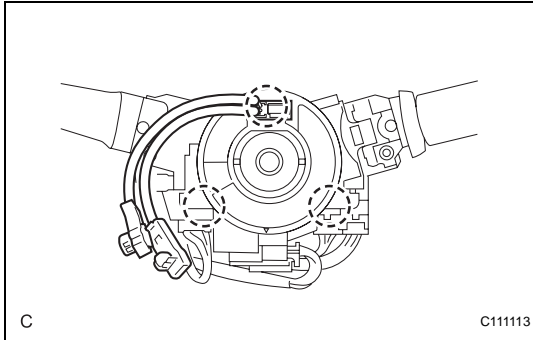

3. INSTALL STEERING COLUMN COVER (for Manual Tilt) (See page [SR-45](#))

4. INSTALL STEERING COLUMN COVER (for Power Tilt and Power Telescopic) (See page [SR-57](#))

5. ADJUST SPIRAL CABLE

(a) Check that the ignition switch is off.

(b) Check that the battery negative (-) terminal is disconnected.


CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

(c) Rotate the spiral cable counterclockwise slowly by hand until it feels firm.

NOTICE:

Do not turn the spiral cable by the airbag wire harness.

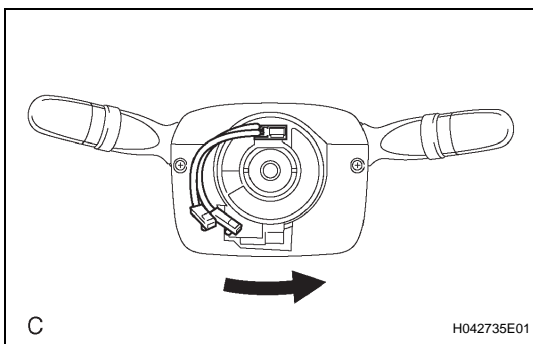


(d) Rotate the spiral cable clockwise approximately 2.5 turns to align the marks.

NOTICE:

Do not turn the spiral cable by the airbag wire harness.

HINT:

The spiral cable will rotate approximately 2.5 turns to both the left and right from the center.

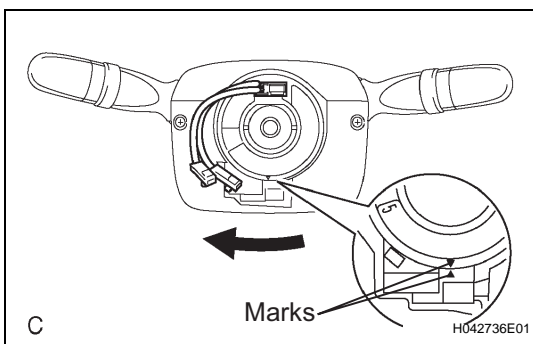

6. INSTALL STEERING WHEEL ASSEMBLY (for Manual Tilt) (See page [SR-45](#))

7. **INSTALL STEERING WHEEL ASSEMBLY** (for Power Tilt and Power Telescopic) (See page [SR-57](#))
8. **INSPECT STEERING WHEEL CENTER POINT**
9. **INSTALL STEERING PAD** (See page [RS-388](#))
10. **INSTALL STEERING WHEEL NO.2 COVER LOWER** (See page [RS-389](#))
11. **INSTALL STEERING WHEEL NO.3 COVER LOWER** (See page [RS-389](#))
12. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
13. **INSPECT STEERING PAD** (See page [RS-389](#))
14. **PERFORM INITIALIZATION**
 - (a) Perform initialization.
HINT:
Some systems need initialization when disconnecting the cable from the negative battery terminal.
15. **INSPECT SRS WARNING LIGHT**
 - (a) Inspect the SRS warning light (See page [RS-25](#)).