


# DRIVER SIDE KNEE AIRBAG ASSEMBLY

## COMPONENTS

RS

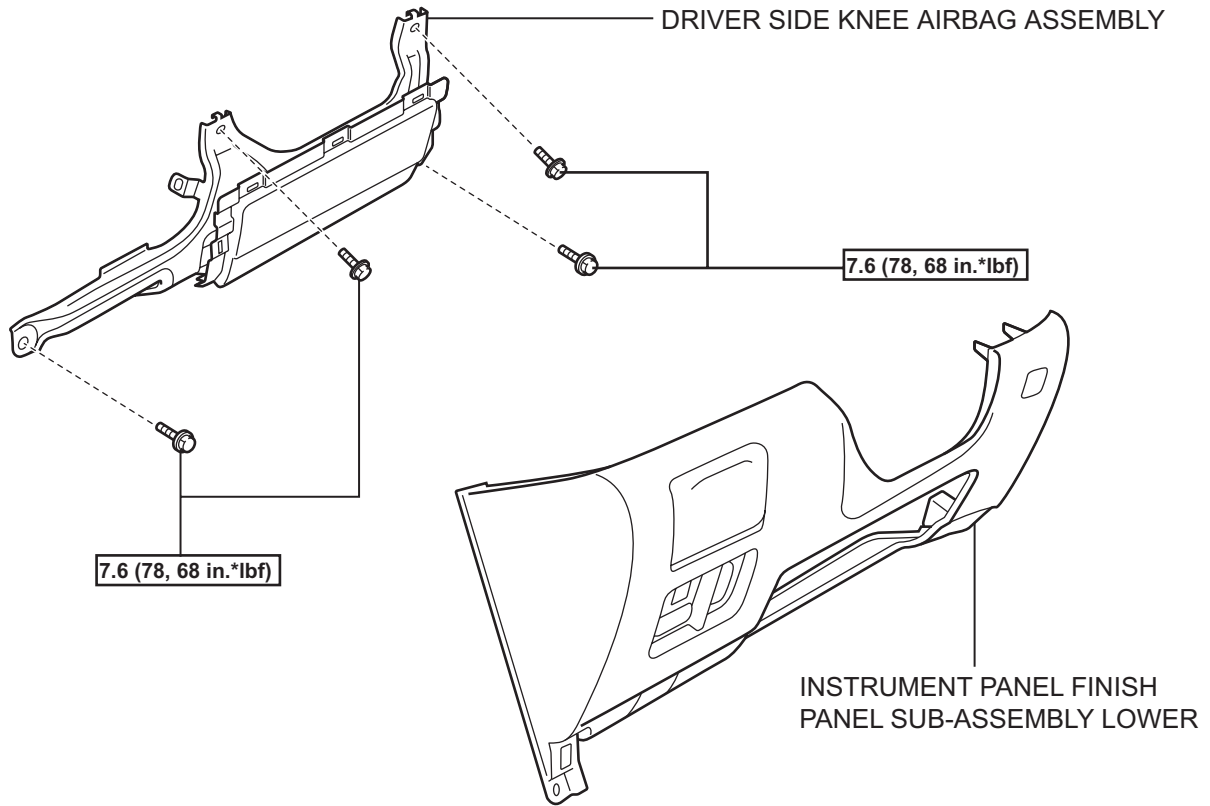

**N\*m (kgf\*cm, ft.\*lbf)** : Specified torque


C

C111042E05

## ON-VEHICLE INSPECTION


### 1. INSPECT DRIVER SIDE KNEE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (See page [RS-25](#)).
- (b) With the driver side knee airbag assembly installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the driver side knee airbag assembly with a new one:  
Cuts, minute cracks or marked discoloration on the driver side knee airbag assembly.

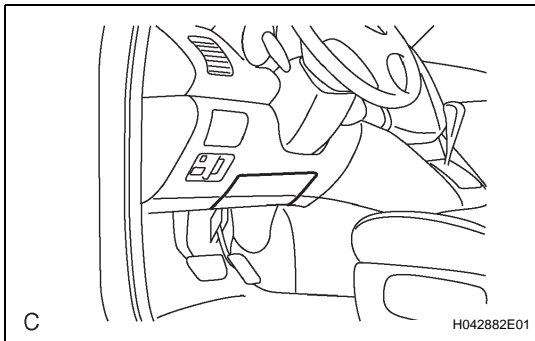

### 2. INSPECT DRIVER SIDE KNEE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

- (a) Perform a diagnostic system check (See page [RS-25](#)).
- (b) With the driver side knee airbag assembly removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the driver side knee airbag assembly with a new one:
  - Cuts, minute cracks or marked discoloration on the driver side knee airbag assembly.
  - Cracks or other damage to the connector.
  - Deformation or cracks on the instrument panel reinforcement.

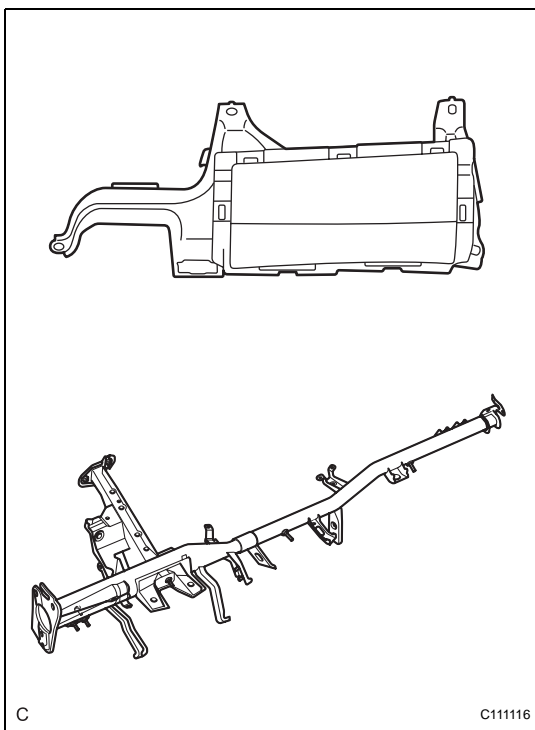**RS****CAUTION:**

**Be sure to follow the correct removal and installation procedures.**