

INSTALLATION

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- (c) Temporarily install the center airbag sensor assembly with the 3 bolts.

NOTICE:

- If the center airbag sensor assembly has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the center airbag sensor assembly, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)

- (e) Check that there is no looseness in the installation parts of the center airbag sensor assembly.
- (f) Connect the 3 connectors to the center airbag sensor assembly.
- (g) Check that the water-proof sheet is properly set.

2. INSTALL AIR DUCT REAR NO.1

3. INSTALL AIR DUCT REAR NO.2

4. INSTALL CONSOLE COVER LOWER

- (a) Connect the connector to the console cover lower.
- (b) Install the console cover lower with the 2 screws.

5. INSTALL CONSOLE BOX NO.1 DUCT

6. INSTALL REAR CONSOLE BOX (See page [IP-39](#))

7. INSTALL CONSOLE BOX HOLE COVER (See page [IP-40](#))

8. INSTALL CONSOLE BOX NO.2 HOLE COVER

HINT:

Use the same procedures for the console box No.2 hole cover and the console box hole cover.



9. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page [IP-27](#))

10. INSTALL FLOOR CARPET COVER CENTER LH (See page [IP-27](#))

11. INSTALL FLOOR CARPET COVER CENTER RH

HINT:

Use the same procedures for the floor carpet cover center RH and the floor carpet cover center LH.

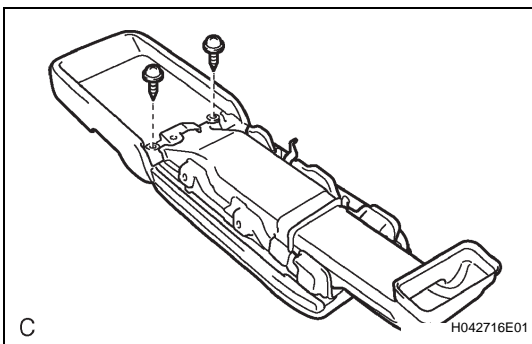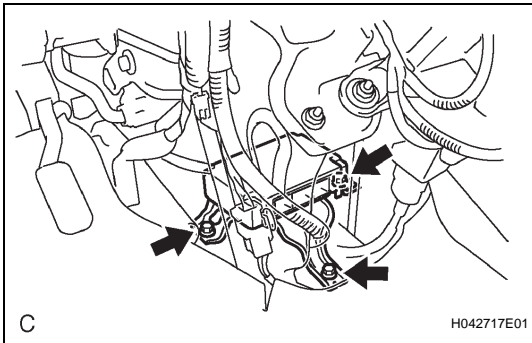

12. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY**
(See page [IP-27](#))
13. **INSTALL INSTRUMENT PANEL NO.2 UNDER COVER SUB-ASSEMBLY** (See page [IP-28](#))
14. **INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH**
HINT:
Use the same procedures for the cowl side trim sub-assembly RH and the cowl side trim sub-assembly LH (See page [IP-28](#)).
15. **INSTALL FRONT DOOR OPENING TRIM RH WEATHERSTRIP**
16. **INSTALL FRONT DOOR SCUFF LH PLATE**
HINT:
(See page [IP-29](#))
17. **INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER** (See page [IP-29](#))
18. **INSTALL FRONT DOOR SCUFF RH PLATE**
HINT:
Use the same procedures for the front door scuff RH plate and the front door scuff LH plate.
19. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER** (See page [IP-30](#))
20. **INSTALL CONSOLE PANEL UPPER FRONT** (See page [IP-30](#))
21. **INSTALL FRONT SEAT ASSEMBLY** (See page [SE-45](#))
22. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
23. **PERFORM INITIALIZATION**
 - (a) Perform initialization.
HINT:
Some systems need initialization when disconnecting the cable from the negative battery terminal.
24. **INSPECT CHECK POWER SEAT FUNCTION**
25. **INSPECT SEAT HEATER OPERATION**
26. **INSPECT SRS WARNING LIGHT**
 - (a) Inspect the SRS warning light (See page [RS-25](#)).