

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. PRECAUTION

CAUTION:

Be sure to read the "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE FRONT DOOR SCUFF LH PLATE (See page [IR-6](#))

4. REMOVE REAR DOOR SCUFF LH PLATE (See page [IR-6](#))

5. REMOVE FRONT DOOR OPENING TRIM LH WEATHERSTRIP

6. REMOVE REAR DOOR OPENING TRIM LH WEATHERSTRIP

7. REMOVE LAP BELT OUTER ANCHOR COVER (See page [SB-18](#))

8. REMOVE CENTER PILLAR LH GARNISH LOWER


HINT:

(See page [SB-18](#))

9. REMOVE FRONT SEAT OUTER BELT ASSEMBLY (See page [SB-18](#))

10. REMOVE SIDE AIRBAG SENSOR LH

- Remove the 2 bolts and the side airbag sensor LH.
- Disconnect the connector from the side airbag sensor LH.

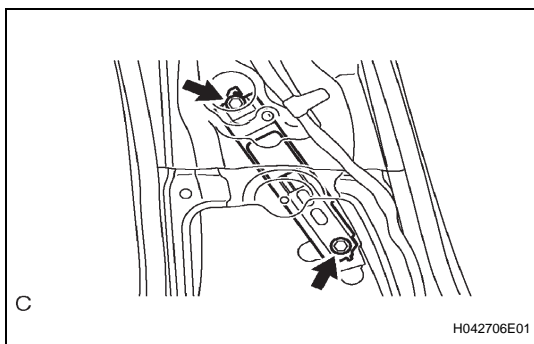

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL SIDE AIRBAG SENSOR LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the side airbag sensor LH with the 2 bolts.
Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)

NOTICE:

- If the side airbag sensor LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the side airbag sensor LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (d) Check that there is no looseness in the installation parts of the side airbag sensor LH.
- (e) Connect the connector to the side airbag sensor LH.

2. INSTALL FRONT SEAT OUTER BELT ASSEMBLY (See page [SB-19](#))

3. INSTALL CENTER PILLAR LH GARNISH LOWER

HINT:

(See page [SB-19](#))

4. INSTALL LAP BELT OUTER ANCHOR COVER

HINT:

(See page [SB-19](#))

5. INSTALL REAR DOOR OPENING TRIM LH WEATHERSTRIP

6. INSTALL FRONT DOOR OPENING TRIM LH WEATHERSTRIP

7. INSTALL REAR DOOR SCUFF LH PLATE

HINT:


(See page [IR-14](#))

8. INSTALL FRONT DOOR SCUFF LH PLATE

HINT:

(See page [IR-14](#))

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

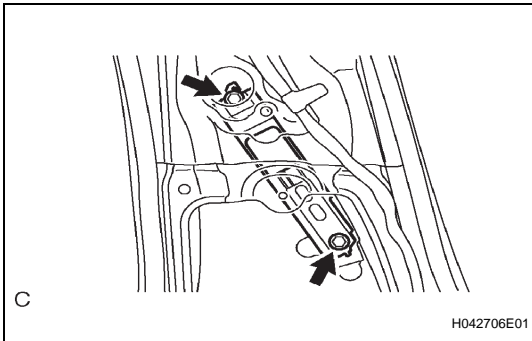

10. PERFORM INITIALIZATION

- (a) Perform initialization.

HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

11. INSPECT SRS WARNING LIGHT

- (a) Inspect the SRS warning light (See page [RS-25](#)).