

## REMOVAL

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. PRECAUTION

#### CAUTION:

Be sure to read the "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).

### 2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

### 3. REMOVE REAR DOOR SCUFF LH PLATE (See page [IR-6](#))

### 4. REMOVE REAR DOOR OPENING TRIM LH WEATHERSTRIP

### 5. REMOVE REAR SEAT ASSEMBLY LH (See page [SE-50](#))

### 6. REMOVE DECK SIDE TRIM LH COVER

#### HINT:

(See page [SB-32](#))


### 7. REMOVE REAR SEAT SIDE LH COVER

#### HINT:

(See page [SB-32](#))

### 8. REMOVE REAR AIRBAG SENSOR LH

- (a) Disconnect the connector from the rear airbag sensor LH.
- (b) Remove the 2 bolts and the rear airbag sensor LH.

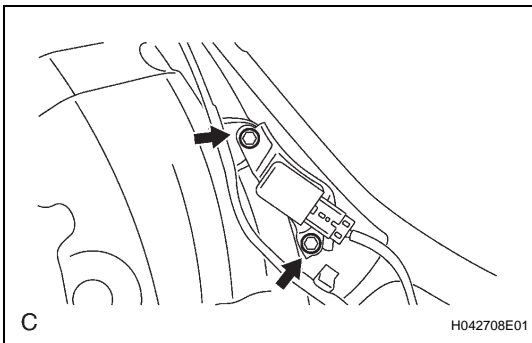

## INSTALLATION

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. INSTALL REAR AIRBAG SENSOR LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

#### CAUTION:

**After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.**

- (c) Install the rear airbag sensor LH with the 2 bolts.  
**Torque: 17.5 N\*m (179 kgf\*cm, 13 ft.\*lbf)**

#### CAUTION:

- If the rear airbag sensor LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the rear airbag sensor LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (d) Check that there is no looseness in the installation parts of the rear airbag sensor LH.
- (e) Connect the connector to the rear airbag sensor LH.

### 2. INSTALL REAR SEAT SIDE LH COVER

#### HINT:

(See page [SB-34](#))

### 3. INSTALL DECK SIDE TRIM LH COVER

#### HINT:

(See page [SB-34](#))

### 4. INSTALL REAR SEAT ASSEMBLY LH (See page [SE-55](#))

### 5. INSPECT SLIDE ADJUSTER LOCK SIMULTANEOUSLY

### 6. INSTALL REAR DOOR OPENING TRIM LH WEATHERSTRIP

### 7. INSTALL REAR DOOR SCUFF LH PLATE

#### HINT:

(See page [SB-34](#))


### 8. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

### 9. PERFORM INITIALIZATION

- (a) Perform initialization.

#### HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

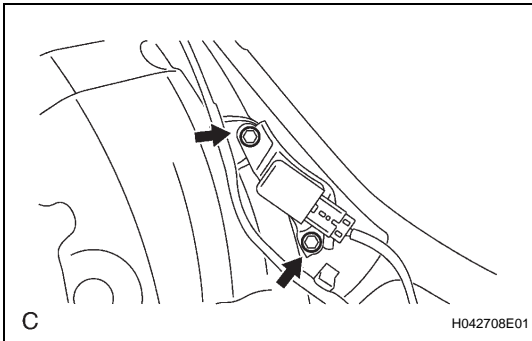

**10. INSPECT SRS WARNING LIGHT**

- (a) Inspect the SRS warning light (See page [RS-25](#)).