



REMOVAL

1. **PRECAUTION**
CAUTION:
Be sure to read the "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent the airbag working.
3. **REMOVE FRONT SEAT ASSEMBLY** (See page [SE-38](#))
4. **REMOVE RECLINING POWER SEAT SWITCH KNOB** (See page [SE-39](#))
5. **REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB** (See page [SE-39](#))
6. **REMOVE FRONT SEAT CUSHION SHIELD ASSEMBLY** (See page [SE-39](#))
7. **REMOVE SEAT SLIDE POSITION SENSOR PROTECTOR**
 - (a) Remove the seat slide position sensor protector from the seat position sensor.
8. **REMOVE SEAT POSITION SENSOR**
 - (a) Disconnect the connector from the seat position sensor.

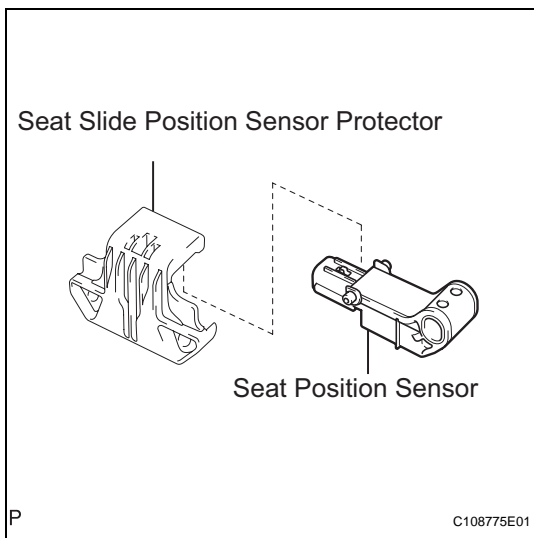

- (b) Using a "torx" socket wrench (T30), remove the "torx" screw and the seat position sensor.

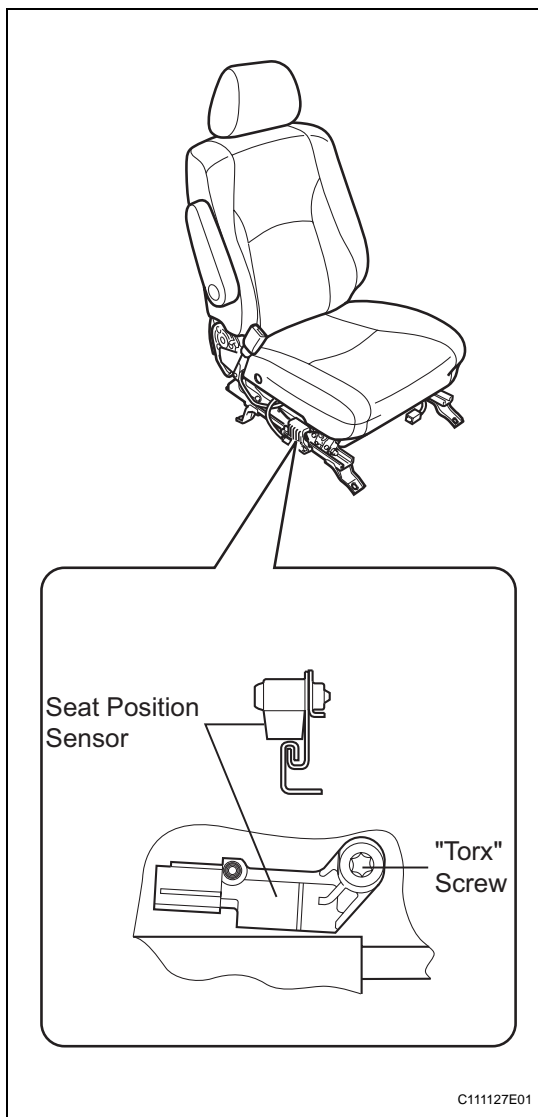

RS