



INSTALLATION

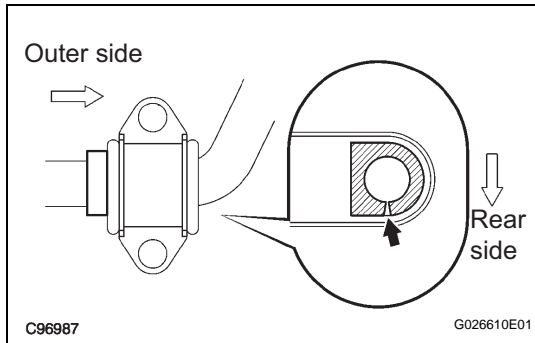

1. **INSTALL STABILIZER BAR FRONT**
 - (a) Install the stabilizer bar front to the vehicle.
2. **INSTALL FRONT STABILIZER BAR BUSH NO.1**
 - (a) Install front stabilizer bar bush No. 1.

HINT:
Install the bush to the outer side of the bush stopper on the stabilizer bar.
3. **INSTALL POWER STEERING LINK ASSEMBLY**
4. **INSTALL PRESSURE FEED TUBE ASSEMBLY**
SST 09023-12701
5. **INSTALL STEERING GEAR OUTLET RETURN TUBE**
SST 09023-12701
6. **CONNECT STEERING INTERMEDIATE SHAFT SUB-ASSEMBLY**
7. **INSTALL TIE ROD END SUB-ASSEMBLY LH**
8. **INSTALL TIE ROD END SUB-ASSEMBLY RH**

HINT:
Install the RH side side following the same procedures as with the LH side.
9. **INSTALL FRONT STABILIZER BRACKET NO.2 LH**
 - (a) Install the front stabilizer bracket No. 2 from the stabilizer bar bush No. 1.

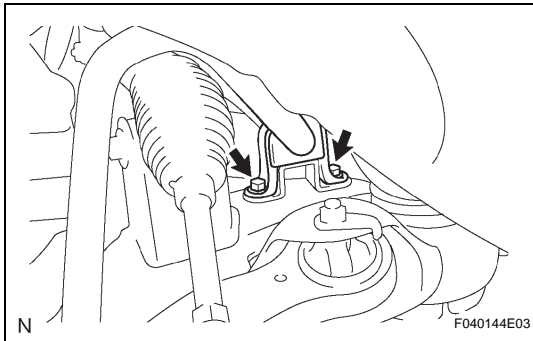


10. **INSTALL FRONT STABILIZER BRACKET NO.2 RH**

HINT:
Install the RH side side following the same procedures as with the LH side.
11. **INSTALL FRONT STABILIZER BRACKET NO.1 LH**
 - (a) Install the 2 front stabilizer brackets No. 1 LH with the 2 bolts.

Torque: 16 N*m (163 kgf*cm, 12 ft.*lbf)
12. **INSTALL FRONT STABILIZER BRACKET NO.1 RH**

HINT:
Install the RH side side following the same procedures as with the LH side.

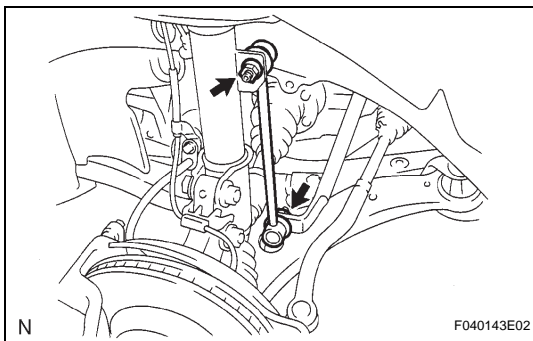

13. **INSTALL FRONT STABILIZER LINK ASSEMBLY LH**
 - (a) Install the front stabilizer link assembly LH with the 2 nuts.

Torque: 74 N*m (755 kgf*cm, 55 ft.*lbf)

HINT:
If the ball joint turns together with the nut, use a hexagon (6 mm) wrench to hold the stud.
14. **INSTALL FRONT STABILIZER LINK ASSEMBLY RH**

HINT:
Install the RH side side following the same procedures as with the LH side.

- 15. INSTALL FRONT WHEEL
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)**
- 16. BLEED POWER STEERING FLUID**
- 17. CHECK POWER STEERING FLUID LEAKAGE**
- 18. INSPECT AND ADJUST STEERING WHEEL CENTER POINT**
- 19. INSPECT AND ADJUST FRONT WHEEL ALIGNMENT**