

## INSTALLATION

1. **INSTALL STABILIZER BAR FRONT**
  - (a) Install the stabilizer bar front from the vehicle.
2. **INSTALL EXHAUST MANIFOLD CONVERTER SUB-ASSEMBLY**
3. **INSTALL EXHAUST MANIFOLD HEAT INSULATOR NO.1**
4. **INSTALL MANIFOLD STAY**
5. **INSTALL FRONT STABILIZER BAR BUSH NO.1**
  - (a) Install front stabilizer bar bush No. 1.
 



HINT:  
Install the bushing to the outer side of the bushing stopper on the stabilizer bar.
6. **INSTALL POWER STEERING LINK ASSEMBLY**
7. **INSTALL PRESSURE FEED TUBE ASSEMBLY**  
SST 09023-12701
8. **INSTALL RETURN TUBE ASSEMBLY**  
SST 09023-12701
9. **CONNECT STEERING INTERMEDIATE SHAFT SUB-ASSEMBLY**
10. **INSTALL TIE ROD END SUB-ASSEMBLY LH**
11. **INSTALL TIE ROD END SUB-ASSEMBLY RH**


HINT:  
Install the RH side following the same procedures as with the LH side.
12. **INSTALL FRONT STABILIZER BRACKET NO.2 LH**
  - (a) Install the front stabilizer bracket No. 2 from the stabilizer bar bush No. 1.
13. **INSTALL FRONT STABILIZER BRACKET NO.2 RH**

HINT:  
Install the RH side following the same procedures as with the LH side.
14. **INSTALL FRONT STABILIZER BRACKET NO.1 LH**
  - (a) Install the 2 front stabilizer brackets No. 1 LH with LH with the 2 bolts.
 

**Torque: 16 N\*m (163 kgf\*cm, 12 ft.\*lbf)**
15. **INSTALL FRONT STABILIZER BRACKET NO.1 RH**

HINT:  
Install the RH side following the same procedures as with the LH side.
16. **INSTALL EXHAUST PIPE SUB-ASSEMBLY FRONT NO.3**
17. **INSTALL ENGINE UNDER COVER NO.2**

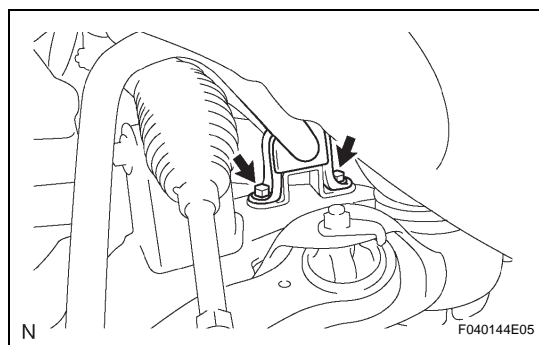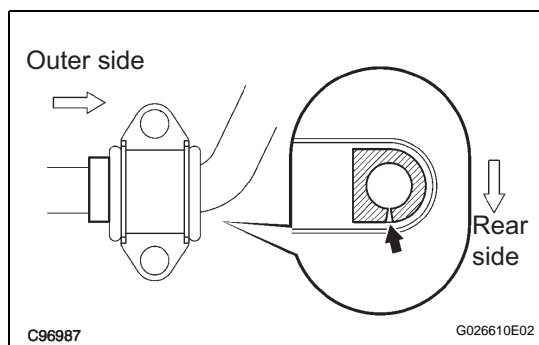

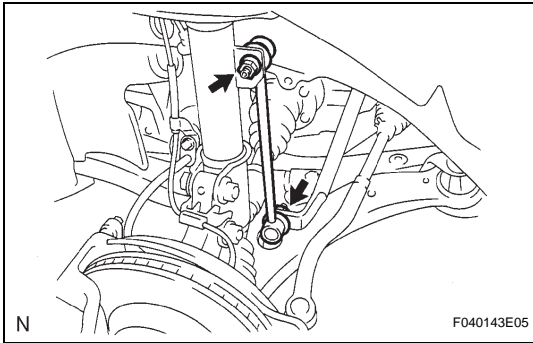

- 18. INSTALL FRONT STABILIZER LINK ASSEMBLY LH**
  - (a) Install the front stabilizer link assembly LH with the 2 nuts.  
**Torque: 74 N\*m (755 kgf\*cm, 55 ft.\*lbf)**  
HINT:  
In the ball joint turns together with the nut, use a hexagon (6 mm) wrench to hold the stud.
- 19. INSTALL FRONT STABILIZER LINK ASSEMBLY RH**  
HINT:  
Install the RH side following the same procedures as with the LH side.
- 20. INSTALL FRONT WHEEL**  
**Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)**
- 21. BLEED POWER STEERING FLUID**
- 22. CHECK POWER STEERING FLUID LEAKAGE**
- 23. INSPECT AND ADJUST STEERING WHEEL CENTER POINT**
- 24. INSPECT AND ADJUST FRONT WHEEL ALIGNMENT**