


REAR STRUT ROD

COMPONENTS

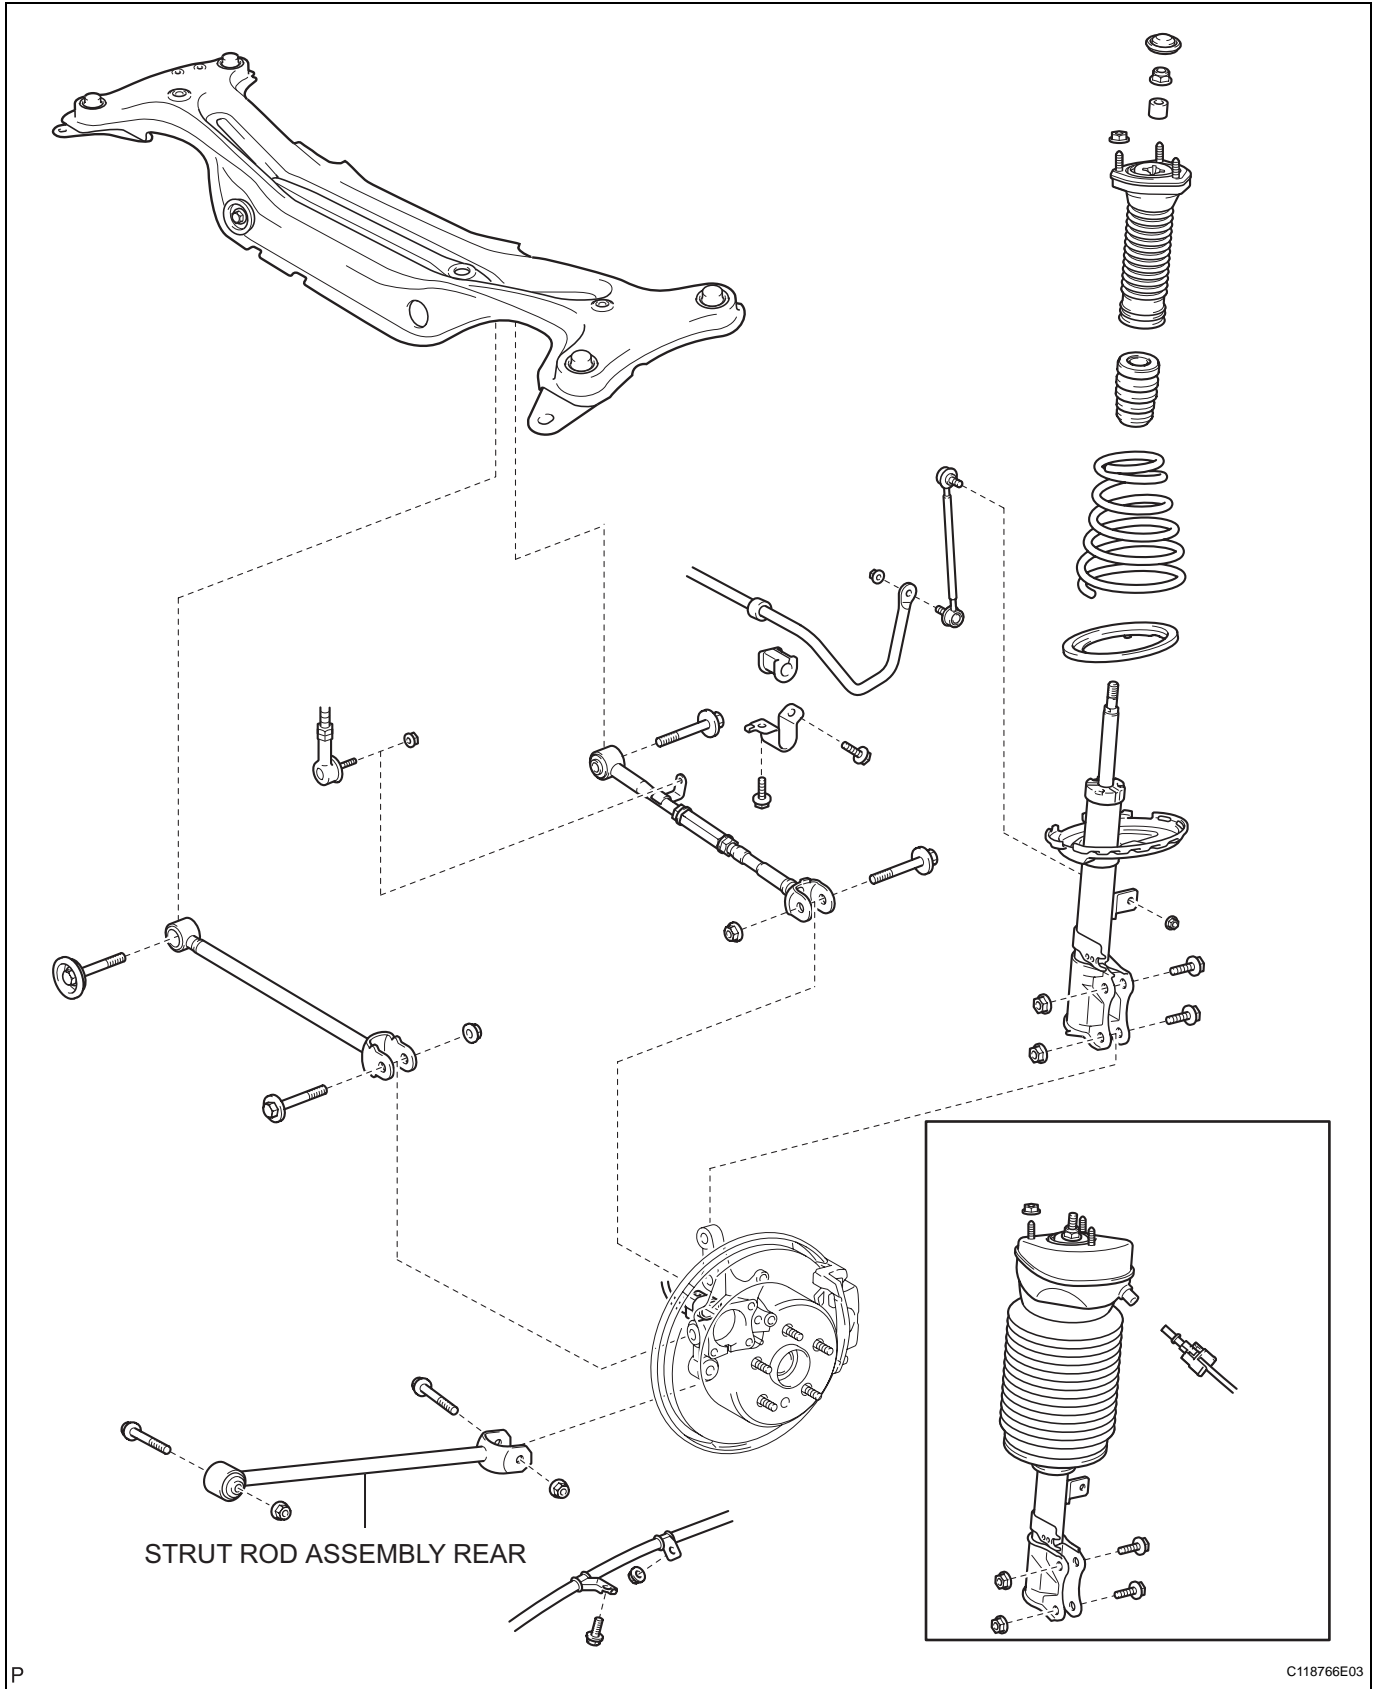

REMOVAL



NOTICE:

- Press the height control switch to stop the vehicle height control operation before jacking up or lifting up the vehicle with air suspension.
- Press the height control switch to operate the vehicle height control after jacking down or lifting down the vehicle with air suspension.
- Support the rear axle carrier with a jack.

1. REMOVE REAR WHEEL

2. REMOVE STRUT ROD ASSEMBLY REAR


- (a) Support the rear axle carrier with a jack.

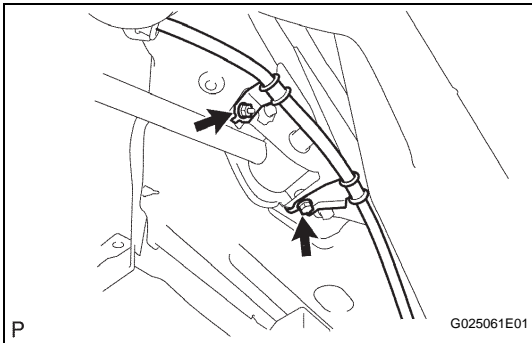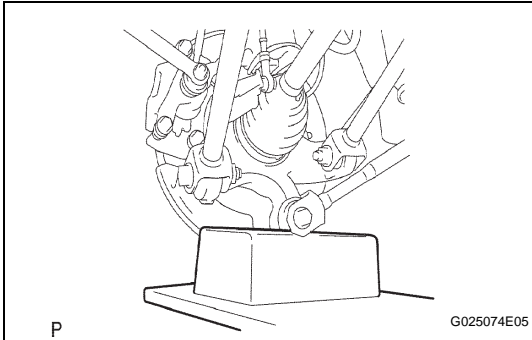

- (b) Remove the bolt and nut, and separate the parking brake cable.

NOTICE:


When removing the bolt, keep the nut from rotating.

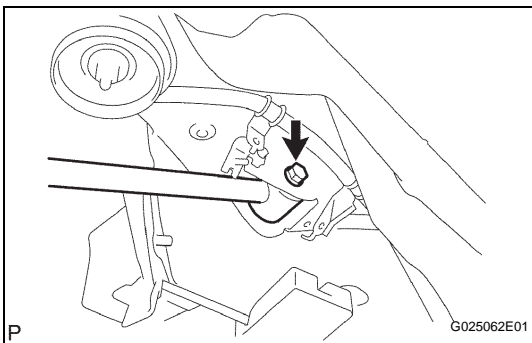

- (c) Remove the bolt and nut, and disconnect the strut rod (front side).

NOTICE:

When removing the bolt, keep the nut from rotating.

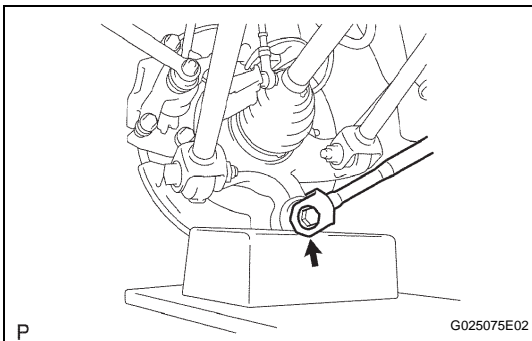

- (d) Remove the bolt, nut and strut rod from the rear axle carrier.

NOTICE:

When removing the bolt, keep the nut from rotating.