


FRONT SHOCK ABSORBER

COMPONENTS

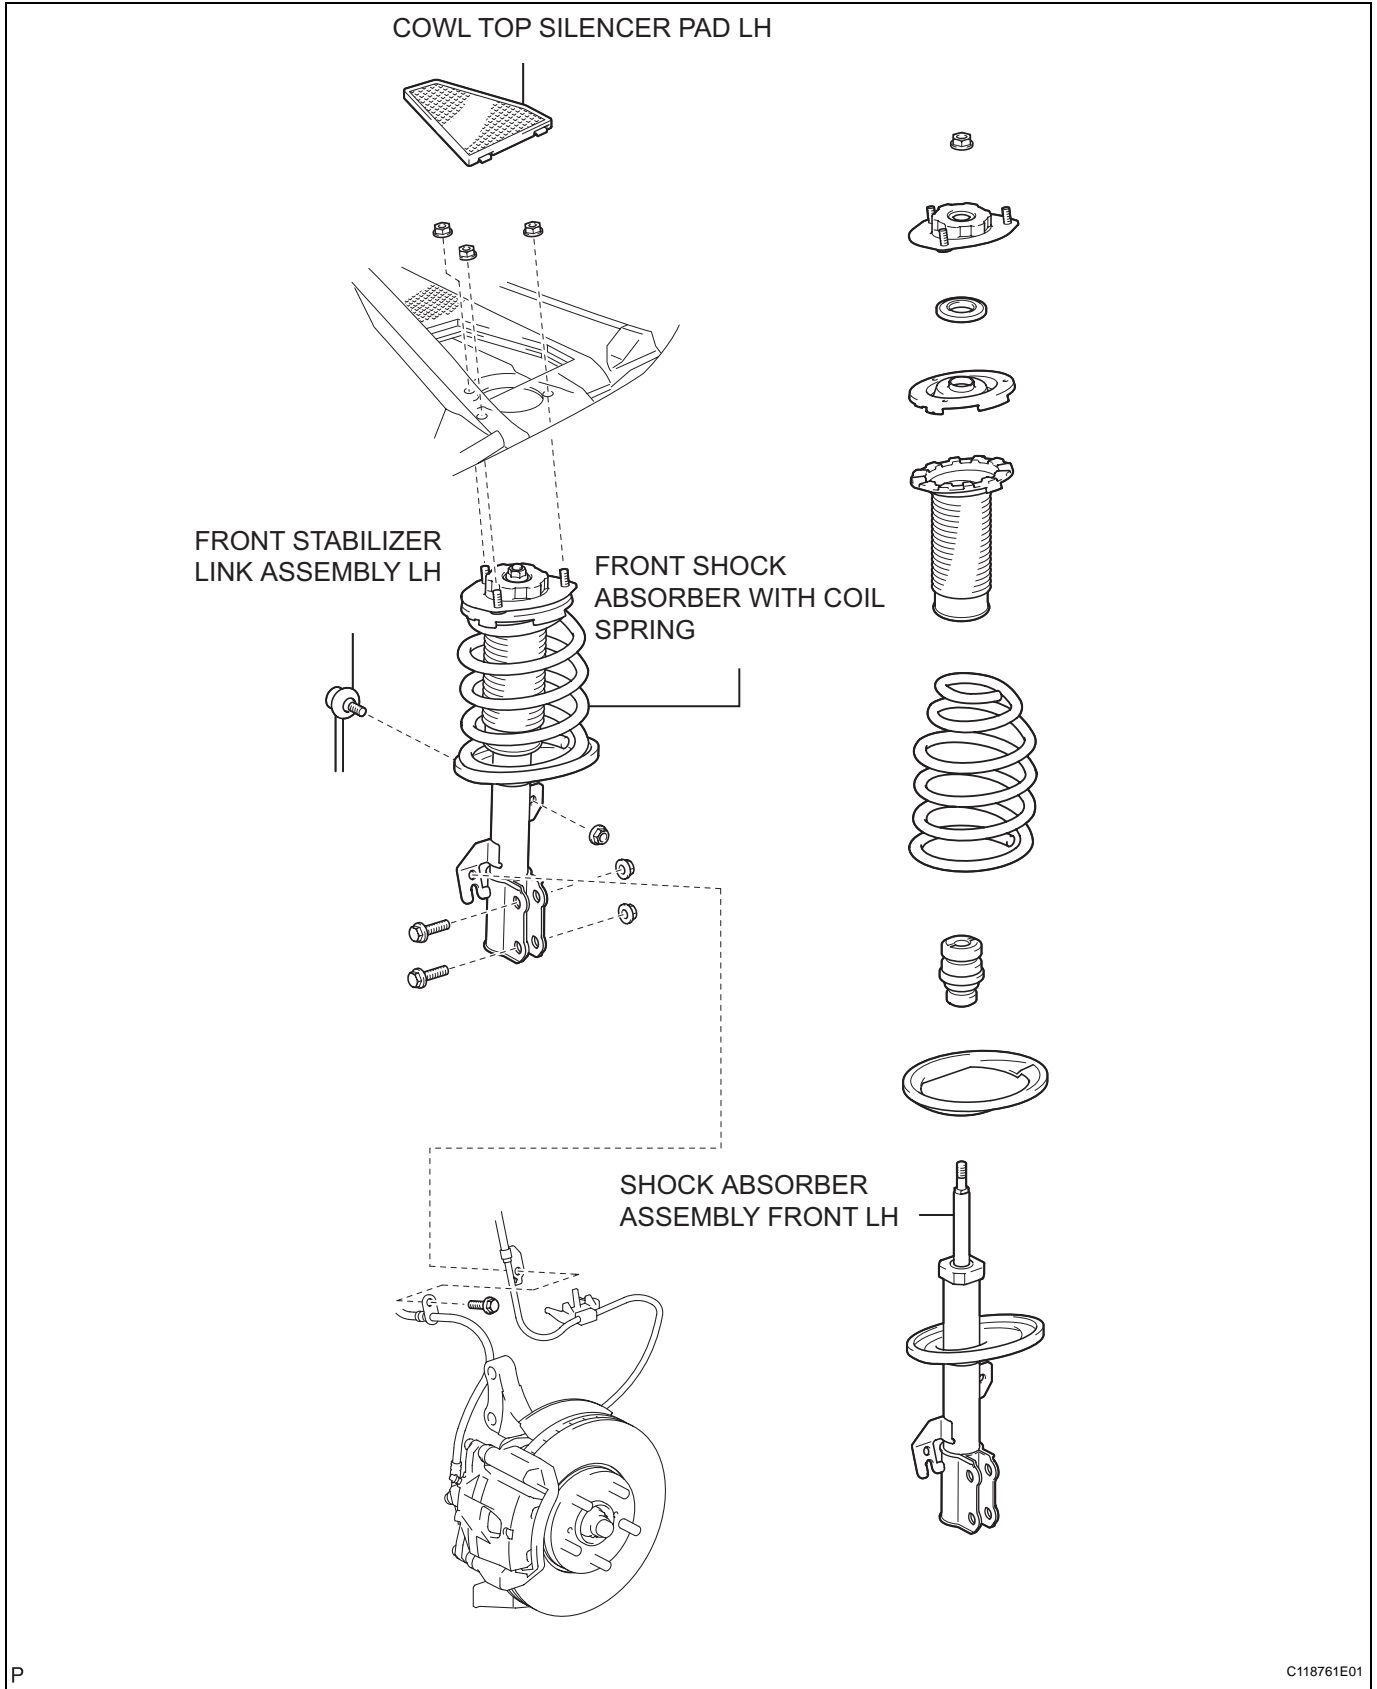

REMOVAL


1. REMOVE FRONT WHEEL
2. SEPARATE FRONT STABILIZER LINK ASSEMBLY LH

(a) Remove the nut and separate the front stabilizer link assembly LH from the shock absorber assembly front LH.

HINT:

If the ball joint turns together with the nut, use a hexagon (6 mm) wrench to hold the stud.

3. REMOVE COWL TOP SILENCER PAD LH

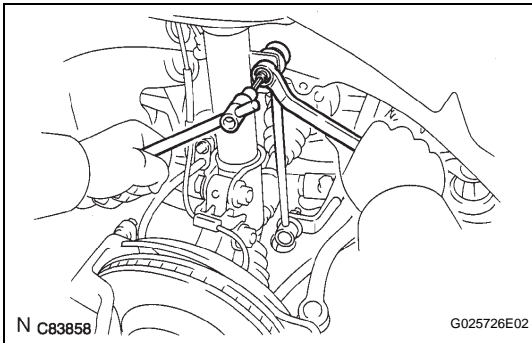


4. REMOVE FRONT SHOCK ABSORBER WITH COIL SPRING


(a) Loosen the lock nut.

NOTICE:

- Do not loosen and remove the lock nut except when removing the shock absorber assembly front LH with coil spring.
- Do not remove the lock nut.

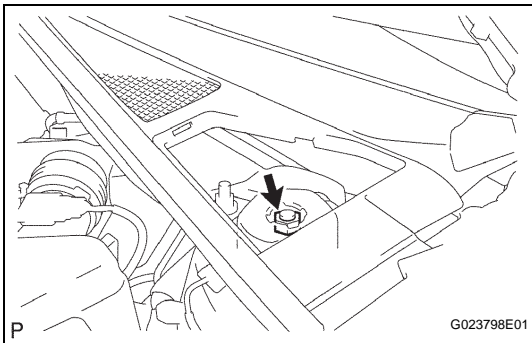

(b) Remove the bolt and disconnect the front flexible hose No. 1 and speed sensor front LH wire harness.

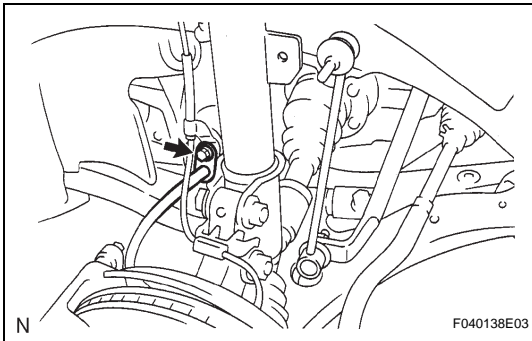

(c) Remove the 2 nuts and bolt on the lower side of front shock absorber with coil spring.

NOTICE:

When removing the bolts keep the bolt from rotating and loosen the nut.

