INSTALLATION

INSTALL HEIGHT CONTROL COMPRESSOR ASSEMBLY

(a) Coat the O-ring with MP grease, install the height control compressor assembly.


HINT:

When the height control compressor assembly is replaced with new one, it doesn't require a new Oring.



(a) Install the height control dryer assembly with a bolt onto the height control compressor assembly.


Torque: 6.4 N*m (65 kgf*cm, 57 in.*lbf)

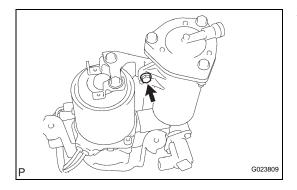

- Connect the height control tube No. 2 to the height control dryer assembly.
- (c) Lock the clip and holder.

HINT:


For the installation procedure of the (type 3) tube, refer to PRECAUTION of SUSPENSION CONTROL SYSTEM (See page SC-1).

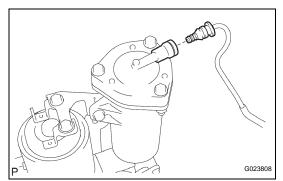

INSTALL REAR HEIGHT CONTROL COMPRESSOR 3. **BRACKET**

- (a) Install the 3 height control compressor bush No. 2 onto the rear height control compressor bracket.
- (b) Install the rear height control compressor bracket with the 3 bolts onto the height control compressor assembly.


Torque: 5.9 N*m (60 kgf*cm, 52 in.*lbf)

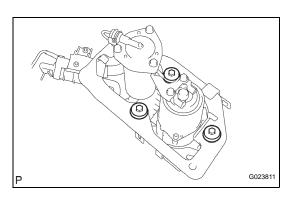


(c) Install the 3 clamps.

INSTALL HEIGHT CONTROL FILTER

- (a) Install the 2 hoses and 2 clips to the height control filter.
- (b) Install a clamp onto the height control filter.
- (c) Connect the height control filter onto the rear height control compressor bracket.

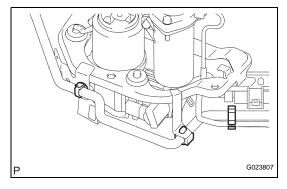




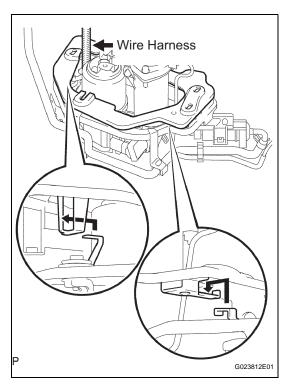


5. INSTALL REAR HEIGHT CONTROL COMPRESSOR BRACKET

(a) Passing the wire harness sub-assembly between the bracket and compressor, temporarily place the bracket as shown in the illustration.

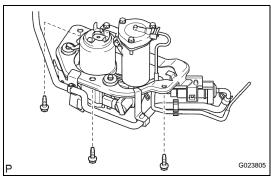


(b) Install the rear height control compressor bracket with the 3 bolts onto the height control compressor bracket.

Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)

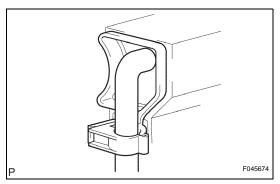


(c) Connect the hose to the cap grommet and clamp it.



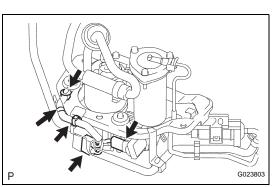

(d) Install the 3 clamps and the 2 connectors.

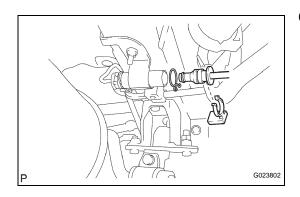

6. CONNECT HEIGHT CONTROL TUBE NO.2

- (a) Install a new O-ring onto the height control tube No. 2.
- (b) Coat the O-ring with MP grease.
- (c) Connect the height control tube No. 2 to the 2 way cap.
- (d) Lock the tube with a new clip and a new holder. HINT:

For the installation procedure of the (type 3) tube, refer to PRECAUTION of SUSPENSION CONTROL SYSTEM (See page SC-1).

7. INSPECT AIR LEAK

8. INSTALL HEIGHT CONTROL COMPRESSOR COVER

(a) Install the height control compressor cover with the 2 screws, the clip and the bolt.