


PNEUMATIC TANK WITH TUBE

COMPONENTS

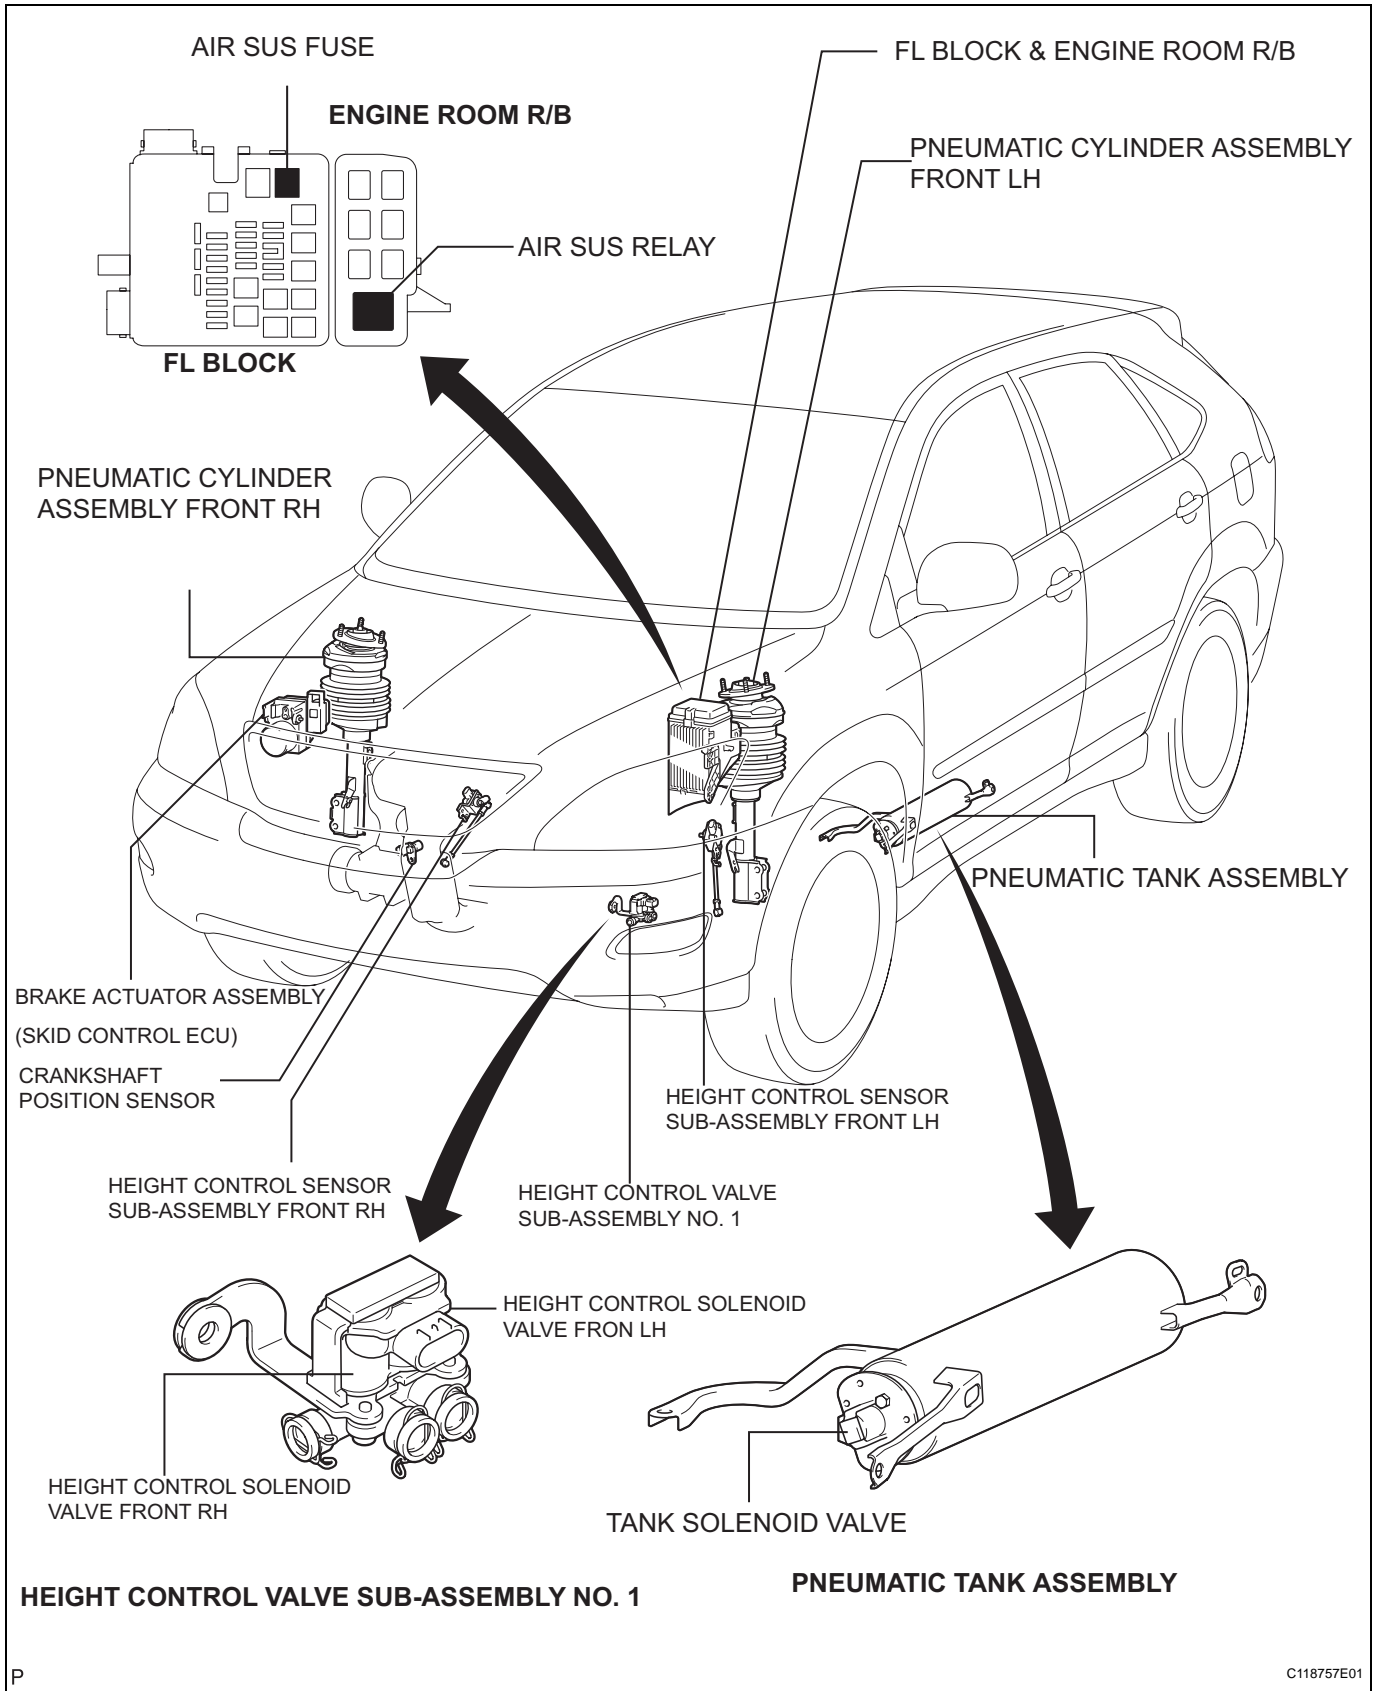

SC




REMOVAL

HINT:

Before replacement, press the height control OFF switch to stop the vehicle height control operation.

1. REMOVE PNEUMATIC W/TUBE TANK ASSEMBLY

- (a) Jack or lift the vehicle up.
- (b) Remove the 4 clamps.
- (c) Disconnect the height control tube No.1 and the wire harness from the pneumatic w/ tube tank assembly.
- (d) Remove the 3 clips and height control tank cover.

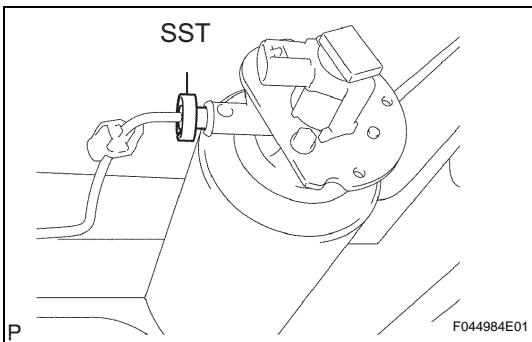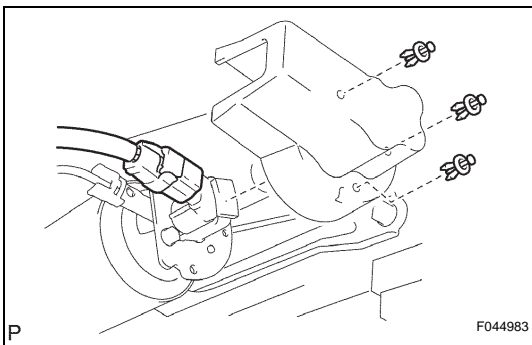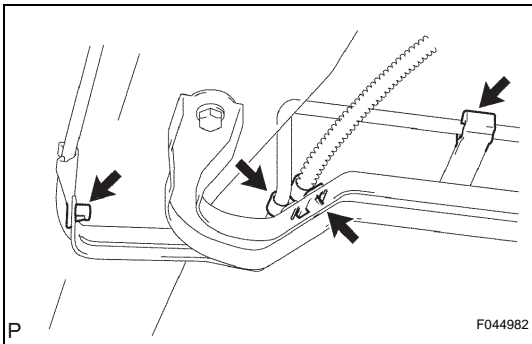

- (e) Disconnect the connector.

- (f) Using SST, disconnect the tube from the pneumatic w/ tube tank assembly.

SST 09730-00010

HINT:

For the removal procedure of the (type 2) tube, refer to PRECAUTION of SUSPENSION CONTROL SYSTEM (See page [SC-1](#)).

- (g) Remove the 3 bolts and the pneumatic w/ tube tank assembly.

