
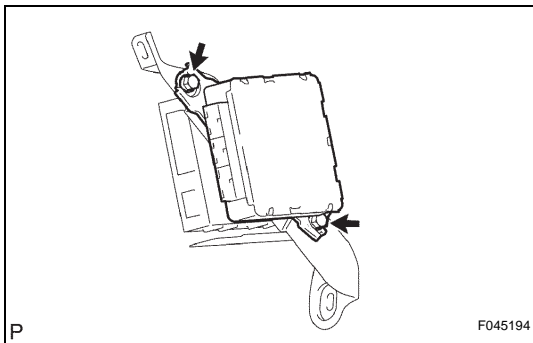


## REMOVAL

1. REMOVE FRONT DOOR SCUFF PLATE RH
2. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH
3. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO.2
4. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY
5. REMOVE ECM
6. REMOVE AIRCONDITIONER AMPLIFIER ASSEMBLY
7. REMOVE SUSPENSION CONTROL ECU
  - (a) Disconnect the suspension control ECU connector.
  - (b) Remove the 2 bolts and the suspension control ECU from the bracket.

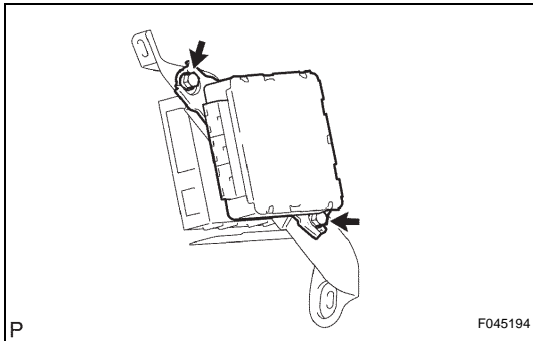

## INSTALLATION

1. INSTALL SUSPENSION CONTROL ECU
  - (a) Install the suspension control ECU with the 2 bolts onto the bracket.  
**Torque: 7.8 N\*m (80 kgf\*cm, 69 in.\*lbf)**
  - (b) Connect the suspension control ECU connector.
2. INSTALL AIRCONDITIONER AMPLIFIER ASSEMBLY
3. INSTALL ECM
4. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY
5. INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO.2
6. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH
7. INSTALL FRONT DOOR SCUFF PLATE RH