



ENGINE HOOD COURTESY SWITCH

INSPECTION

1. INSPECT ENGINE HOOD COURTESY SWITCH

- (a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Switch Position	Specified Condition
1 - 2	Pushed (OFF)	10 k Ω or higher
	Free (ON)	Below 1 Ω

If the result is not as specified, replace the hood lock assembly.