


PARTS LOCATION

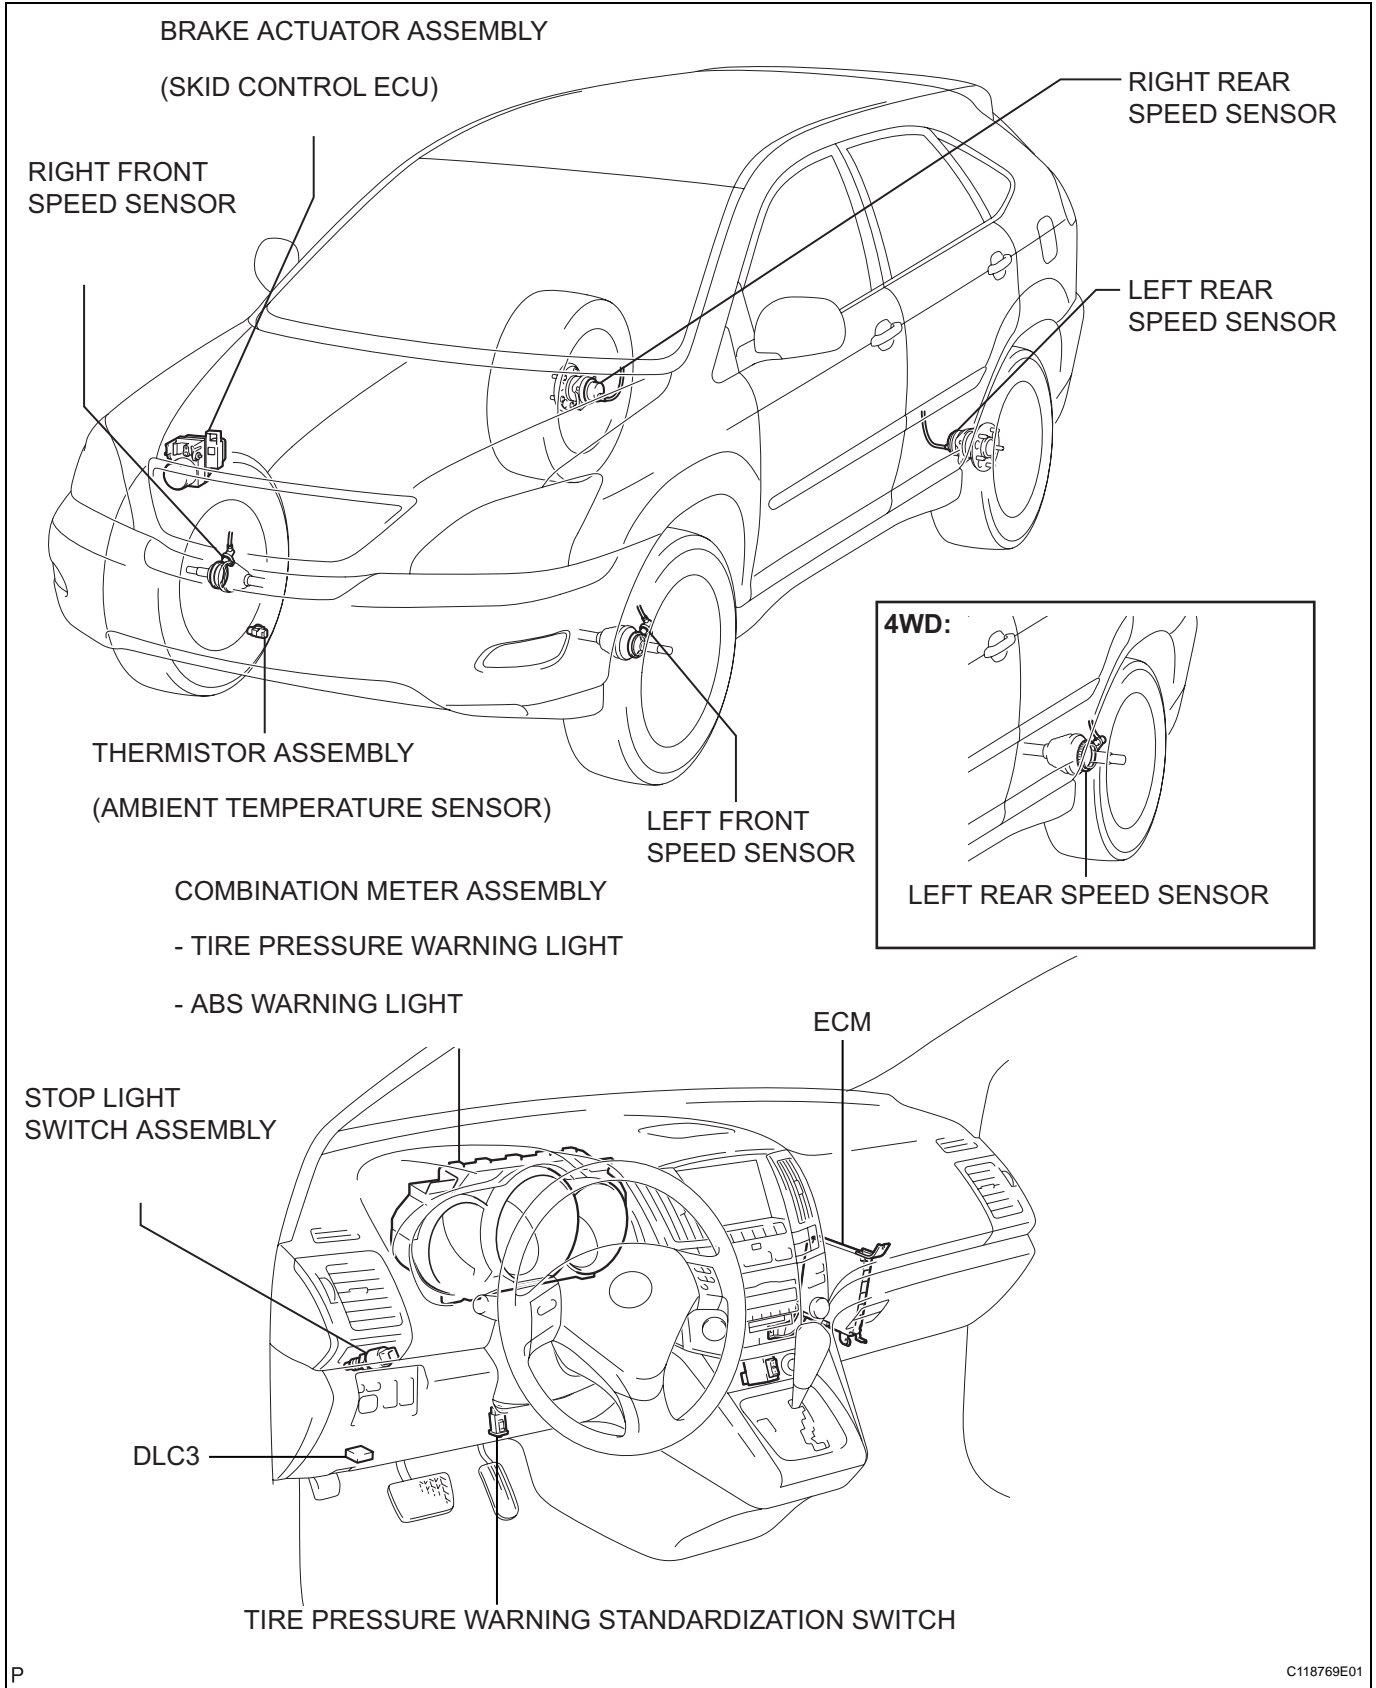

SYSTEM DESCRIPTION

1. TIRE PRESSURE WARNING SYSTEM DESCRIPTION

- (a) The tire pressure warning system informs the driver if it detects a low tire pressure. When the tire pressure warning system detects low tire pressure, which affects safe driving in any of the 4 wheels, the tire pressure warning light comes on.

HINT:

When the ignition switch is OFF, the tire pressure warning light goes off. However, when the ignition switch is turned ON again, and the vehicle is driven at more than 30 km/h (19 mph), the tire pressure warning light comes on again.

2. TIRE PRESSURE WARNING DISPLAY FUNCTION

- (a) The tire pressure warning light comes on, according to the condition of the tire pressure warning system, as shown in the table on the PRE-CHECK (See page [TW-8](#)).

