


## Power Window Master Switch Power Source Circuit


### DESCRIPTION

This circuit supplies power to operate the multiplex network master switch.

### WIRING DIAGRAM

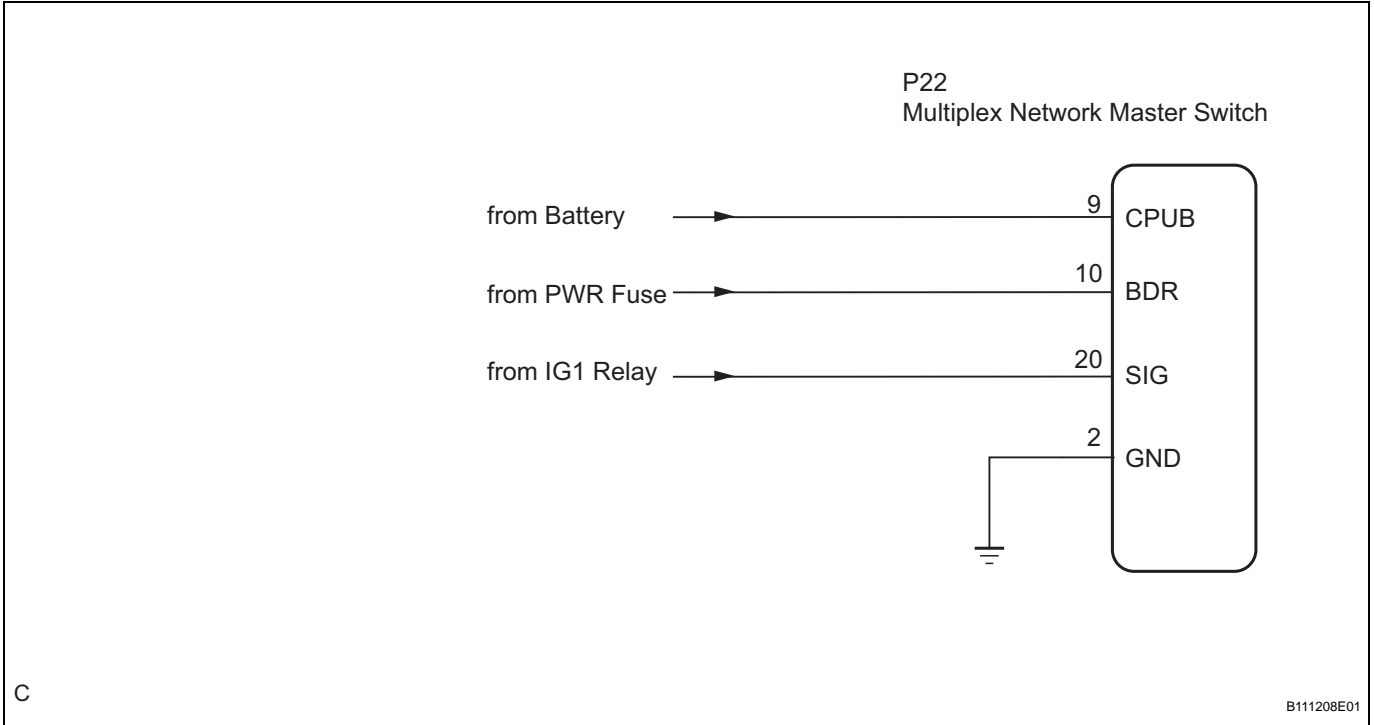

### 1 CHECK WIRE HARNESS (MULTIPLEX NETWORK MASTER SWITCH - BATTERY AND BODY GROUND)

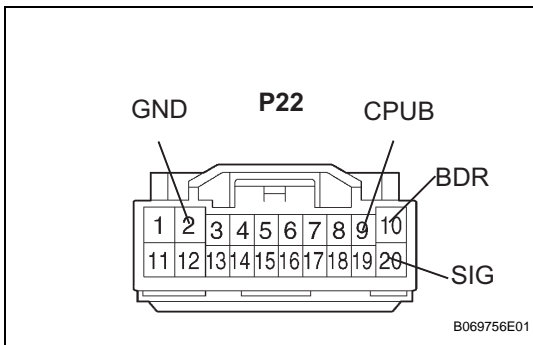

- Disconnect the P22 connector.
- Measure the voltage and resistance according to the value(s) in the table below.

#### Standard voltage

Tester Connection	Condition	Specified Condition
P22-9 (CPUB) - Body ground	Always	10 to 14 V
P22-10 (BDR) - Body ground	Always	10 to 14 V
P22-20 (SIG) - Body ground	Ignition switch ON	10 to 14 V

#### Standard resistance

Tester Connection	Condition	Specified Condition
P22-2 (GND) - Body ground	Always	Below 1 Ω

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE