

# WIPER AND WASHER SYSTEM

## PRECAUTION

### 1. PRECAUTION FOR DISCONNECTING THE BATTERY CABLE

#### NOTICE:

When disconnecting the cable from the negative (-) battery terminal, initialize the following systems after the cable is reconnected.

System Name	See procedure
Lighting System (Adaptive Front-Lighting System)	<a href="#">LI-17</a>
Sliding Roof Control System	<a href="#">RF-4</a> and <a href="#">RF-22</a>
Power Window Control System	<a href="#">WS-12</a>
Power Back Door System	<a href="#">ED-33</a>

### 2. PRECAUTION OF WASHER NOZZLE ADJUSTMENT

- (a) Do not clean or adjust the washer nozzle with a safety pin, etc. because;
- (1) the washer nozzle tip is made of resin and could be damaged.
  - (2) adjustment is not necessary because the washer nozzle is spray type.
- (b) In case the washer nozzle is clogged with wax, etc., remove it and clean the nozzle hole with a soft resin brush, etc.

# PARTS LOCATION

## FRONT WIPER MOTOR ASSEMBLY

FRONT WINDSHIELD WIPER MOTOR ASSEMBLY

WASHER NOZZLE

- FRONT WIPER ARM AND BLADE ASSEMBLY

RAIN SENSOR

- FRONT WIPER MOTOR

- FRONT WIPER LINK ASSEMBLY

WASHER FLUID TANK ASSEMBLY

- FRONT WASHER MOTOR AND PUMP ASSEMBLY

FUSIBLE LINK BLOCK

- ALT FUSE

- ECU-B FUSE

- INP-J/B FUSE

- H-LP CLN FUSE

- REAR WASHER MOTOR ASSEMBLY

- WASHER FLUID LEVEL SWITCH

- HEADLIGHT CLEANER CONTROL RELAY


HEADLIGHT WASHER ACTUATOR


REAR WASHER NOZZLE

REAR WIPER ARM AND BLADE ASSEMBLY

- REAR WIPER MOTOR

- REAR WIPER ARM AND BLADE

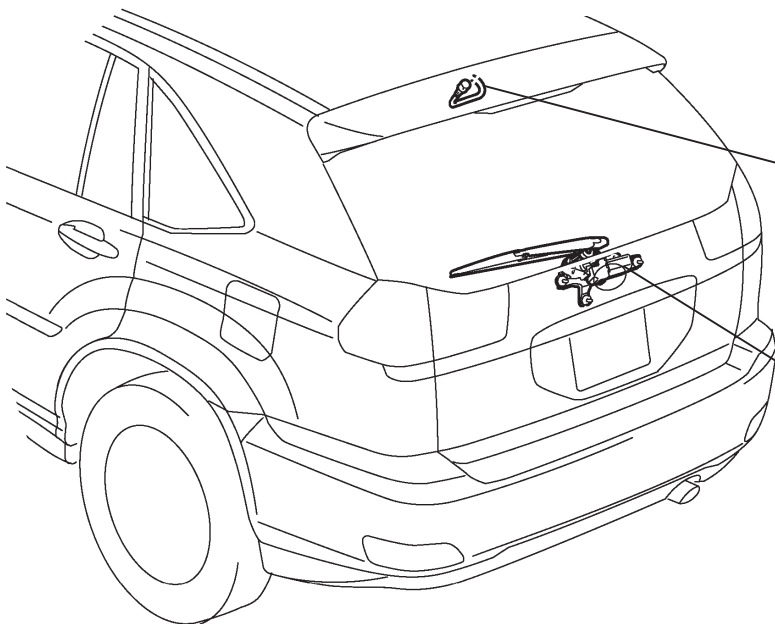

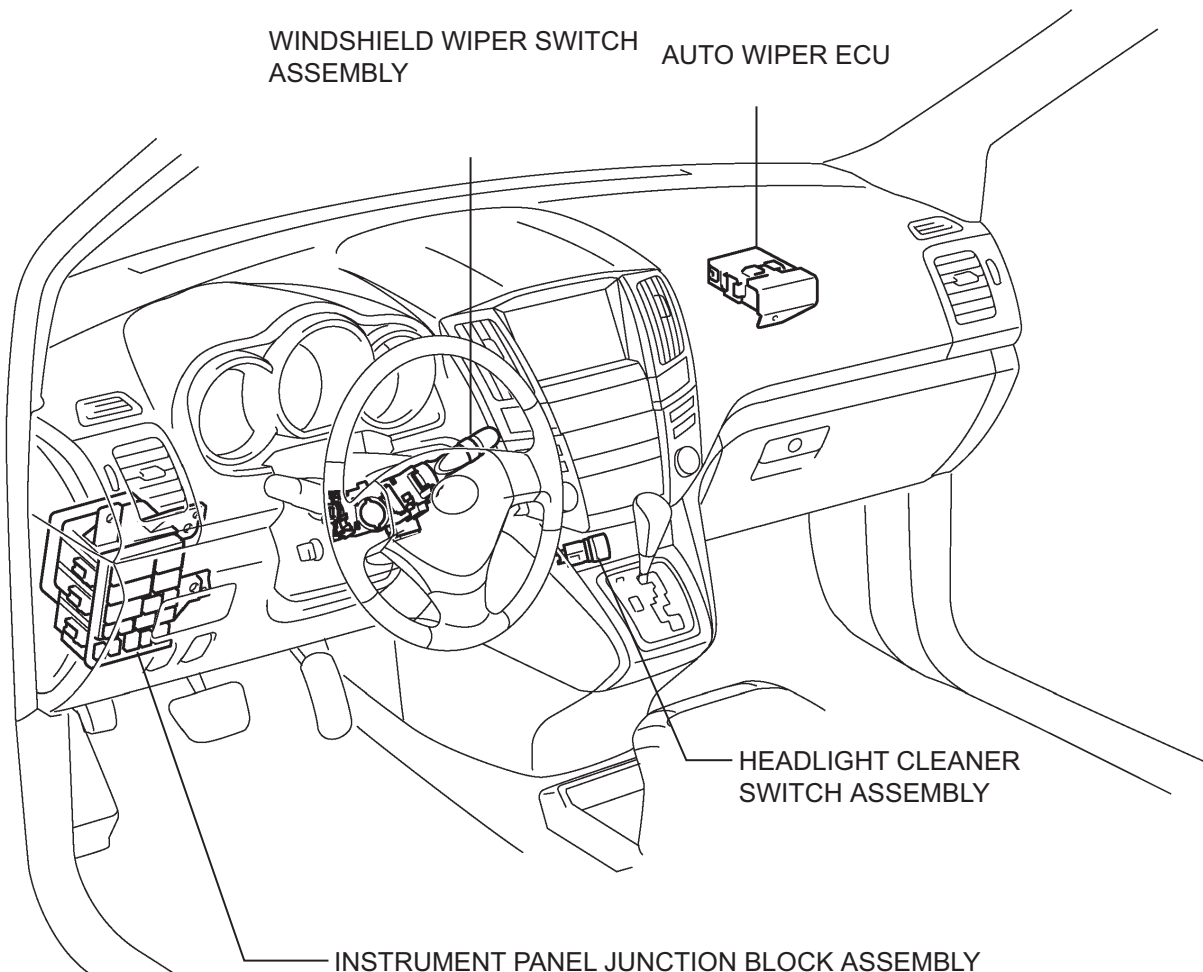

WINDSHIELD WIPER SWITCH  
ASSEMBLY

AUTO WIPER ECU

HEADLIGHT CLEANER  
SWITCH ASSEMBLY

INSTRUMENT PANEL JUNCTION BLOCK ASSEMBLY

- MULTIPLEX NETWORK BODY ECU
- AM1-FUSE
- ECU-IG FUSE
- ECU-IG2 FUSE
- WIP FUSE
- WSH FUSE
- IG1 RELAY

